


Trainings ▾

Remove

⚠ CAUTION ⚠

Record all programmable parameters, features, and calibration information from the old ECM before disconnecting the harness connectors. This information will be needed to program the new ECM.

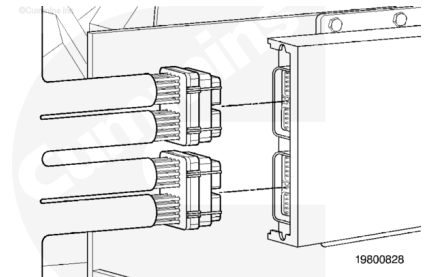


Reference INSITE™ electronic service tool for CENSE™ User's Manual under “Save as a Template” for information on how to electronically save and restore ECM parameters.

Disconnect the 40-pin A and B engine control module (ECM) connectors.

Note : Before removing the capscrews, note the positions of the ring terminals under the capscrews, and install them at the same positions from which they were removed.

Remove the six capscrews that secure the ECM to the mounting plate.


Remove the ECM from the mounting plate.

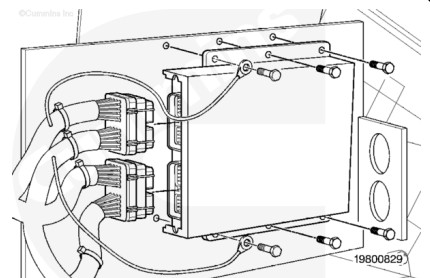

Install

⚠ CAUTION ⚠


Do not blow compressed air into the ECM ports or connectors. Compressed air can contain moisture due to condensation.

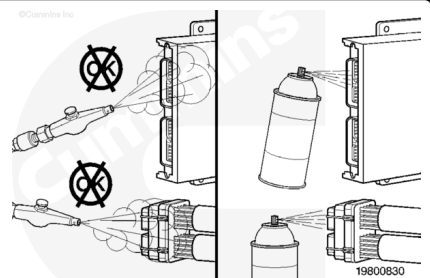

Use quick-dry electrical contact cleaner, Part Number 3824510, to remove all dirt and moisture from the ECM connector ports and the harness connectors.

⚠ CAUTION ⚠

Make sure there is no grease or dirt between the ECM and the mounting plate.

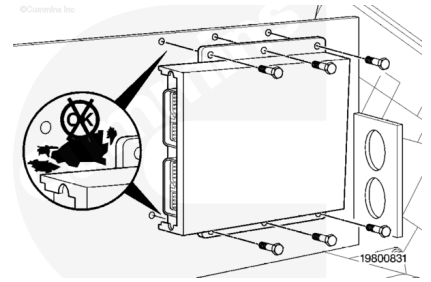


Note : Install the ring terminals under the capscrews at the same positions from which they were removed.

Install the new ECM. Tighten the six capscrews.

Torque Value: 8 n•m [72 in-lb]

⚠ CAUTION ⚠


Use only Cummins, Inc.,-recommended lubricant DS-ES, Part No. 3822934. Other lubricants, such as lubricating oil or grease, in the connector can cause ECM damage, poor engine performance, or premature connector wear.

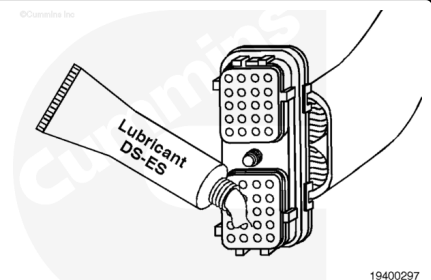

Apply a thin coating of lubricant to the face of the 40-pin Deutsch™ connectors.

Spread the lubricant across the face of the 40-pin Deutsch™ connectors. Make sure that the lubricant gets into every pin cavity of the connector.


Lubricant **must not** be visible on the surface of the nosepiece.

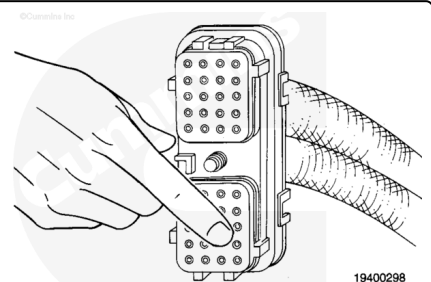

Insert the 40-pin Deutsch™ connectors into the ECM receptacles. Carefully align the connector guide slots in the ECM, and insert the ECM and the connector.

Carefully align and start the connector mounting capscrews by hand. Use an inch-pound torque wrench, Part Number 3376592, to tighten the capscrews.

Use an inch-pound torque wrench, Part Number 3376592, with 4 mm [5/32 in] hex head adapter to tighten the connector jackscrew.

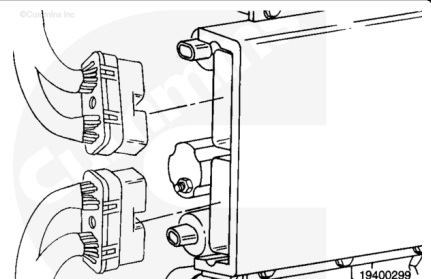

Torque Value: 2.8 n·m [25 in-lb]

Note : Do not over-torque as connector damage can occur.

Note : When an ECM is replaced, the new ECM must be calibrated. Use INSITE™ electronic service tool for CENSE™ with bench top harness, Part Number 3163064, or data link cable, Part Number 3885817, to calibrate the ECM.

Last Modified: 17-Apr-2014
