


Trainings ▾

Remove

Lift up on the locking tab and pull the electrical connectors apart.

Remove the sensor from the engine.

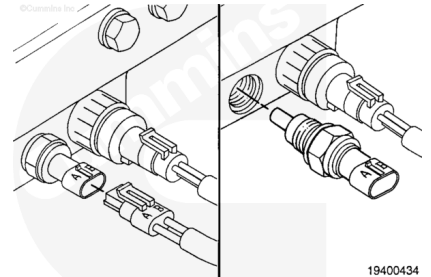


Install


Make sure the new sensor has an o-ring. Lubricate the o-ring.

Install the new sensor into the engine. Tighten the sensor.

Torque Value: 14 n•m [10 ft-lb]

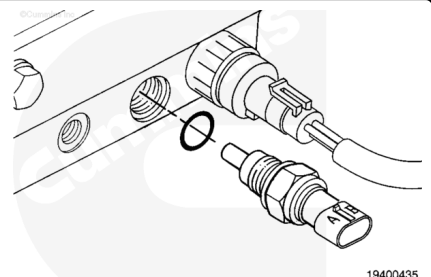


Push the connectors together until they lock.

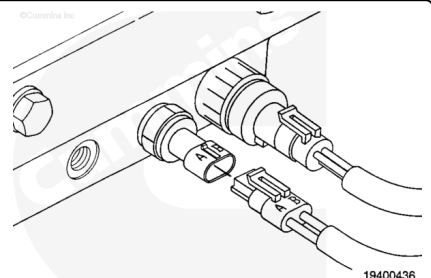


Resistance Check

Lift up on the locking tab, and pull the electrical connectors apart.

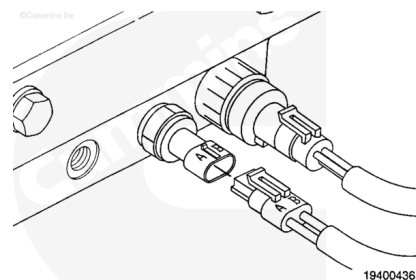

Use a multimeter to measure the resistance between the two pins of the intake air temperature sensor. The resistance **must** fall within the acceptable resistance range, according to the below table. If the resistance is **not** correct, replace the sensor. If the resistance is correct, the sensor **must** still be checked for a short circuit to ground.

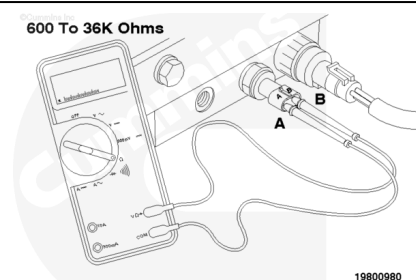

Temperature		Acceptable Resistance Range
C°	F°	(ohms)
0	32	30k to 36k
25	77	9k to 11k
50	122	3k to 4k
75	167	1350 to 1500
100	212	600 to 675

Check for Short Circuit to Ground

Measure the resistance from a pin of the intake air temperature sensor to the engine block ground.

The multimeter **must** show an open circuit (more than 100k ohms).

If the circuit is **not** open, replace the sensor.

