

Fault Code: Multiple D


Multiple Fault Code D

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: Multiple PID(P): SPN: FMI: Lamp: SRT: 00-517	One of the two sensor power supply or sensor return wires is shorted to ground, or has an open circuit.	Multiple sensor Fault Codes 129, 137, 161, 164, and 2155 simultaneously occur.

©Cummins Inc

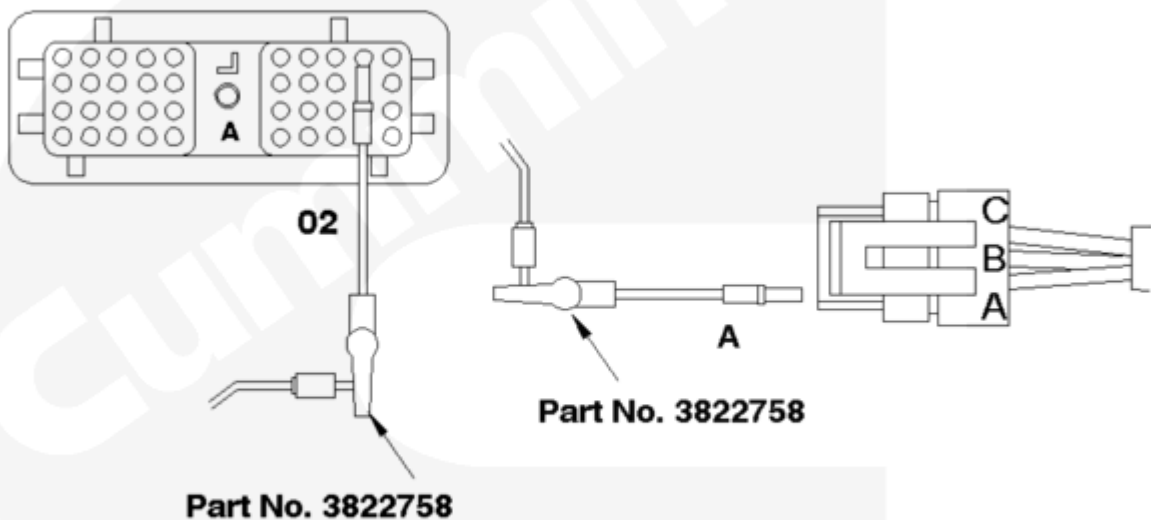

19800629

Multiple Fault Code D

Circuit Description

The electronic control module (ECM) supplies sensors on the CENSE™ harness with +5 VDC from either pin 01 or pin 02 on the ECM A connector. The ECM has common returns for all pressure sensors on pin 33 of the ECM B connector. A failure on this circuit will cause multiple fault

codes.

Component Location

Consult the engine diagrams. Circuits that have an extension/sensor harness in addition to the main harness are to be tested and inspected as part of the “main harness.”

Shoptalk

Look for open circuits, short circuits, or shorts to ground in the supply or return wires, or a defective ECM power supply.

A failed pressure sensor can cause multiple active fault codes to go inactive once the engine has been started.

Refer to Troubleshooting Fault Code t05-mfc04 (</qs3/pubsys2/xml/en/procedures/81/81-t05-mfc04.html>)

Last Modified: 17-Mar-2011
