

## Trainings ▾

### General Information

The engine oil pressure sensor is located on the intake side of the engine, near the flywheel housing.

Use the following procedure for a detailed component location view. Refer to Procedure 100-002 in Section E.

(/qs3/pubsys2/xml/en/procedures/35/35-100-002-tr.html)



### Preparatory Steps

#### **⚠ WARNING ⚠**

**Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.**



Disconnect the batteries. Refer to Procedure 013-009 in Section 13. (/qs3/pubsys2/xml/en/procedures/99/99-013-009.html)


Disconnect the batteries. Refer to the original equipment manufacturer (OEM) service manual.

Clean the area around the engine oil pressure sensor.

### Remove

Disconnect the engine oil pressure sensor from the engine harness.


Remove the engine oil pressure sensor.

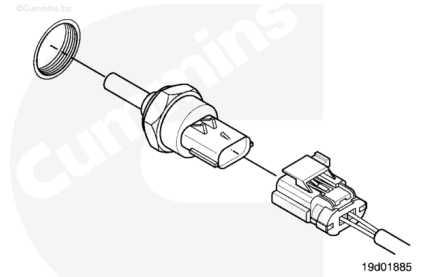

## Clean and Inspect for Reuse

Inspect the engine harness connector and the engine oil pressure sensor for the following:


- Cracked or broken connector shell
- Missing or damaged connector seals
- Dirt, debris, or moisture in or on the connector pins
- Corroded, bent, broken, pushed back, or expanded pins.

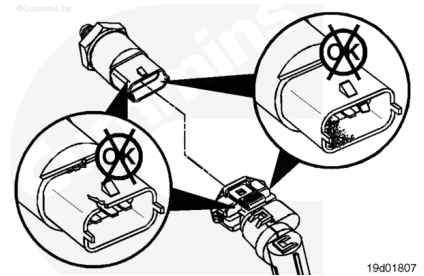

Repair or replace the engine harness connector as needed.

Inspect the engine oil pressure sensor for the following:

- Damaged seal surface in the rail
- Damaged seal surface on the sensor
- Damaged sensor hex surfaces
- Corrosion on the sensor mounting threads.

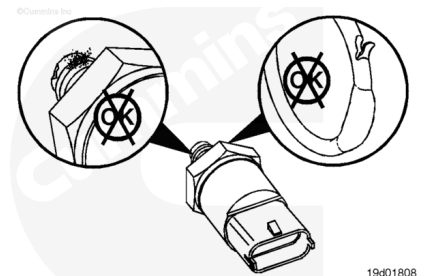

Replace the engine oil pressure sensor if damage is found.


## Install

Check to make sure the sensor has an o-ring installed.

Install the engine oil pressure sensor.

**Torque Value:** 14 n•m [ 124 in-lb ]

Connect the engine oil pressure sensor to the engine harness.

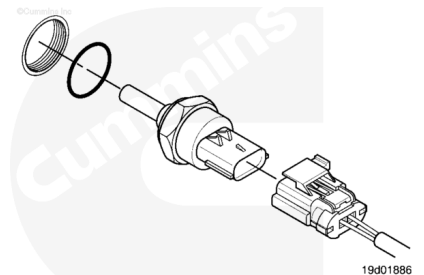

## Finishing Steps

### **⚠ WARNING ⚠**

**Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.**



Connect the batteries. Refer to Procedure 013-009 in Section 13. (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>)

Operate the engine and check for leaks.