

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools


- Cummins® electronic service tool or equivalent

Additional Service Items

- No additional service items required.


General Information

The turbocharger compressor intake air temperature sensor is located on the air intake section of the turbocharger.

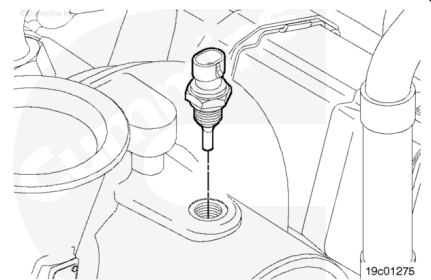

Initial Check

Monitor the turbocharger compressor intake air temperature sensor. Use the recommended Cummins® electronic service tool or equivalent.

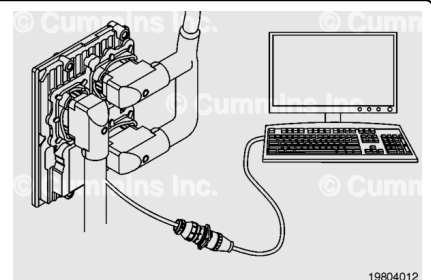

Preparatory Steps


⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries. See equipment manufacturer service information.

Remove

Lift up on the locking tab. Pull the electrical connectors apart.

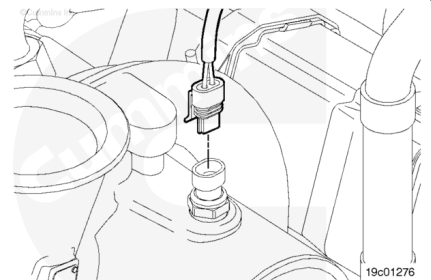

Remove the sensor.

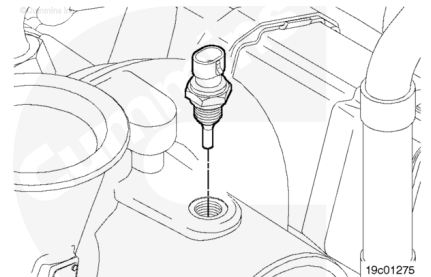


Install

Make sure the new sensor has an o-ring installed.


Lubricate the o-ring. Use clean engine oil.

Install the new sensor into the engine. Tighten the sensor.

Torque Value: 23 n•m [204 in-lb]

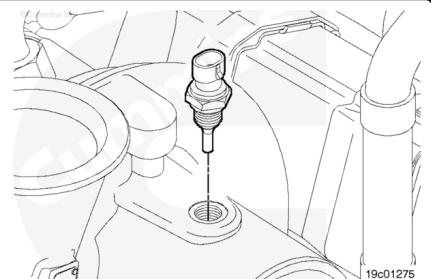

Push the connectors together until they lock.

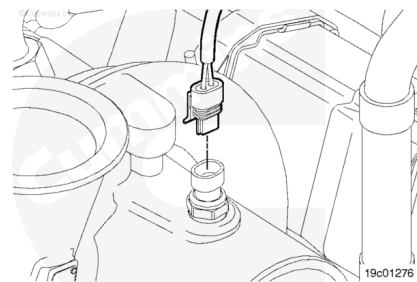

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect batteries. See equipment manufacturer service information.
- Start the engine. Verify the sensor is working properly. Use the electronic service tool.