


Trainings ▾

Maintenance Check

To rotate the engine crankshaft **clockwise**, push in on the engine barring device and rotate **counterclockwise**.


Rotate the crankshaft through two complete revolutions.

If the engine does **not** turn freely, the equipment can have a malfunction. Refer to the manufacturer's instructions. The engine can have internal problems.

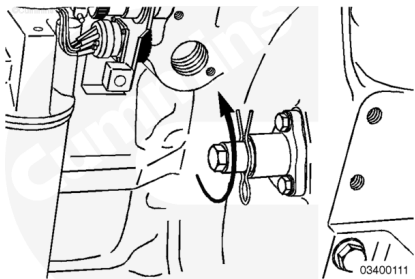

⚠ CAUTION ⚠

Extreme care must be used in prying against the viscous damper. Sharp pry bars can damage the damper casing, resulting in a leak of the viscous fluid and ultimate failure of the damper.

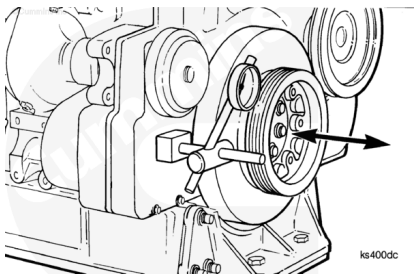

Measure the crankshaft end clearance with a dial indicator.

Crankshaft End Clearance		
New Minimum	New Maximum	Worn Limit
0.14 mm	0.32 mm	0.60 mm
[0.006 in]	[0.013 in]	[0.024 in]

The check can be made by attaching a dial indicator resting against the damper or pulley while prying against the front cover and inner part of the pulley or damper. End clearance **must** be in specification with the engine mounted in the unit and assembled to the transmission or converter.

If the clearance is **not** within specifications, contact a local Cummins® Authorized Repair Location.

