

Trainings ▾

Preparatory Steps

- Remove the fan drive belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/89/89-008-002.html>)




Remove

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

⚠ CAUTION ⚠

Do not pry or hammer on the vibration damper or damage can occur.

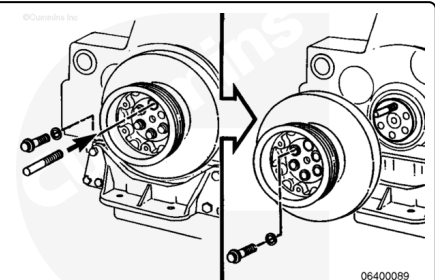

Remove one capscrew and install a M22 x 1.5 guide stud.

Remove the remaining capscrews, damper, and pulley.


Remove the M22 x 1.5 guide stud.

Disassemble

Remove the twelve crankshaft pulley mounting capscrews.

Remove the crankshaft pulley from the vibration damper.


Do **not** use a hammer or a screwdriver to remove the viscous damper. These tools can damage the damper.

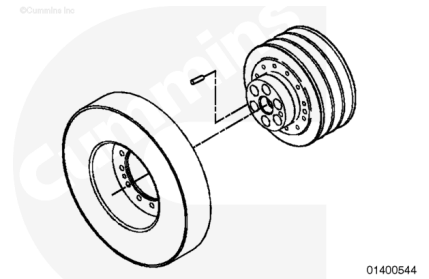

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

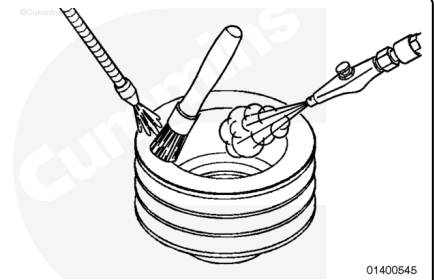

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent or steam to clean the crankshaft pulley.


Dry with compressed air.

Inspect the pulley for cracks, excessive wear in the belt grooves, or other damage.

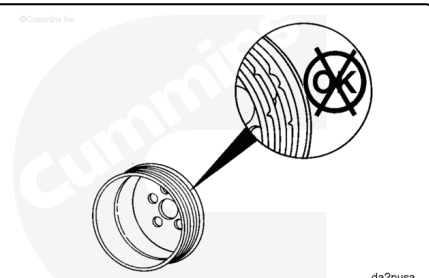

⚠ CAUTION ⚠


The mounting pilots and surfaces control the center and spacing of the pulleys. Do not repair the part by machining. It can cause an out-of-balance condition or a crankshaft failure.

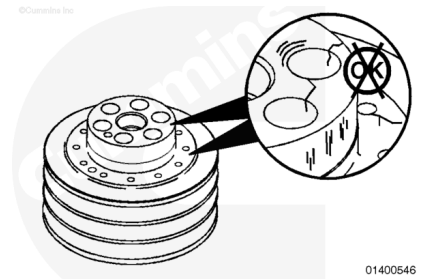

Check all mounting pilots and surfaces for damage from fretting. If it is **not** possible to remove the damage with a 240-grit abrasive cloth, the part **must** be replaced.

Measure the inside diameter.

Pulley Inside Diameter		
mm		in
36.000	MIN	4.417
36.025	MAX	4.418

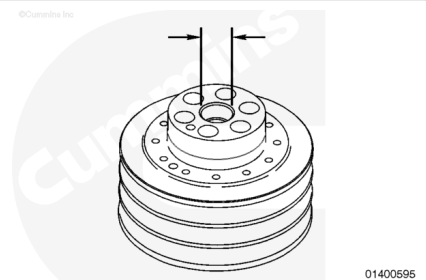

Assemble


Make sure the mating surfaces of the vibration damper and the crankshaft pulley are clean, dry, and free of burrs.

Align the dowel pin and install the crankshaft pulley onto the vibration damper.

Install the twelve capscrews that fasten the crankshaft pulley to the vibration damper.

Tighten the capscrews. Use the following procedure for crankshaft pulley mounting capscrew torque values. Refer to Procedure 001-052 in Section 1.

(/qs3/pubsys2/xml/en/procedures/89/89-001-052.html)

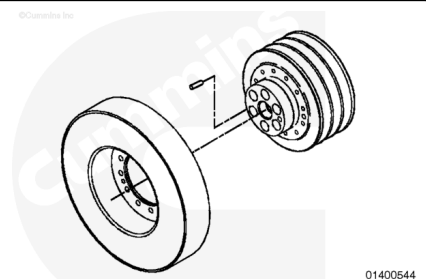

Install

Make sure the mounting surfaces of the crankshaft and the crankshaft pulley and vibration damper assembly are clean, dry, and free of burrs.

Install a M22 x 1.5 guide stud into the crankshaft.

Align the dowel pin and install the crankshaft pulley and vibration damper assembly on the crankshaft.


Use clean 15W-40 oil to lubricate the capscrew threads.

Install five of the six capscrews.

Remove the M22 x 1.5 guide stud and install the sixth capscrew.

Tighten the capscrews. Use the following procedure for crankshaft pulley mounting capscrew torque values. Refer to Procedure 001-052 in Section 1.

(/qs3/pubsys2/xml/en/procedures/89/89-001-052.html)

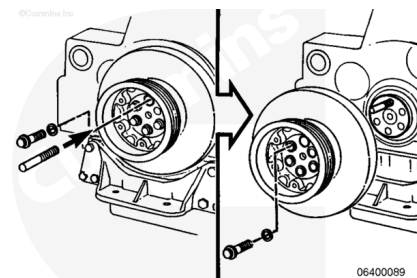

Finishing Steps

- Install and adjust the fan drive belt. Refer to Procedure 008-002 in Section 8.
(/qs3/pubsys2/xml/en/procedures/89/89-008-002.html)

