

Trainings ▾

Preparatory Steps


- Remove the flywheel housing and all related components. Refer to Procedure 016-006 in Section 16. (</qs3/pubsys2/xml/en/procedures/89/89-016-006.html>)
- Remove the camshaft gear. Refer to Procedure 001-008 in Section 1. (</qs3/pubsys2/xml/en/procedures/89/89-001-008.html>)



Inspect for Reuse

Inspect the thrust bearing for damage. Measure the thickness.

Camshaft Thrust Bearing Thickness		
mm		in
3.20	MIN	0.126
5.00	MAX	0.197

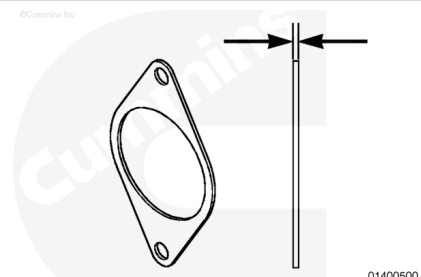

Finishing Steps

- Install the camshaft gear. Refer to Procedure 001-008 in Section 1. (</qs3/pubsys2/xml/en/procedures/89/89-001-008.html>)
- Measure the gear train backlash. Refer to Procedure 001-055 in Section 1. (</qs3/pubsys2/xml/en/procedures/89/89-001-055.html>)
- Install the flywheel housing and all related components. Refer to Procedure 016-006 in Section 16. (</qs3/pubsys2/xml/en/procedures/89/89-016-006.html>)



Last Modified: 07-Jan-2011
