


Trainings ▾

Remove

Do **not** damage hoses when removing.

Loosen the hose clamps connecting the hose assembly to the crankcase breather and remove the hose.


Remove the two capscrews connecting the crankcase breather assembly to the cam follower cover.

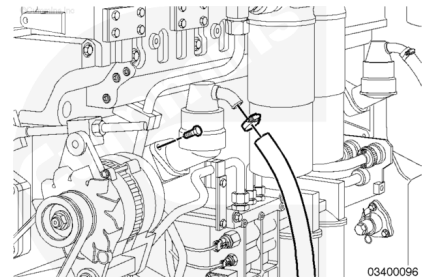

Clean

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

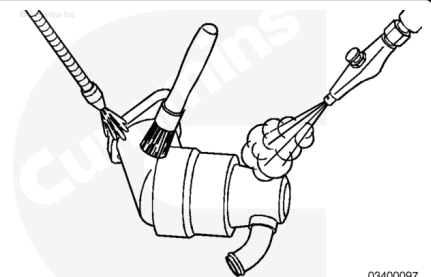

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ WARNING ⚠


When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

Soak the breather in solvent or clean with steam.

Dry the breather assembly with compressed air.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

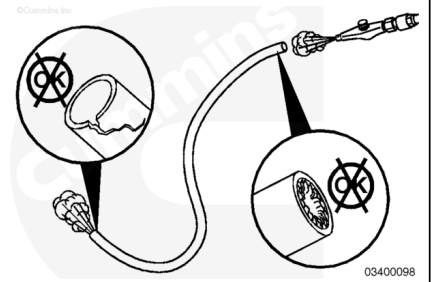


Inspect hoses for cracks or other damage. Replace if necessary.

Use compressed air to blow through the hose.

Replace the hose if it has obstructions or sludge buildup.

Install

Place the o-ring into the breather o-ring groove.

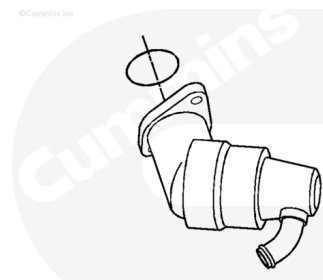

Install the breather onto cam follower cover with two capscrews.

Tighten the capscrews.

Torque Value: 66 n•m [48 ft-lb]

Install the hose assembly and clamp the hose onto the breather assembly.

Tighten the hose clamp.

Torque Value: 5 n•m [44 in-lb]

