


Trainings ▾

Remove

Remove the engine-to-fuel tank fuel drain hose from the engine.

Remove the steel fuel drain line connecting the dual intake manifolds.

Note : Power generation engines use a one piece intake manifold and do not have this steel line.

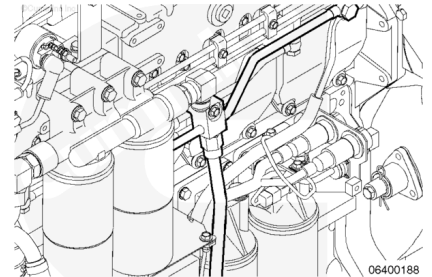


Clean and Inspect for Reuse


Inspect the inside of the engine-to-fuel tank fuel drain hose.

- The inner lining of the hose can separate from the center hose section.
- A separation of the inner lining can cause a restriction in the fuel flow.

Inspect for any pinches in the hose that would obstruct the flow.

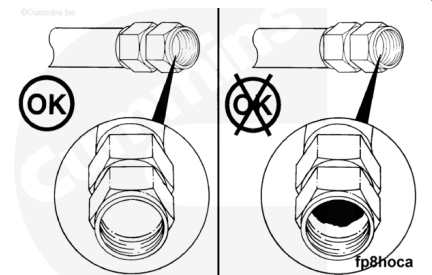

Make sure the engine-to-fuel tank hose and the steel fuel manifold line are free of pinches or loops that would obstruct the flow.

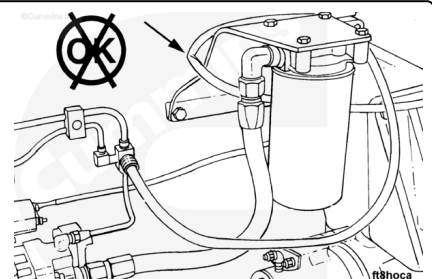


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean and inspect the steel fuel manifold drain line.

Use compressed air to flush the line and remove any loose dirt or particles.

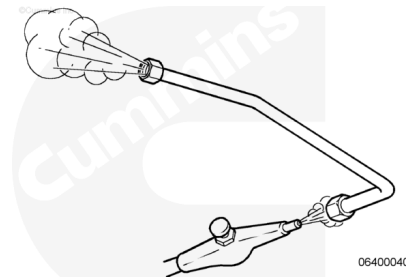

Install

Install and tighten the steel fuel manifold drain line.

Torque Value: 44 n•m [33 ft-lb]

Install and tighten the engine-to-fuel tank drain hose.

Torque Value: 95 n•m [70 ft-lb]

