

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.



⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.


- Drain the oil from the oil pan. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/89/89-007-037.html>).
- Remove one of the pipe plugs from the left side of the oil pan.
- Install a reference gauge of known accuracy to verify the reading of the suspect gauge. Use a gauge with a minimum temperature capacity of 150°C [300°F].
- Fill the engine with oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/89/89-007-037.html>).

Inspect for Reuse

Operate the engine. Compare the temperature reading of the master gauge and the suspect gauge.

If the suspect gauge does **not** read the same temperature as the reference gauge, check the following for defects:

- Electrical wiring
- Sending unit.

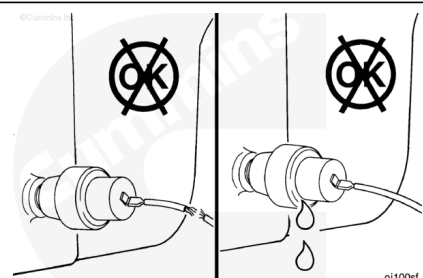


Replace the defective parts.

Finishing Steps

- Drain the oil from the oil pan. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/89/89-007-037.html>).
- Remove the reference gauge. Tighten the plug to specification. Refer to Section V for torque specifications.
- Fill the engine with oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/89/89-007-037.html>) for engine oil capacity.
- Operate the engine to normal operating temperature. Check for leaks.

©Cummins Inc.

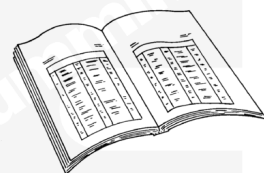

ck800wa