

Trainings ▾


Remove

Industrial Applications

⚠ WARNING ⚠

The belt tensioner is under pressure. Relieve and restore belt tension slowly to reduce the possibility of personal injury.


Place an open-ended wrench on the tensioner lug, as shown.

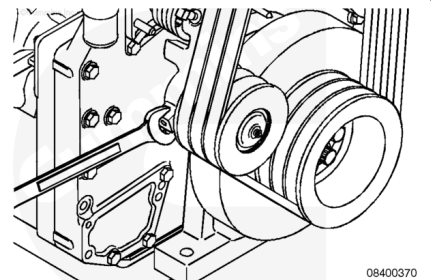

Turn the wrench to relieve the tension on the belt.

Remove the belt(s).

Slowly release pressure on the wrench until the tensioner stops.

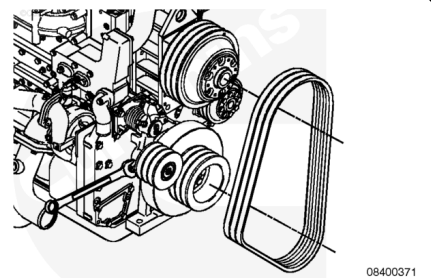


Power Generation


Loosen the three clamping bolts (1).

Loosen the adjusting screw locknut (2).

Turn the adjusting screw (3) **counterclockwise** to relieve the tension on the belt.

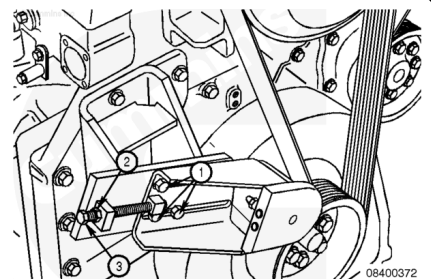

Remove the belt.

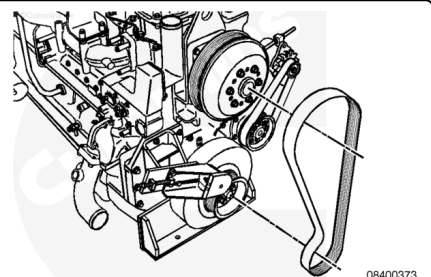


Inspect for Reuse

Inspect the tensioner assembly (1) and idler pulley (2) for any cracks or excessive wear.


If the parts are cracked or worn, they **must** be replaced.

- Make sure the idler pulley moves freely.
- Make sure bearing operation is smooth and does **not** have any free play.
- Inspect the idler pulley for damage or wear.

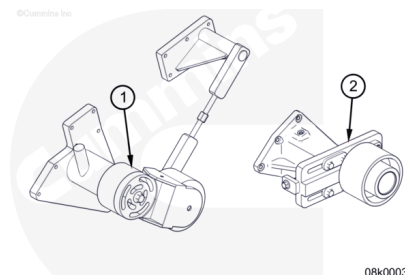

Inspect the belt for:

- Cracks
- Glazing
- Tears or cuts.

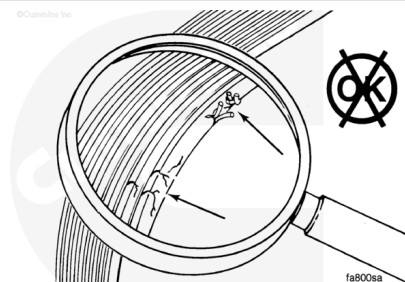


Install

Industrial Applications

⚠ WARNING ⚠

The belt tensioner is under pressure. Relieve and restore belt tension slowly to reduce the possibility of personal injury.


Place a wrench on the tensioner lug, as shown.

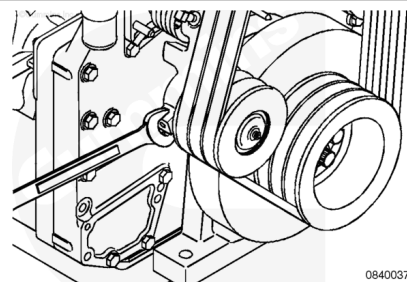

Turn the wrench to position the tensioner for belt installation.

Install the belt(s).


Slowly release pressure on the wrench until the tensioner is in position.

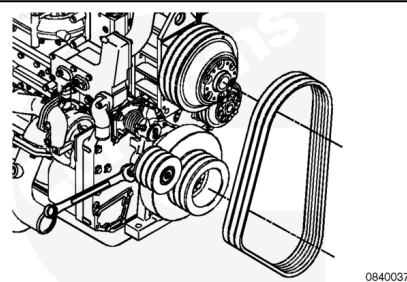

Power Generation

If necessary, loosen the adjusting screw (2) and clamping bolts (1) to allow belt installation.

Install the belt.

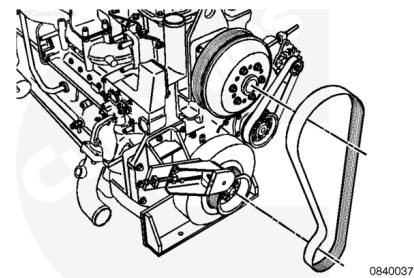


Adjust

Power Generation

Loosen the tensioner clamping bolts (1).

Loosen the adjusting screw locknut (2).

Turn the adjusting screw (3) **clockwise** to increase belt tension and **counterclockwise** to decrease belt tension.

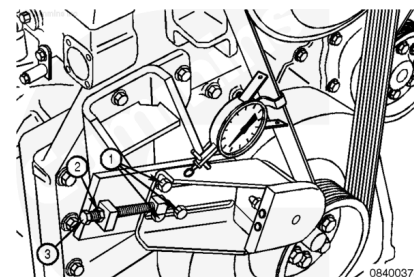

Belt Tension		
n.m		ft-lb
230	MIN	170
345	MAX	255

Once the desired tension is obtained, tighten the locknut against the tensioner bracket.

Torque Value: 196 n•m [125 ft-lb]

Tighten the clamping bolts (1).

Torque Value: 66 n•m [49 ft-lb]