


Trainings ▾

Maintenance Check

Remove the fan belt. Refer to Section A.

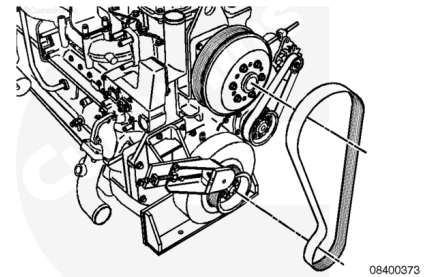


Rotate the fan hub pulley to check for rough or damaged bearings.

Inspect the pulley grooves for excessive wear.

Inspect the fan hub for grease leakage.

Use a dial indicator to measure bearing end clearance.

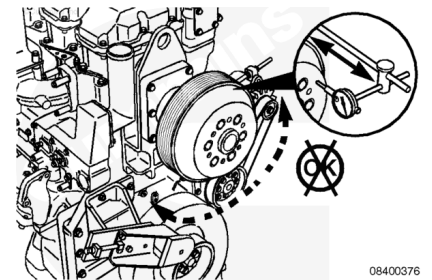

mm		in
0.03	MIN	0.001
0.25	MAX	0.010

If the above mentioned inspection results in a faulty condition, replace with a new or rebuilt unit as necessary. Contact a Cummins Authorized Repair Facility.

