

Trainings ▾

Preparatory Steps

- Remove the alternator belt. Refer to Procedure 013-005 (</qs3/pubsys2/xml/en/procedures/89/89-013-005.html>).




Remove

Remove the eight alternator drive pulley bolts.


Remove the pulley.

Note : Some components shown removed for clarity.

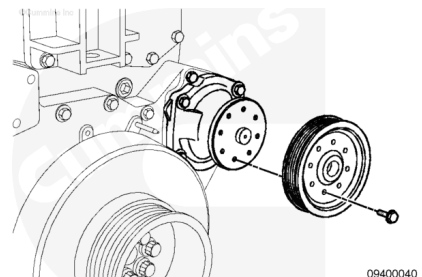

Inspect for Reuse

Inspect the pulley for nicks, cracks, or excessive wear in the belt grooves or other damage.

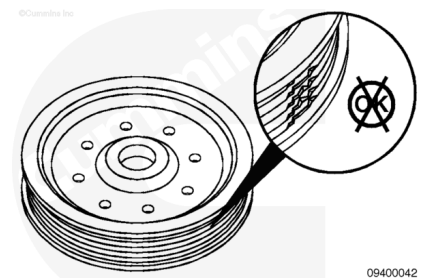


Install

Engines with 75A Alternator:

Install the alternator drive pulley and capscrews.

Tighten the capscrews.

Torque Value: 70 n•m [50 ft-lb]

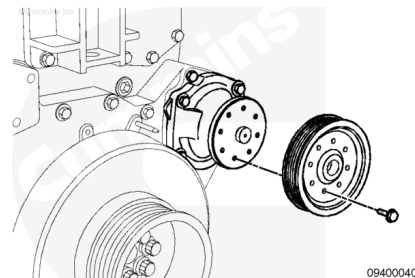


09400040

Engines with 140A Alternator:

Install accessory drive pulley and capscrews.


Tighten the capscrews.

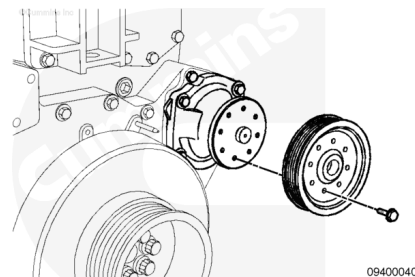

09400040

Follow the torque sequence.

Torque Value: 65 n•m [48 ft-lb]

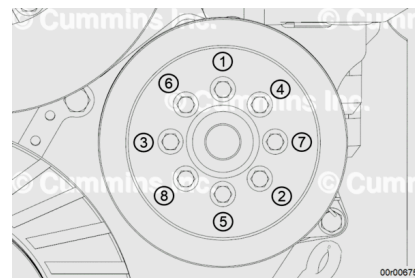

0000675

Finishing Steps

- Install the alternator belt. Refer to Procedure 013-005 (</qs3/pubsys2/xml/en/procedures/89/89-013-005.html>).



ck800wa

