


Trainings ▾

Measure


Install a vacuum gauge or water manometer in the intake piping between the turbocharger and the air filter. The gauge **must** have a capacity of 1270 mm H₂O [50 in H₂O].

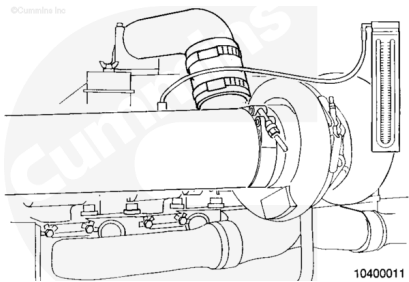

The gauge adapter (or fitting) **must** be installed at a 90 degree angle to the air flow in a straight section of pipe. The adapter location **must** be at least one pipe diameter before the turbocharger.


The adapter **must not** extend past the inner wall of the air intake tubing.

If the adapter **must** be located in a curved section of tubing, locate it on the flat side of the curve, **not** in the radius.

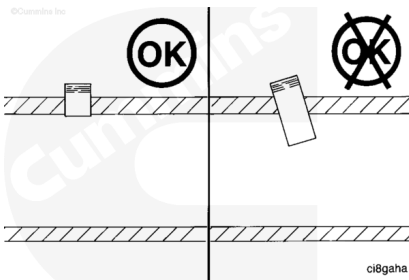

Operate the engine at full throttle and rated rpm with maximum load. Record the reading of the gauge or manometer.


mm-h2o		in-h2o
635	MAX	25

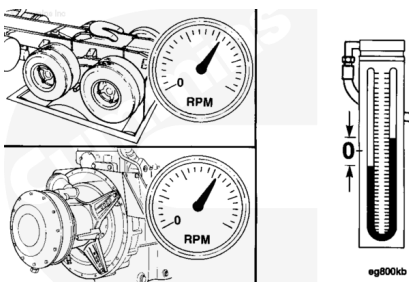

Stall speed is **not** full power. Operate the engine at rated rpm and load.


If the restriction exceeds specifications, do the following:

Replace or clean the air filter element. Refer to the equipment manufacturer's instructions.

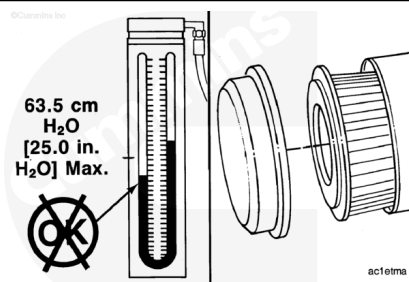

Inspect the intake air piping for damage. Refer to the equipment manufacturer's instructions.

If no damage is visible, check the size and routing of the intake air piping. Refer to the Installation Recommendations.

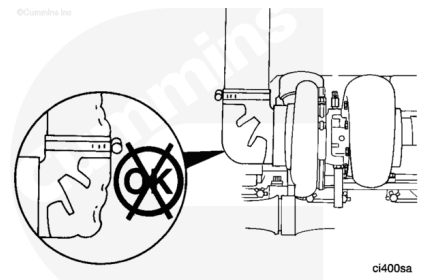

Remove the test equipment.

