


Trainings ▾

Measure

Install a 0 to 2030 mm Hg [0 to 80 in Hg] manometer (or gauge) in the straight threaded plug hole in the air intake connection.

Do **not** drill and tap a hole in the air intake connection. A faulty reading can result if the air intake connection is leaking.

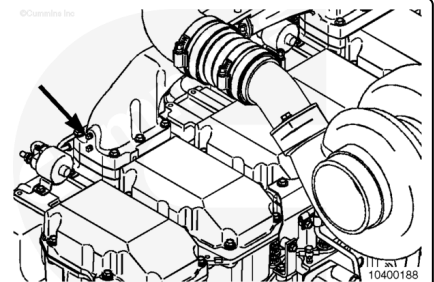

Operate the engine at rated rpm and full load. Compare the value to specifications.

Stall speed is **not** full power.

