

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

- Install the engine lifting fixture, Part Number 3163264, or its equivalent.
- Remove fan shroud. See equipment manufacturer service information.
- Remove the fan belt. Refer to Procedure 008-002 in Section 8 (/qs3/pubsys2/xml/en/procedures/89/89-008-002.html).
- Remove vibration damper. Refer to Procedure 001-052 in Section 1 (/qs3/pubsys2/xml/en/procedures/89/89-001-052.html).
- Use a hoist to lift the weight of the engine off the front support.




Remove

Industrial Applications

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

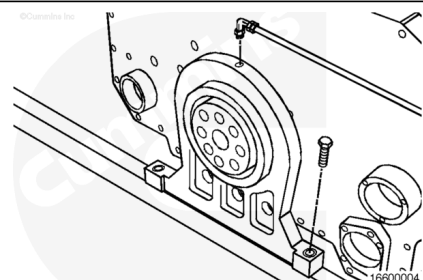


Disconnect the lubrication tube from the top of the support bracket.

Remove the capscrews that attach the front engine support to the equipment frame.

Lift the engine off the front support bracket.


Remove the front engine support.

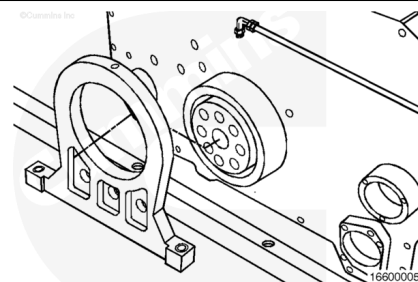

Power Generation

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

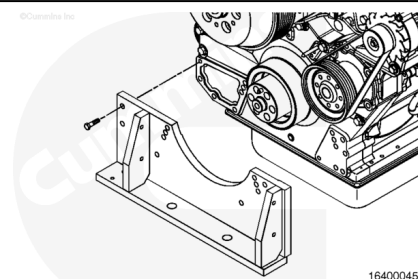


Remove the 12 capscrews securing the engine support to the front cover.

Use a mallet to gently tap the engine support off the dowel pins.

Clean and Inspect for Reuse

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

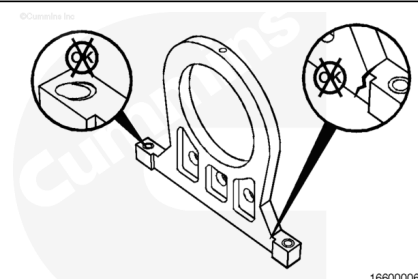

⚠ CAUTION ⚠

Damaged engine mounts and brackets can cause the engine to move out of alignment, damage the drivetrain components in the equipment, and result in vibration complaints.

Clean and check the support for reuse.


Inspect the front engine mount for cracks or damage.

Power Generation

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

Inspect all mounting brackets for cracks or damaged bolt holes.

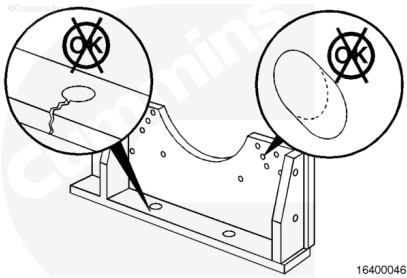


Measure

Industrial Applications

Measure the front support bore.

Front Support Bore		
mm		in
180.00	MIN	7.087
180.10	MAX	7.091

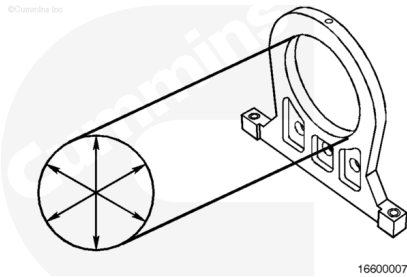


Install

Industrial Applications

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

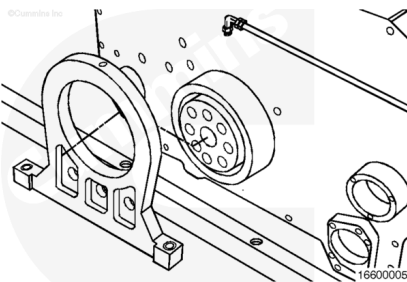

Install the support onto the front cover.

Lower the engine until the front engine support is in position.

Install and tighten the capscrews. See equipment manufacturer service information.


Lower the engine until the front engine support is in position.

Install and tighten the mounting capscrews.

Connect the lubrication tube from the top of the support bracket.

See equipment manufacturer service information for torque specifications.


Remove engine lifting fixture.

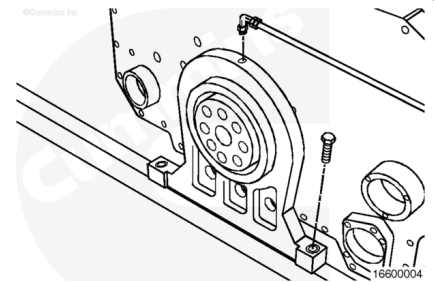

Use high performance, industrial-type grease (NLGI Grade Number 2) fortified with extreme pressure (EP) additives, such as BP Energrease™ FPG or Castrol Spheerol™ EPL 2 grease, or its equivalent.

If the above greases are **not** available locally, contact a Cummins® Distributor for advice on other Cummins® approved equivalents.

Lubricate the support until grease appears on the outside of the support.

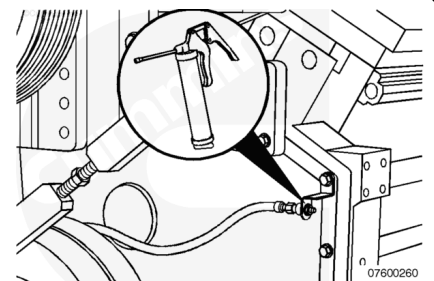

Power Generation


⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

Install the front engine support onto the dowel pins in the front cover.

Install the 12 capscrews into the engine support.


Torque Value: 113 n•m [85 ft-lb]

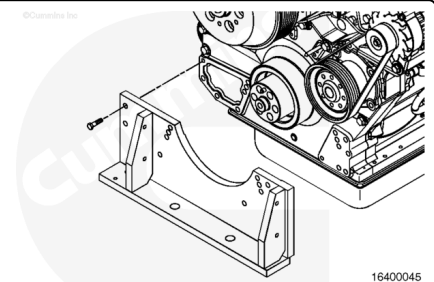

Finishing Steps

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

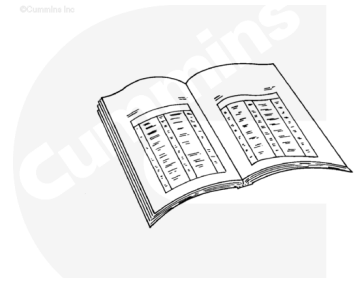

ck800wa

- Install the vibration damper. Refer to Procedure 001-052 in Section 1. (</qs3/pubsys2/xml/en/procedures/89/89-001-052.html>)
- Install the fan belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/89/89-008-002.html>)
- Install the fan shroud. See equipment manufacturer service information.
- Remove engine lift fixture, Part Number 3163264, or equivalent.