

Trainings ▾


Tool Number

ST-434

Vacuum Gauge

Measure fuel pump inlet restriction. Includes hose adapter (number 12 hose), and hose adapter (number 10 hose).

©Cummins Inc

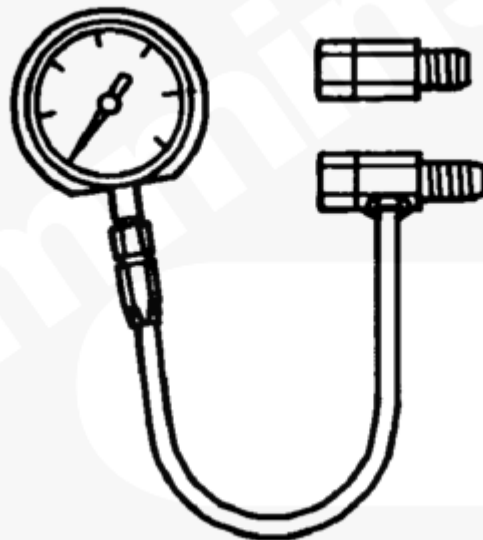

eg8togc


Tool Number

ST-1273

Pressure Gauge

Measure injector drain line restriction when used with drain adapter, Part Number 3376719.

©Cummins Inc

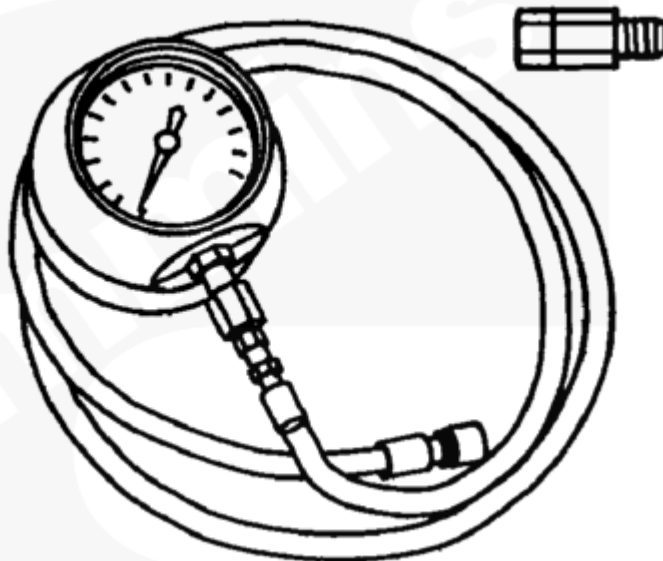

eg8togi


Tool Number

3376719

Adapter

Use with pressure gauge, Part Number ST-1273 to measure restriction.

©Cummins Inc

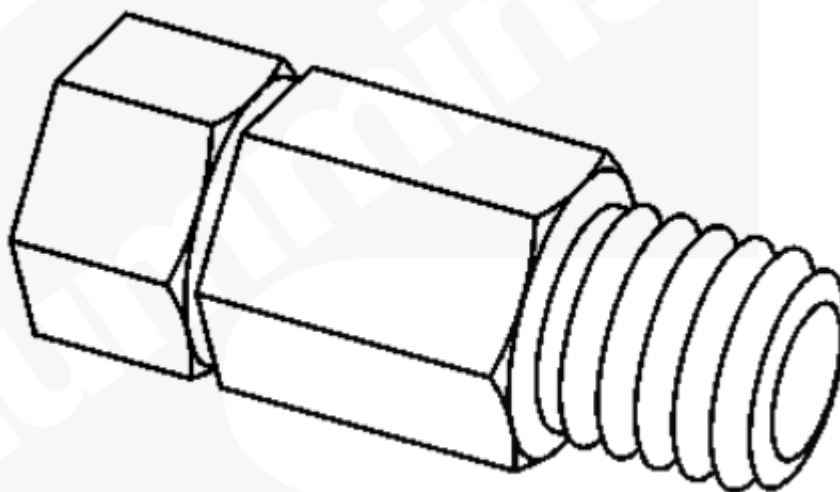

22400191


Tool Number

3375049

Filter Wrench

Remove fuel filter.

©Cummins Inc

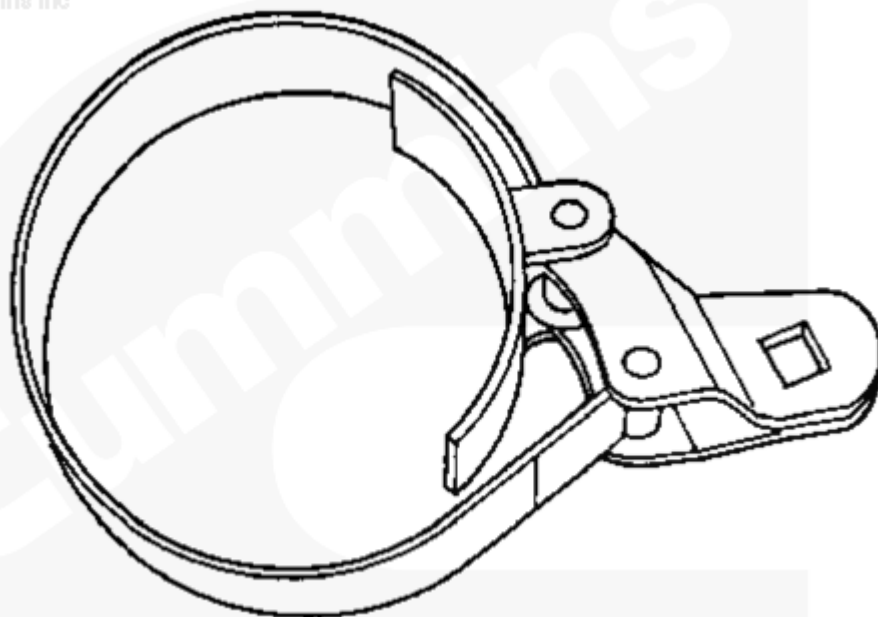**3375049**


Tool Number

3164387

Fuel Sight Glass

Used to check for air in the fuel suction line. Use with adapter hose, Part Number 3165146.

©Cummins Inc

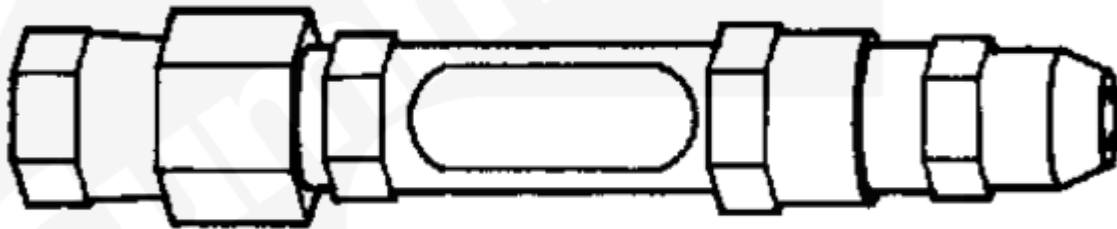

22800570


Tool Number

3165146

Adapter Hose

Check for air in fuel suction line. Use with fuel sight glass, Part Number 3164387.

©Cummins Inc

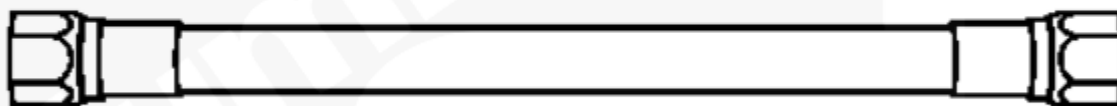

22400190


Tool Number

ST-435-7

Fitting

Connects gauges when measuring various fuel pressures.

©Cummins Inc

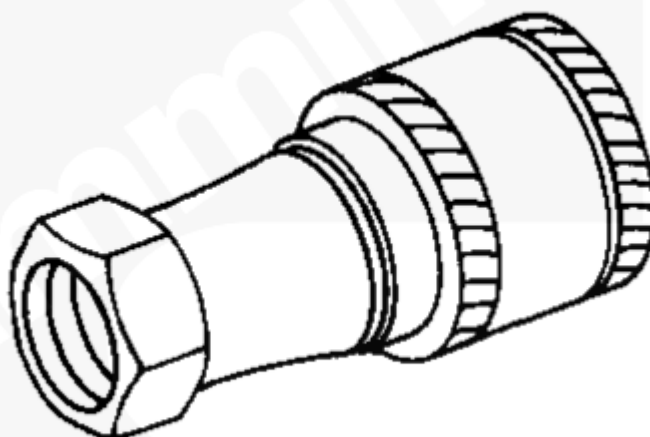

st-435-7

Tool Number

3376891

Fluorescent Tracer

Put in engine oil or fuel. Use black light to read oil or fuel leaks.

©Cummins Inc



3376891


Tool Number

3377462

Optical Tachometer

Measure engine RPM.

©Cummins Inc

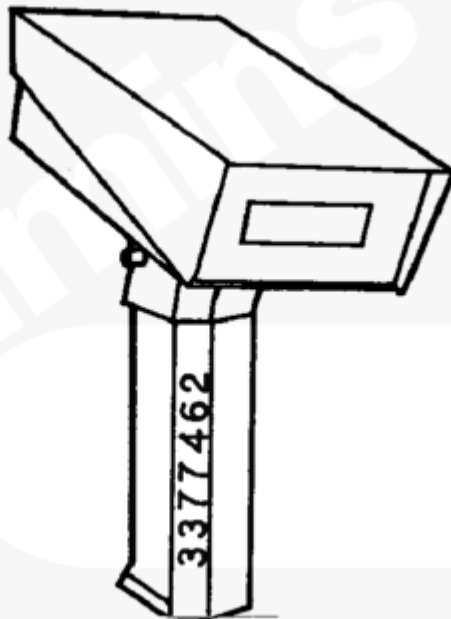

3377462,


Tool Number

3824830

Injector Removal and Installation Tool

Used to remove and install the QSK injector.

©Cummins Inc

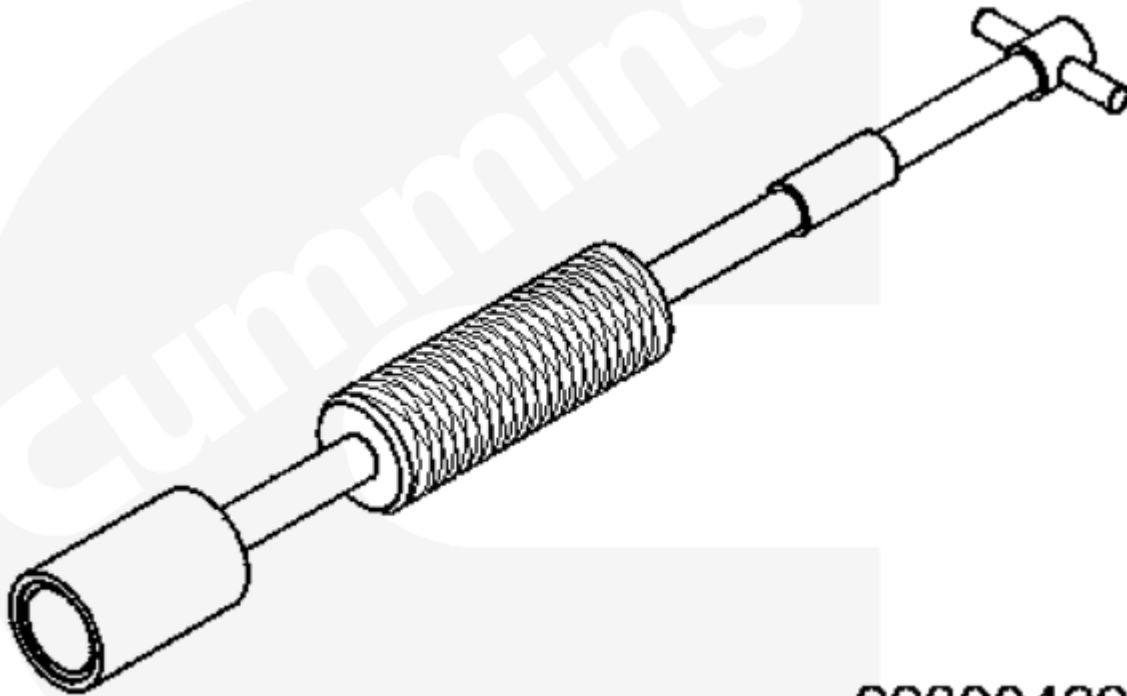

22800429


Tool Number

3163337

Black Light

Locate fuel, oil, or coolant leaks.

©Cummins Inc

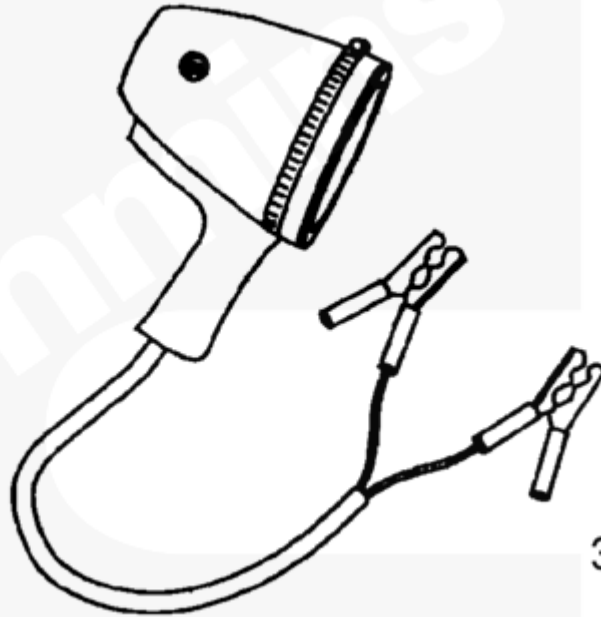

3377394


Tool Number

3164794

Torque Wrench

This is a [3/8 inch] drive, torque wrench used to set injector preload adjustments.

©Cummins Inc

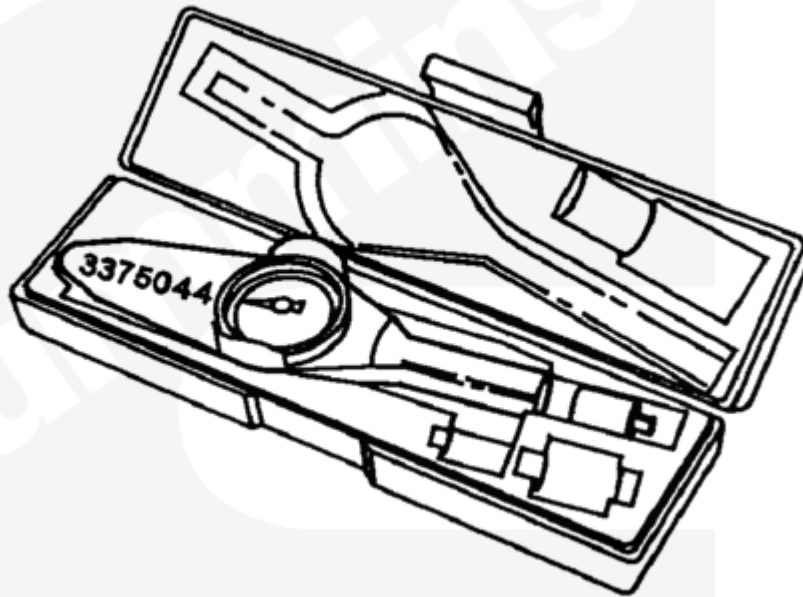

Last Modified: 15-Sep-2003
