


Trainings ▾

Remove

Locate the engine start alarm. It will be installed on the vehicle's firewall, near the ICON™ idle control module.

Remove the two screws securing the alarm to the vehicle firewall.

Remove the alarm.

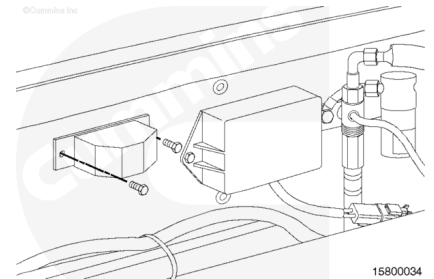

Install

Install the engine start alarm onto the vehicle's firewall, making sure you orient the alarm horn pointing down.

Install the two screws securing the engine start alarm to the vehicle firewall.

