


Trainings ▾

Remove

Turn the keyswitch to the OFF position.


Remove any wire ties or other similar material securing the temperature sensor harness to an air line or wire conduit (under the fifth wheel).

Disconnect the temperature sensor harness from the ambient air temperature sensor.

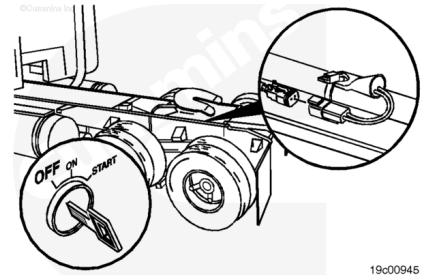

Disconnect the temperature sensor harness from the cab thermostat.

Remove the temperature sensor harness.

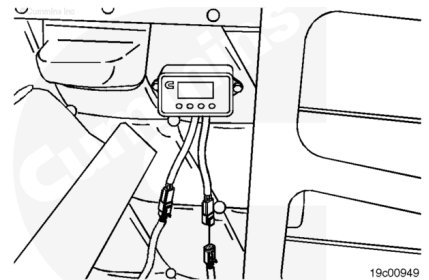


Install


Turn the keyswitch OFF.

Secure the temperature sensor harness to an air line or wire conduit (under the fifth wheel).

Connect the temperature sensor harness to the ambient air temperature sensor.

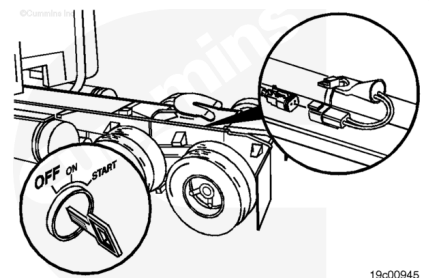

Connect the temperature sensor harness to the cab thermostat.

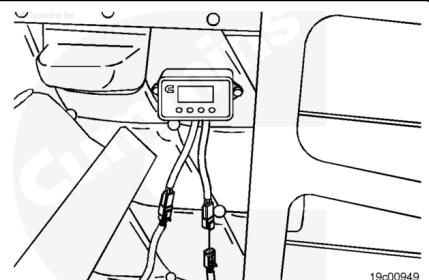

Last Modified: 12-Jun-2003