


Trainings ▾

Remove


Turn the keyswitch to the OFF position.

Open the vehicle's hood.

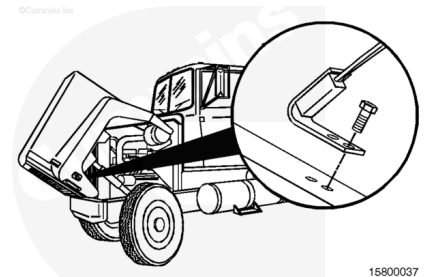

⚠ WARNING ⚠

This component contains Mercury, a chemical known to some state and federal agencies to cause birth defects or other reproductive harm. Do not dispose. Recycle in accordance with state regulations.

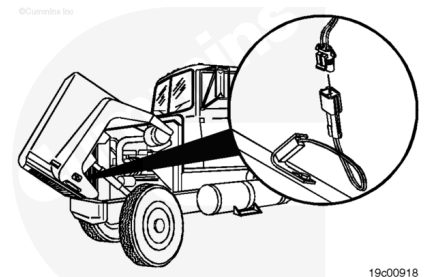


Note : Typically, the hood tilt switch is mounted on the back of the head lamp assembly on the left side of the vehicle.

Disconnect the hood tilt switch from the ICON™ engine harness.

Remove the capscrew securing the hood tilt switch to the vehicle.


Remove the hood tilt switch.

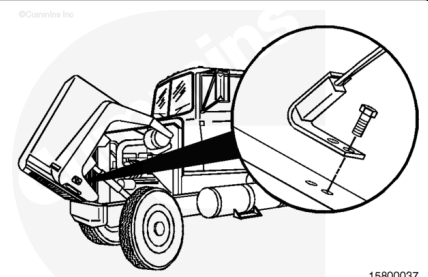

Install


Turn the keyswitch to the OFF position.

Open the vehicle's hood.

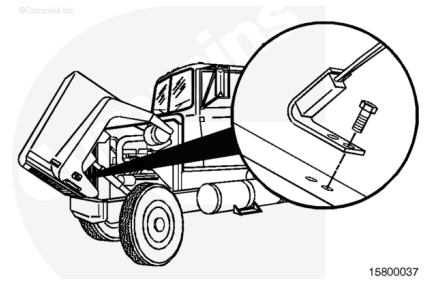

⚠ WARNING ⚠

This component contains Mercury, a chemical known to some state and federal agencies to cause birth defects or other reproductive harm. Do not dispose. Recycle in accordance with state regulations.

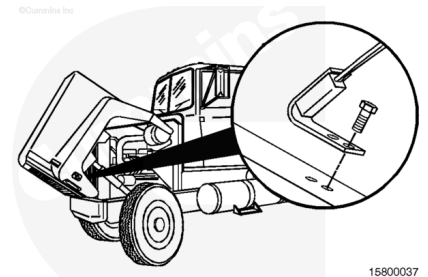

Note : Typically, the hood tilt switch is mounted on the back of the head lamp assembly on the left side of the vehicle.

Position the hood tilt switch.

Install the capscrew securing the hood tilt switch to the vehicle.

Connect the hood tilt switch to the ICON™ engine harness.

Carefully close the vehicle's hood. Make sure that no part of the ICON™ engine harness or components interfere with closing the hood.

