


Fault Code: 111 (Aftermarket and OEM)

Engine Control Module Critical Internal Failure - Bad Intelligent Device or Component

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 111 PID(P): SPN: FMI: Lamp: None SRT:	Engine Control Module Critical Internal Failure - Bad Intelligent Device or Component. Error internal to the ICON™ idle control module related to memory hardware failures or internal microprocessor communication failures.	The ICON™ system will be disabled. Engine will possibly not start normally. Keyswitch can possibly not operate normally.

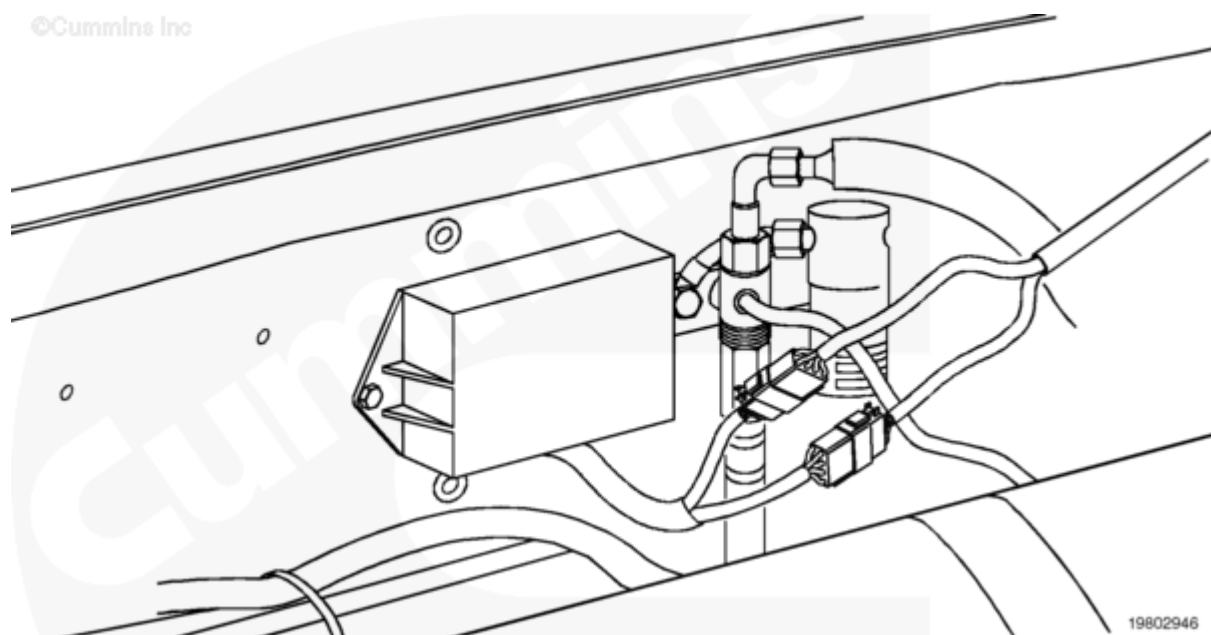

Circuit Description

The ICON™ idle control module is a computer that controls the operation of the ICON™ system.

Component Location

The ICON™ idle control module is typically mounted on the vehicle bulkhead on the intake side of the engine. However, the ICON™ module can be located in a different location depending on the vehicle application.

Shoptalk

This fault code can be caused **only** by an internal ICON™ idle control module problem. Repairs are **not** possible for the ICON™ idle control module.

The ICON™ system can display **only** the present active fault code. If more than one fault code is active at the same time, the ICON™ system flashes out the highest priority fault. After the fault has been corrected then the next active fault will be flashed out.

The ICON™ electronic service tool can display more than one active and or inactive fault codes at the same time.

Warnings and Cautions

CAUTION

To avoid damaging a new ICON™ idle control module, all other active fault codes must be investigated prior to replacing the ICON™ idle control module.

Troubleshooting Summary

STEPS		SPECIFICATIONS
STEP 1.	Read the fault codes.	
	STEP 1A. Use the fault flashout feature or the ICON™ electronic service tool to read the fault codes.	Fault Code 111 inactive
STEP 2.	Clear the fault code.	
	STEP 2A. Disable the fault code.	Fault Code 111 cleared

STEP 1. Read the fault codes.

STEP 1A. Use the fault flashout feature or the ICON™ electronic service tool to read the fault codes.

Conditions :

- Connect all components.
- Turn keyswitch ON.
- Connect the ICON™ electronic service tool.

Action	Specification/Repair	Next Step
	Fault Code 111 inactive. Refer to Inactive or Intermittent Fault Codes, Procedure 019-362 (/qs3/pubsys2/xml/en/procedures/99/99-019-362.html).	2A
	Replace the ICON™ idle control module. Refer to Procedure 019-358 (/qs3/pubsys2/xml/en/procedures/97/97-019-358.html).	Repair complete

STEP 2. Clear the fault code.

STEP 2A. Disable the fault code.

Conditions :

- Connect all components.
- Turn keyswitch ON.
- Connect the ICON™ electronic service tool.

Action	Specification/Repair	Next Step
• Use the ICON™ electronic service tool to clear the fault code. • Cycle the keyswitch to verify the fault code is inactive.	Fault Code 111 cleared	Repair complete
	Troubleshoot any remaining active fault codes.	Appropriate troubleshooting charts

