


## Trainings ▾


### Remove

Disconnect the electronic fuel control electrical wires from the electronic fuel control valve (1).


Disconnect the +12-VDC supply wire from the fuel shutoff solenoid (2).

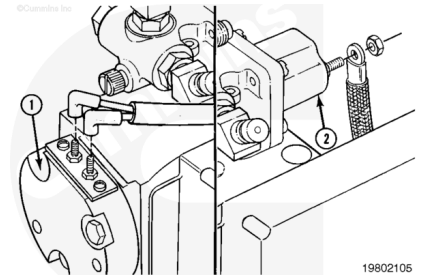


Remove the harness mounting clamps.

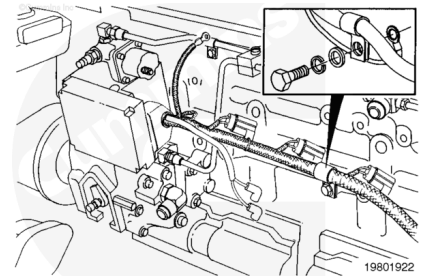


Disconnect the ground wire, C5 connector, and C6 connector from the engine block.

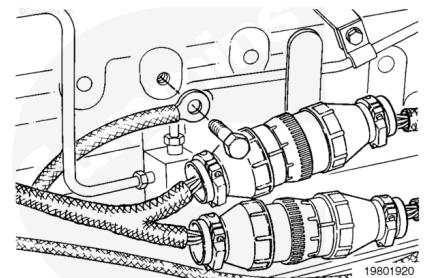

Disconnect the rail pressure sensor connector.

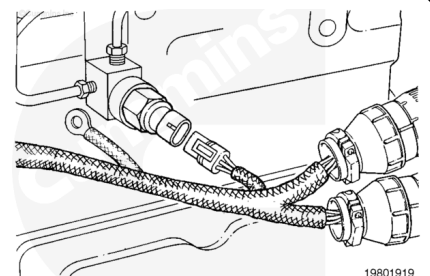


Disconnect the step timing control solenoid if the engine is equipped with electrical step timing control.

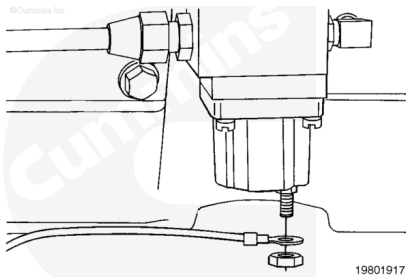


Remove the three mounting capscrews securing the electronic control module (ECM) to the electronic fuel control module.

Remove the ECM.

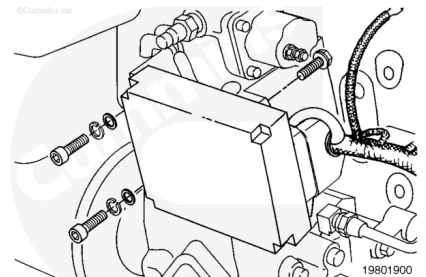

### ⚠ CAUTION ⚠


**A loose or missing ECM jack post can cause the engine to run erratically, surge, or die unexpectedly, as well as to log any number of different fault codes. Use a 1/4-inch open-end wrench to hold the jack post while loosening the main engine harness ECM connector capscrews.**

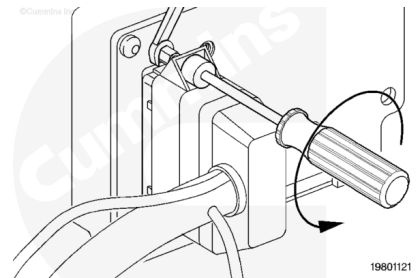


Remove the two ECM harness connector capscrews from the ECM unit.

Remove the main engine harness connector from the ECM.

Disconnect the engine speed sensors from the main engine harness.

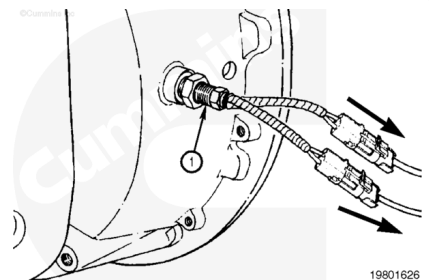


Remove the main engine harness from the engine.

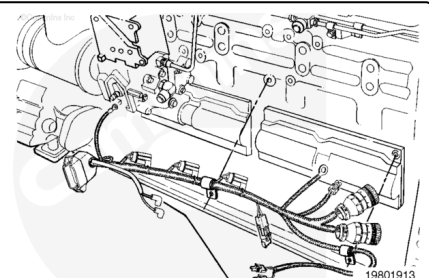


# Install

Place the main engine harness along the side of the engine block.


Place the engine speed sensor portion of the main engine harness in the correct location.

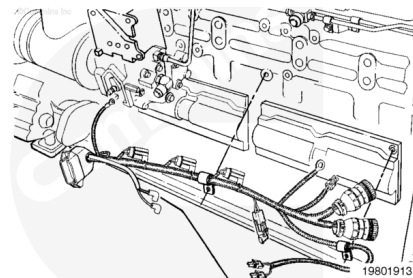


Install the harness connector into the ECM receptacle. Carefully align the connector guide slots with the receptacle guide slots in the ECM and insert the connector.

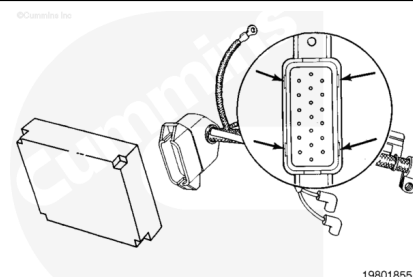


Connect the +12-VDC power supply wire to the fuel shutoff solenoid.

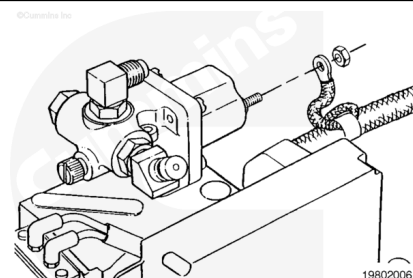


Route and clamp the engine speed sensor portion of the main engine harness to the sensor location in the flywheel housing.

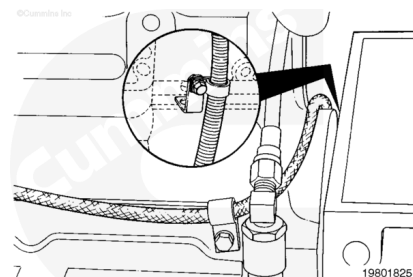


Connect the engine speed sensor connectors.

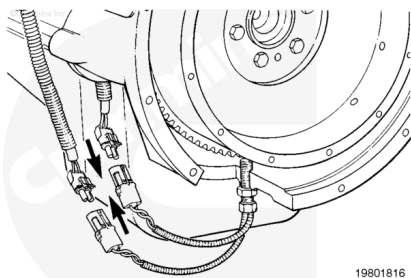


Connect the rail pressure sensor connector.

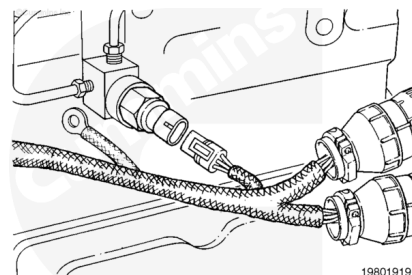


Connect the C5 and C6 connectors.

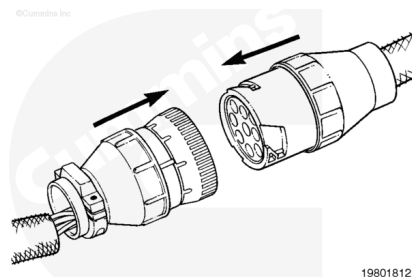

Connect the engine block ground wire.

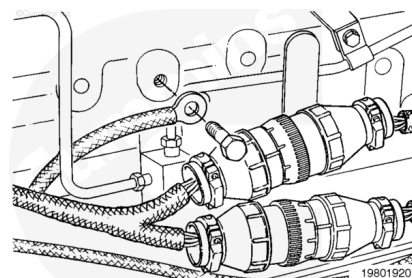


Connect the step timing control wire, if used.

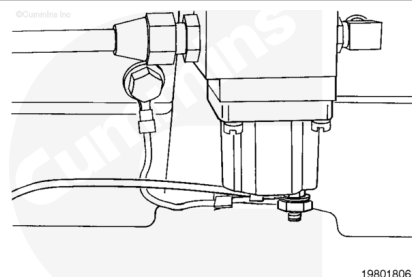

Connect the electronic fuel control leads to the electronic fuel control valve. Insert the electronic fuel control electrical wiring cable into the slotted channel of the CENTRY™ electronic fuel


control module.

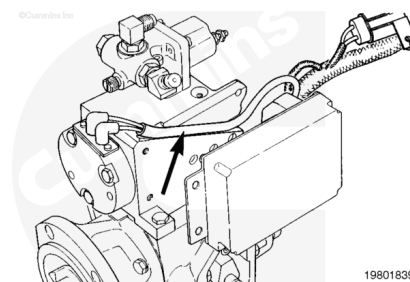

Install the main engine harness mounting clamps to the side of the engine block.

Tighten the mounting clamp capscrews.

**Torque Value:** 25 n•m [ 18 ft-lb ]

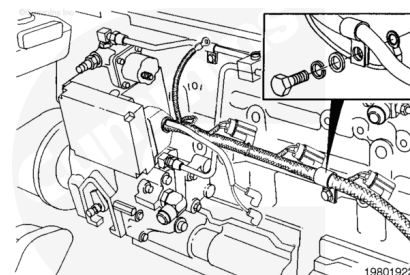

## Finishing Steps

Install ECM. Refer to procedure 019-031 (</qs3/pubsys2/xml/en/procedures/98/98-019-031.html>).

