



Trainings ▾

Connector Replacement


The connectors are located in the middle of the main engine harness.

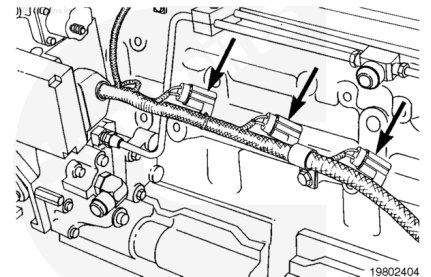


Cut and remove the plastic hold-down wire tie. Cut and remove the connector from the harness.

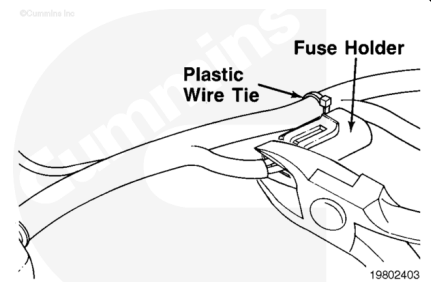

Remove approximately 6 mm [1/4 in] of insulation from the supply wires.

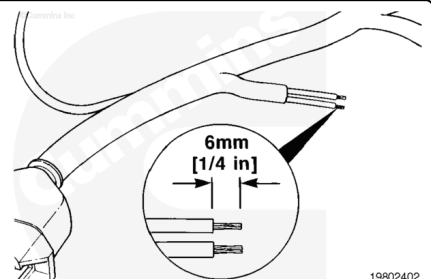

Install the replacement fuse holder, Part No. 3823758, on the bare wire.

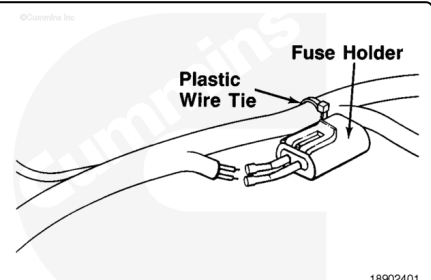


⚠ CAUTION ⚠

Only use wire crimping pliers Part No. 3822930.

Crimp the repair wire on the bare wire.

Use a heat gun, Part No. 3823860, or an open flame to heat the shrink tubing. The tubing will shrink and make the connection waterproof.

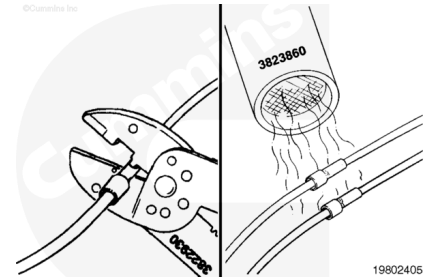

Last Modified: 01-Apr-2003
