


Trainings ▾

Engine Views


The illustrations that follow show the locations of the major external engine components of the CENTRY™ system. Some external components will be at different locations for different engine models.

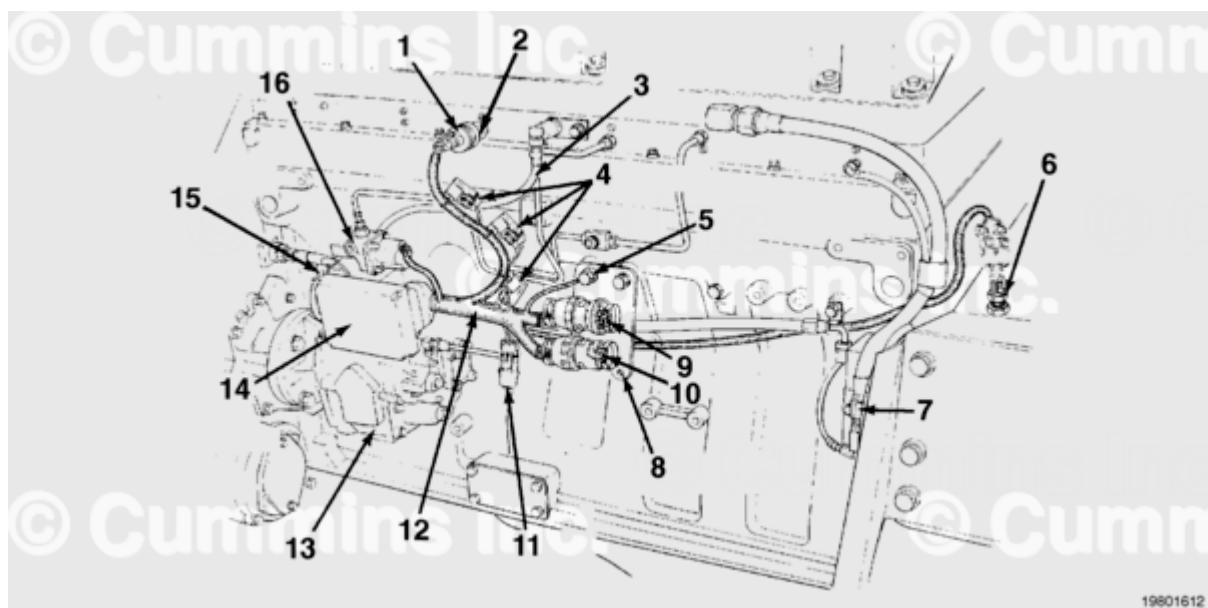

L10 and M11 Engine Series (Fuel Pump Side)


1. Rail pressure sensor
2. Fuel block
3. Air-fuel control sensor line
4. Fuses (5-amp)
5. System ground connector
6. Engine speed sensor
7. Hydromechanical STC actuator
8. OEM C5 and C6 connector bracket
9. C5 connector
10. C6 connector
11. Engine-side datalink connector
12. Engine harness
13. Fuel pump
14. ECM
15. Electronic fuel control valve

16. Fuel shutoff valve.

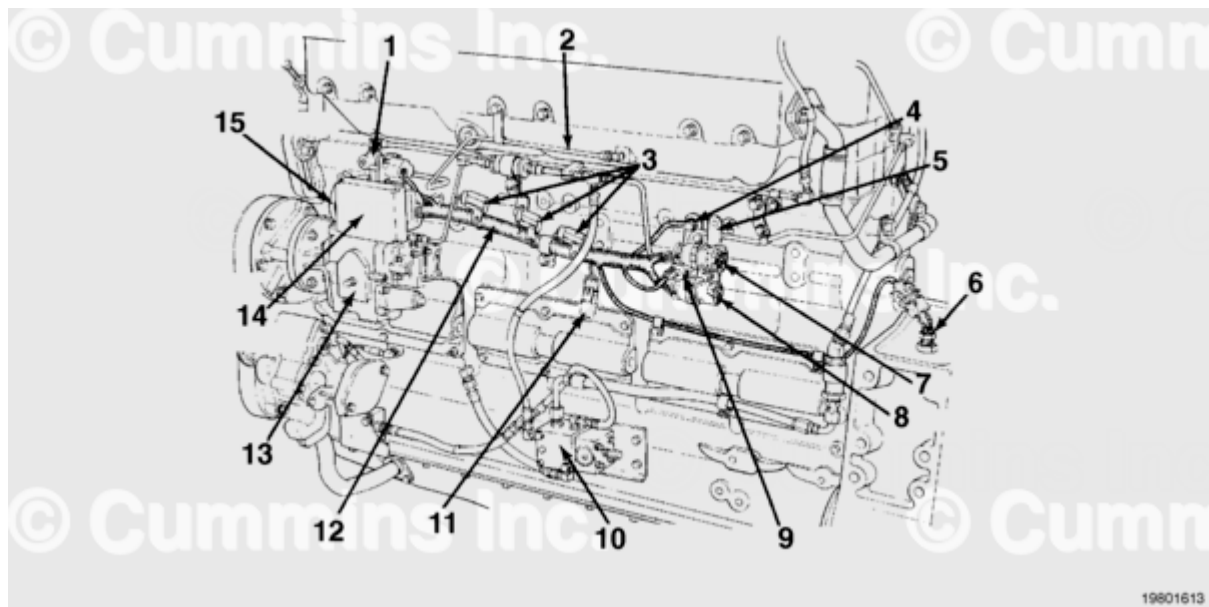

N14 Series Engine (Fuel Pump Side)


1. Fuel shutoff valve
2. Air-fuel control sensor line
3. Fuses (5-amp)
4. System ground connector
5. OEM C5 and C6 connector bracket
6. Engine speed sensor
7. C5 connector
8. C6 Connector
9. Rail pressure sensor and fuel block
10. Hydromechanical STC actuator
11. Engine-side data link connector
12. Engine harness
13. Fuel pump
14. ECM
15. Electronic fuel control valve.

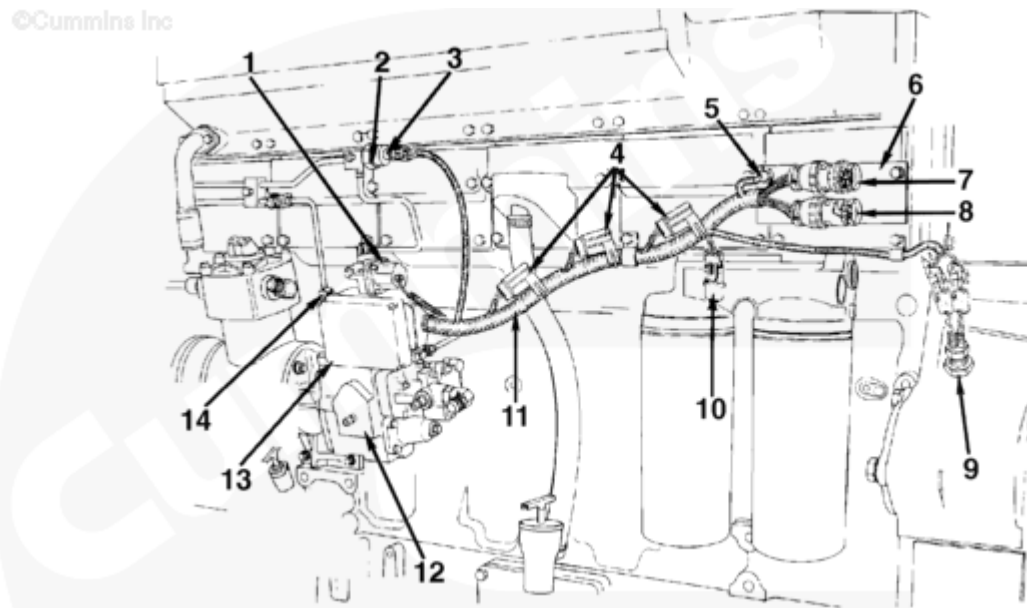

19801614

K19 Series Engine (Fuel Pump Side)

1. Fuel shutoff valve
2. Fuel block
3. Rail pressure sensor
4. Fuses (5-amp)
5. System ground connector
6. OEM C5 and C6 connector bracket
7. C5 connector
8. C6 connector
9. Engine speed sensor
10. Engine-side datalink connector
11. Engine harness
12. Fuel pump
13. ECM
14. Electronic fuel control valve.

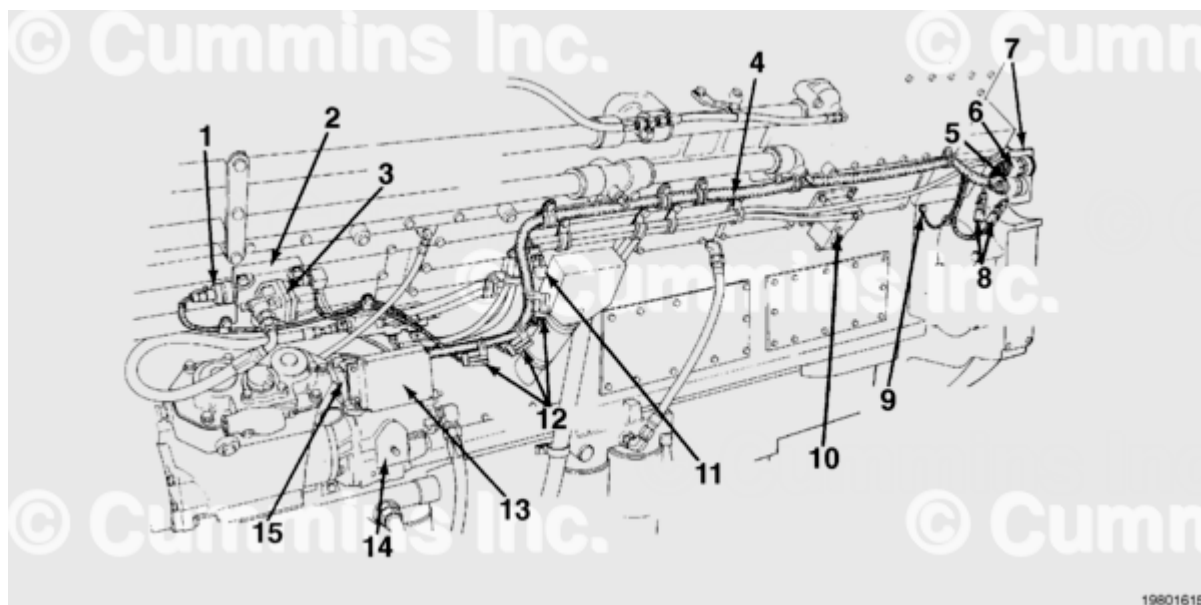

K38 and K50 Series Engines (Fuel Pump Side)

1. Rail pressure sensor
2. Fuel block
3. Fuel shutoff valve
4. Engine harness
5. C6 connector
6. C5 connector
7. OEM C5 and C6 connector bracket
8. Engine speed sensor
9. System ground connector
10. Hydromechanical STC actuator
11. Engine-side datalink connector
12. Fuses (5-amp)
13. ECM
14. Fuel pump
15. Electronic fuel control valve.