

Trainings ▾

General Information

The lubricating oil dipstick is located on the left bank side of the engine.

One side of the lubricating oil dipstick is labelled static and is calibrated for measuring the static lubricating oil level.

On specific engines, the other side of the lubricating oil dipstick is labelled run and is calibrated for measuring the running lubricating oil level.


Maintenance Check

⚠ CAUTION ⚠

Never operate the engine with oil level below the L (low) mark or above the H (high) mark. Poor engine performance or engine damage can occur.

⚠ CAUTION ⚠

The engine must be level when checking the lubricating oil level to make sure the measurement is correct.

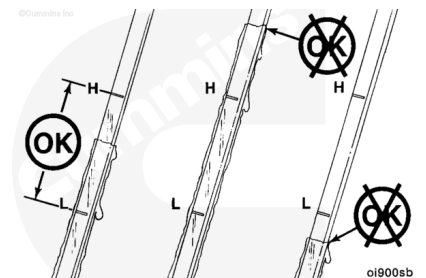

For a static oil level check, shut the engine OFF for an accurate reading.

Wait 15 minutes after shutting the engine off to check the lubricating oil level. This allows time for the oil to drain into the oil pan.

Remove the lubricating oil dipstick and assess the lubricating oil level.

For additional lubricating oil recommendations and lubricating oil pan capacity information, see Section V.

For a run oil level check, run the engine at idle and verify coolant temperatures have stabilized at 160°F [71°C] before performing the lubricating oil level check.

Remove the lubricating oil dipstick and assess the lubricating oil level.

For additional lubricating oil recommendations and lubricating oil pan capacity information, see Section V.

