



# Service Tool Instruction

Service Tool Instruction  
Number: 3377685-2

Revision Level:


Released Date: 02-apr-  
2003

## Description

Valve Head Thickness Gauge

## Purpose

This document provides information for using valve head thickness gauge, Part Number 3164983. The gauge is used to determine if the K19, K38, and K50 intake and exhaust valve can be reused after reconditioning.

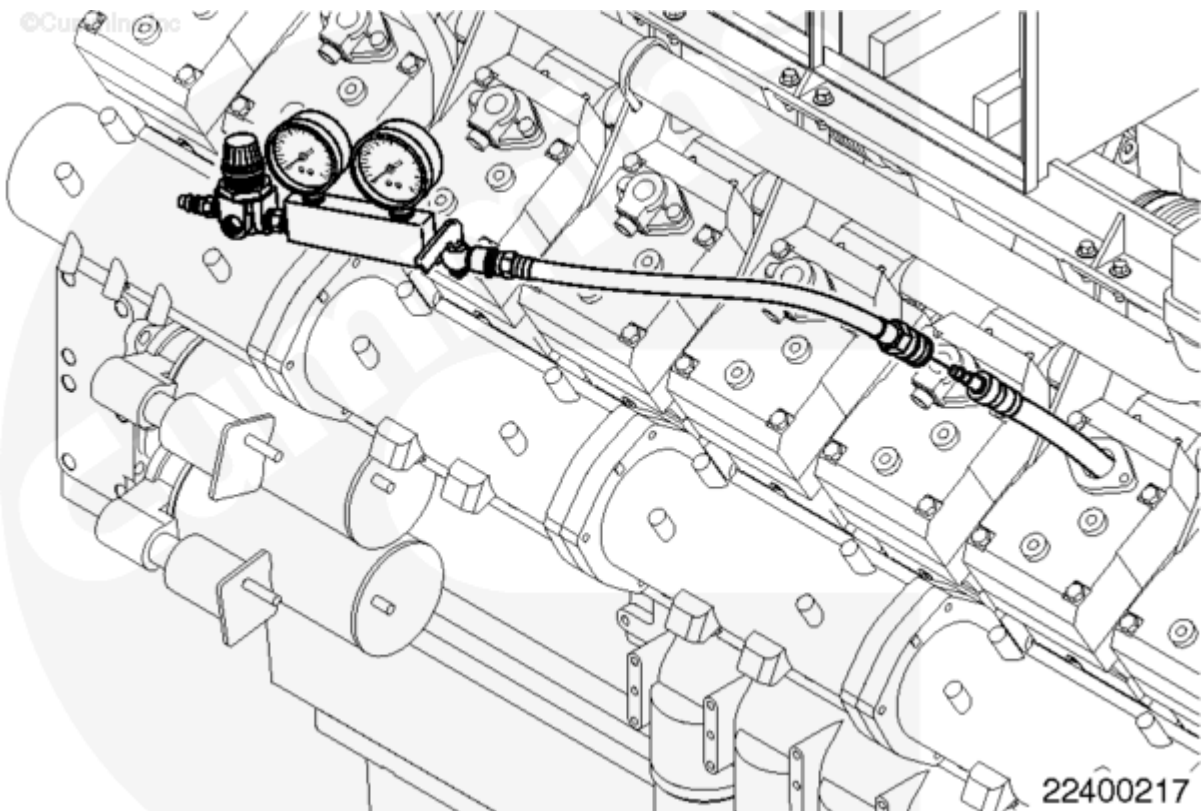

**Table 1, Valve Head Thickness Gauge, Part Number 3164983**

| Item Number | Part Number | Description                | Quantity |
|-------------|-------------|----------------------------|----------|
| 1           | 3164983     | Valve head thickness gauge | 1        |

The intake and exhaust valve face and seating surfaces **must** be cleaned and free of carbon deposits before the inspection is performed. Use Scotch-Brite 7448, Part Number 3823258, or equivalent, to clean the valve.

The valve head thickness gauge, Part Number 3164983, is used to check the intake and exhaust valve head thickness. The lower gauging surface marked "INTAKE", is for the intake valve. The upper gauging surface marked "EXHAUST", is for the exhaust valve.

Place the valve into the valve head thickness gauge.

Measure the valve height. If the valve is flush or above the gauging surface, the valve can be reused. If the valve is below the gauging surface, the valve can **not** be reused.

