

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries. See equipment manufacturer service information.

Remove

Detach wire harness from studded capscrew.

Remove the two capscrews from the camshaft cover plate.

Remove the camshaft cover plate.

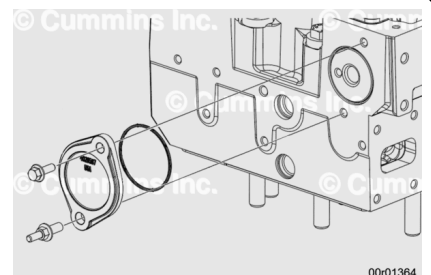


Clean and Inspect for Reuse

Inspect the camshaft cover plate for cracks or other damage.

Inspect the camshaft cover plate o-ring for cuts, wear, or other damage.

If the camshaft cover plate or o-ring is damaged, it **must** be replaced.

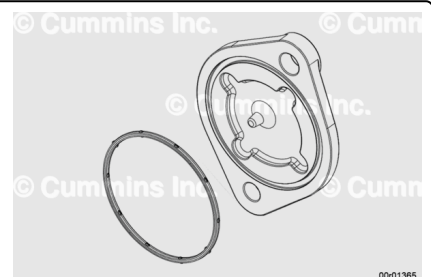


Install

Install the camshaft cover plate and capscrews.

Tighten the capscrews.

Torque Value: 40 n•m [30 ft-lb]

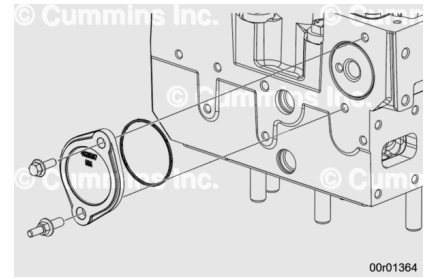

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. See equipment manufacturer service information.