

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Electrical contact cleaner, Part Number 3824510, or equivalent
- Fuel System Clean Care Kit, Part Number 4919073


Additional Service Items

- No additional service items required.

General Information

The fuel system requires the use of two fuel filters. The suction side filter **must** have the following characteristics:

- Water-separating
- 10 micron rating
- Water in fuel sensor with shunt resistor
- Water drain valve
- Engine or chassis mounted.

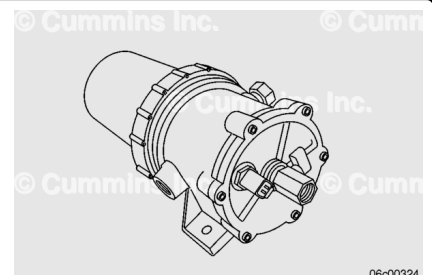


The pressure side filter **must** have the following characteristics:

- 4 micron rating
- Engine mounted.

Use the following procedure for fuel filter recommendations.

Refer to Procedure 018-024 in Section V.


(/qs3/pubsys2/xml/en/procedures/377/377-018-024.html)

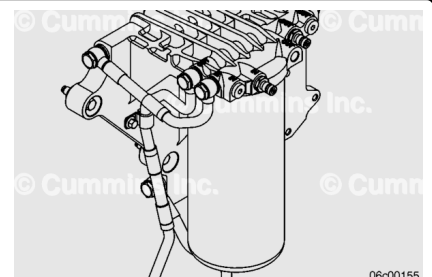

The system also contains a fuel screen located in the banjo bolt at the high-pressure fuel pump inlet.

- Rating
 - 86 micron

- Location
 - inside the banjo bolt
- Service
 - replace the banjo bolt

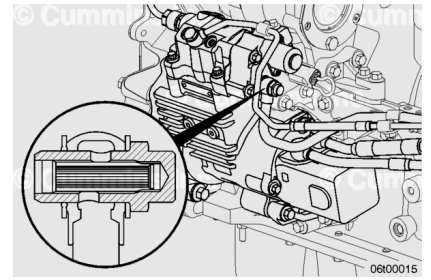

Preparatory Steps

⚠ WARNING ⚠


When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ CAUTION ⚠

Clean all fittings before disassembly. Dirt or contaminants can damage the fuel system.

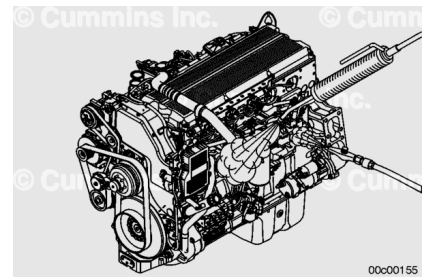

Before servicing **any** fuel system components, (such as fuel lines, fuel pump, injectors, etc.), which would expose the fuel system or internal engine components to potential contaminants prior to disassembly, clean the fittings, mounting hardware, and the area around the component to be removed. Dirt or contaminants can be introduced into the fuel system and engine if the surrounding areas are **not** cleaned, resulting in damage to the fuel system and engine. Refer to Procedure 000-009 in Section 0.

(/qs3/pubsys2/xml/en/procedures/99/99-000-009.html)

Clean the fuel filter head with electrical contact cleaner, Part Number 3824510, or equivalent.

To prevent damage from debris and contamination, cover, cap, or plug any openings as soon as possible when servicing the fuel system. Caps and plugs can be found in Clean Care Kit, Part Number 4919073.

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information

Remove

⚠ WARNING ⚠

Depending on the circumstance, diesel fuel is flammable. When inspecting or performing service or repairs on the fuel system, to reduce the possibility of fire and resulting severe personal injury, death, or property damage, never smoke or allow sparks or flames (such as pilot lights, electrical switches, or welding equipment) in the work area.

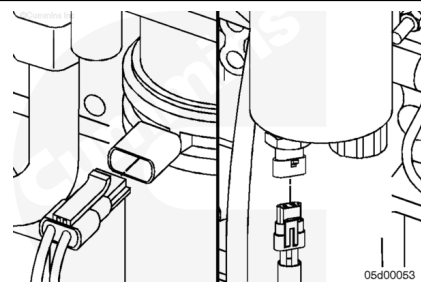


See equipment manufacturer service information for information regarding the removal of the suction side fuel filter.

Note : Suction-side fuel filters are original equipment manufacturer (OEM)-supplied. See equipment manufacturer service information.

Install

Use the correct filter(s) for your engine. The suction-side fuel filter **must** remove a minimum of 95 percent of free and emulsified water. It **must** also have a 10 micron particle-removal efficiency.

See equipment manufacturer service information for information regarding proper installation of the suction side fuel filter.

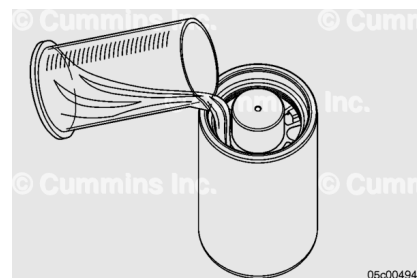

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. See equipment manufacturer service information.
- Prime the fuel system. Refer to Procedure 005-234 in Section 5.
(</qs3/pubsys2/xml/en/procedures/377/377-005-234-tr.html>)
- Operate the engine. Check for leaks and proper operation.