

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Contact cleaner, Part Number 3824510

Additional Service Items

- Container suitable for fuel

Preparatory Steps

WARNING

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

WARNING

Wear safety glasses or a face shield, as well as protective clothing, to prevent personal injury when using a steam cleaner or high-pressure water.

WARNING

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

CAUTION

Fuel system is extremely sensitive to dirt and debris. All connections and ports must be cleaned and covered. Even a very small amount of debris can result in fuel system malfunction.

- Disconnect the batteries. See equipment manufacturer service information.


Before servicing **any** fuel system components, (such as fuel lines, fuel pump, injectors, etc.), which would expose the fuel system or internal engine component to potential contaminants prior to disassembly, clean the fittings, mounting hardware, and the area around the component to be removed. Dirt or contaminants can be introduced into the fuel system and engine if the surrounding areas are **not** cleaned, resulting in damage to the fuel system and engine. Refer to Procedure 000-009 in Section 0. (</qs3/pubsys2/xml/en/procedures/99/99-000-009.html>)

- Clean the pump-to-rail line at the rail and mating components with electrical contact cleaner, Part Number 3824510, or equivalent.

Relieve Pressure

⚠ WARNING ⚠

Depending on the circumstance, diesel fuel is flammable. When inspecting or performing service or repairs on the fuel system, to reduce the possibility of fire and resulting severe personal injury, death, or property damage, never smoke or allow sparks or flames (such as pilot lights, electrical switches, or welding equipment) in the work area.

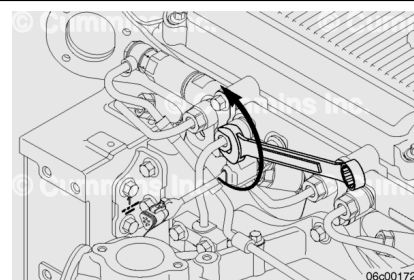

⚠ WARNING ⚠

High pressure fuel spray can cause serious injury or death.

⚠ CAUTION ⚠

Fuel system is extremely sensitive to dirt and debris. All connections and ports must be cleaned and covered. Even a very small amount of debris can result in fuel system malfunction.

Note : A machined slot in this fitting directs the fuel spray toward the cylinder block.

Before servicing the fuel system, loosen the pump-to-fuel rail line at the fuel rail to vent the fuel pressure.

Keep hands clear of the line when loosening the fuel rail nut.


Tighten the fuel rail nut.

Torque Value: 47 n•m [35 ft-lb]

Connect INSITE™ electronic service tool to engine data link.

Turn keyswitch to ON position.

Verify fuel pressure has decreased to 0 bar [0 psi] by monitoring fuel rail pressure measured parameter.

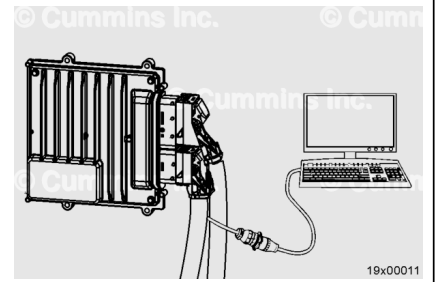

Last Modified: 30-Aug-2017
