


Trainings ▾

Engine Views

The following illustrations show the location of the major external engine components, filters, and other service and maintenance points. Some external components will be at different locations for different engine models.

©Cummins Inc

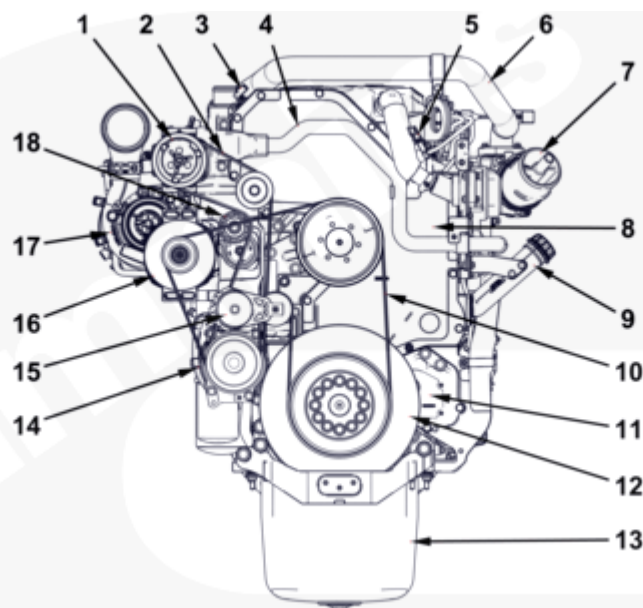


0000022

Front View

1. Refrigerant compressor
2. Refrigerant compressor belt drive
3. Camshaft position sensor
4. Naturally aspirated air compressor tube
5. Crankcase breather pressure sensor
6. Exhaust gas recirculation (EGR) crossover tube
7. Air intake connection
8. Gear housing cover, upper
9. Lubricating oil fill tube
10. Water pump belt drive
11. Gear housing cover, lower
12. Vibration damper
13. Lubricating oil pan
14. Water pump, dual outlet
15. Belt tensioner, water pump
16. Alternator

17. Turbocharger, variable geometry
18. Belt tensioner, refrigerant compressor.


©Cummins Inc

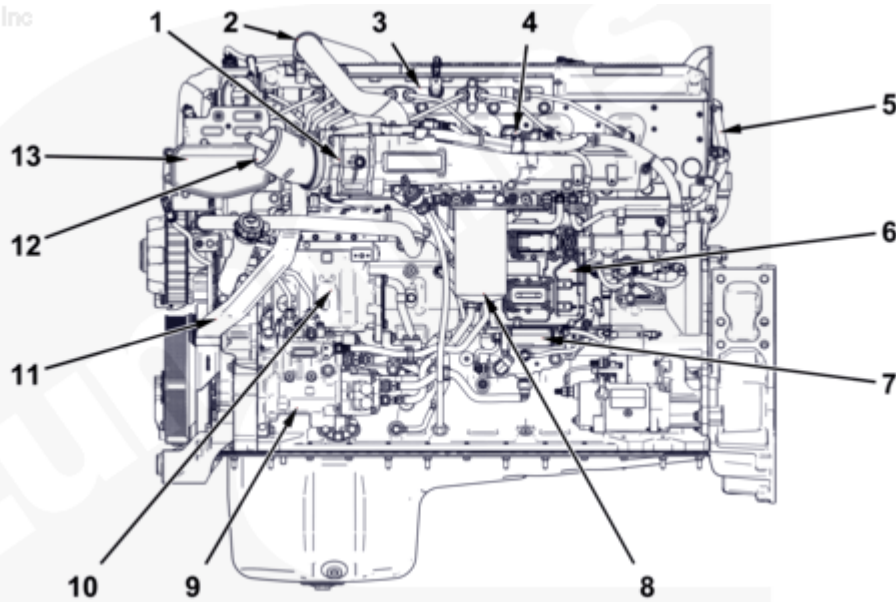

00400681

Left Side View


1. Intake air throttle
2. EGR crossover tube
3. Fuel rail
4. Cylinder head wiring harness pass-through connector
5. Cylinder head fuel return line
6. Engine control module (ECM)
7. Fuel lift pump
8. Fuel filter
9. Fuel pump
10. Air compressor
11. Crankcase breather vent tube
12. Air intake connection
13. Crankcase breather housing.

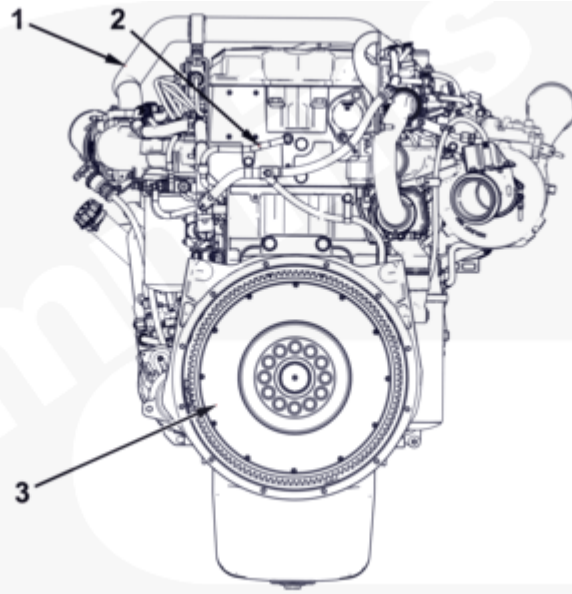

00400682

Rear View

1. EGR crossover tube
2. Cylinder head fuel return line
3. Flywheel.

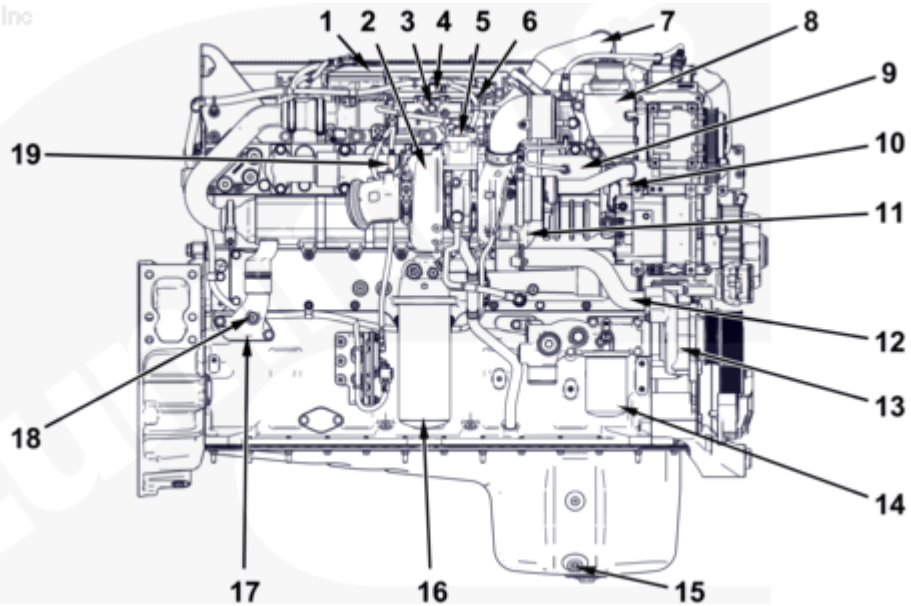


00400683

Right Side View

1. EGR valve
2. Turbocharger heat shield
3. EGR orifice pressure sensor
4. EGR differential pressure sensor
5. Variable geometry turbocharger actuator, electric
6. EGR temperature sensor
7. EGR crossover tube
8. Thermostat housing
9. Exhaust manifold

10. Exhaust manifold heat shield
11. EGR cooler
12. EGR cooler coolant inlet tube
13. Water pump, dual outlet
14. Coolant filter, if equipped (use of coolant filter(s) is optional when using coolants meeting Cummins' Coolant Requirements)
15. Lubricating oil drain plug
16. Lubricating oil filter
17. EGR cooler coolant return tube
18. Aftertreatment coolant supply port
19. Aftertreatment intake NOx sensor.

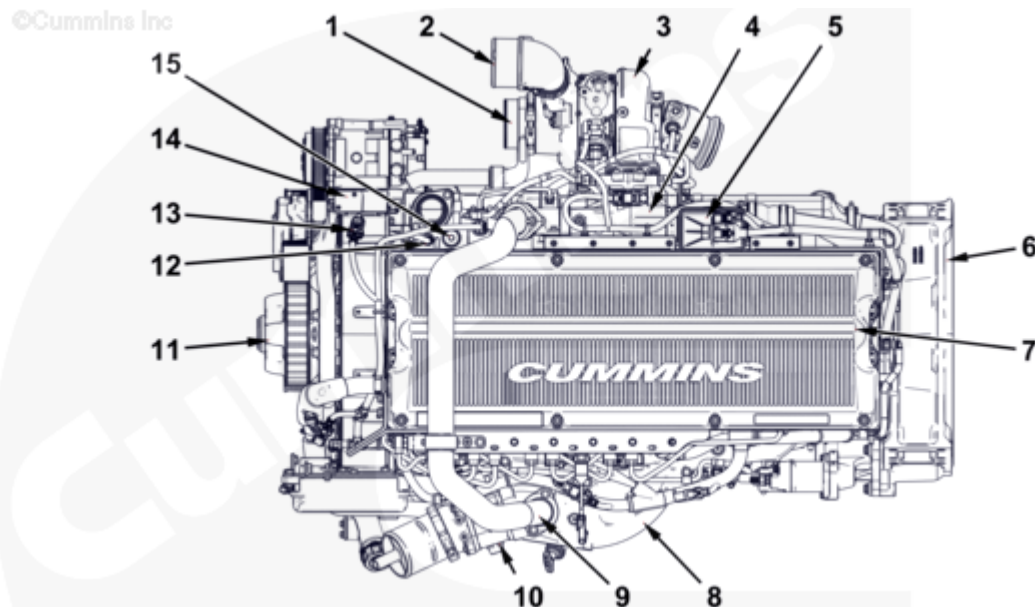

Top View

1. Turbocharger air inlet
2. Turbocharger compressor outlet
3. Turbocharger, variable geometry
4. Exhaust mass flow measurement
5. EGR valve
6. Flywheel housing
7. Rocker lever cover
8. Air intake manifold
9. Air intake throttle
10. EGR crossover tube
11. Fan hub
12. Coolant temperature sensor
13. Camshaft position sensor
14. Exhaust gas pressure sensor
15. Refrigerant compressor.

