

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Oil filter wrench, Part Number 3400157, or equivalent

Additional Service Items

- No additional service items required.


General Information

A combination oil filter is present on the engine. The upper portion of the combination filter contains the full-flow Stratapore filter element, while the lower portion contains the full-flow NanoNet element.

The combination filter design has been optimized to distribute oil flow during normal engine operation; however, during extreme engine oil conditions (additive dropout, contamination, soot etc.) the improvements increase the overall filtration effectiveness.

Oil circulates through the Stratapore full-flow portion of the filter, into the oil cooler housing, and is directed to the engine oil rifles.

A smaller portion of the oil circulates through the lower NanoNet full-flow portion of the filter and is directed to the engine oil rifles.

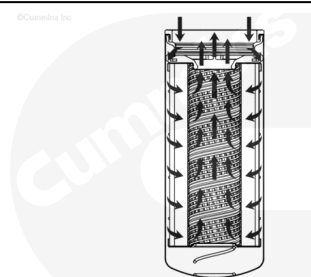


Refer to Procedure 018-003 in Section V (</qs3/pubsys2/xml/en/procedures/377/377-018-003.html>) in the X15 CM2350 X114B Operation and Maintenance Manual, Bulletin 5411182.



Refer to Service Bulletin, Cummins® Engine Oil and Oil Analysis Recommendations, Bulletin 3810340 (/qs3/pubsys2/xml/en/bulletin/3810340.html), for additional oil information.

See the accompanying chart to determine the best weight oil for the engine operating conditions.

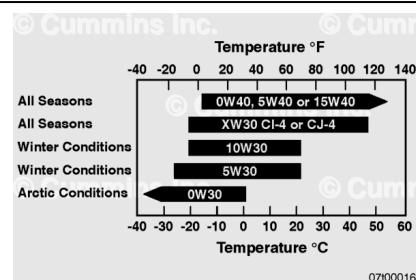

Remove


⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

Use oil filter wrench, Part Number 3400157, or equivalent, to remove the oil filter.

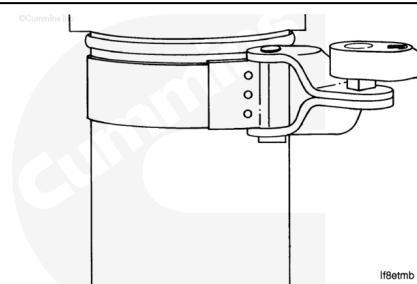


Install

Note : The o-ring can stick to the filter head. Make sure it is removed before installing a new filter.

Clean the oil filter head surface.

Use clean engine oil to lubricate the gasket surface of the filter.

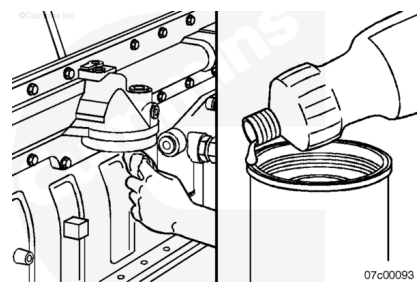


⚠ CAUTION ⚠

Mechanical overtightening can distort the threads or damage the filter element seal.

Fill the oil filter with clean engine oil.

Install the oil filter onto the oil filter head. Tighten the filter until the gasket contacts the filter head surface.

Use oil filter wrench, Part Number 3400157, or equivalent, to tighten the filter an additional 3/4 to 1 full turn, or follow the instructions supplied with the filter.

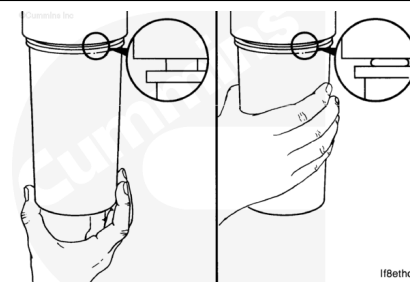

Confirm the oil level in the pan is to the FULL mark.

Operate the engine until the water temperature reaches 82°C [180°F].

Check the oil pressure. Check for leaks.

