


Trainings ▾

Remove


Clean the area around the fuel pump pressure sensor.

Disconnect the sensor (1) from the engine harness.

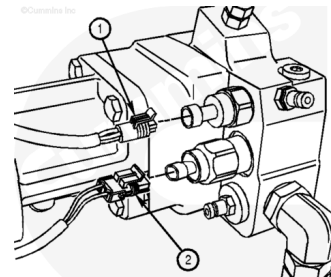

19400779

Remove the fuel pump pressure sensor.

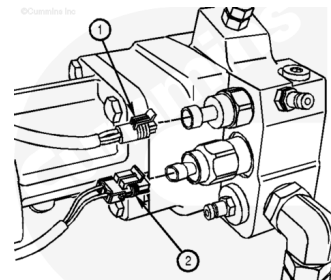

19400779


Install

Install a new o-ring on the sensor. Use clean engine oil to lubricate the sensor o-ring.

Install the new fuel pump pressure sensor.

Torque Value: 14 n•m [124 in-lb]

Connect the sensor connector to the pressure sensor (1).

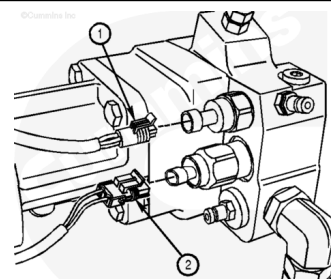

19400779

