


Trainings ▾

General Information

⚠ CAUTION ⚠

The fracture split connecting rod requires a different large end rod bearing than the saw cut connecting rod. The bearings are specific to the connecting rod design and are not backward compatible. The oil drilling in the connecting rod and upper bearing shell will not be aligned if the wrong bearing is used. If the bearings are mismatched with the rod design, severe engine damage could occur.

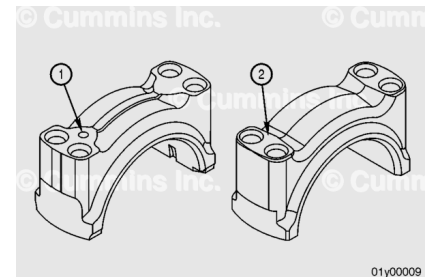

⚠ CAUTION ⚠

To prevent damage to the fracture split connecting rod, do not set the connecting rod or rod cap on the fracture split connection. This can cause polishing and damage to the mating surface.

There are two styles of connecting rod assemblies on the ISX15 and QSX15 engines.

Newer model engines use a fracture split (1) connection between the connecting rod and connecting rod cap.

Older model engines use a saw cut (2) connection between the connecting rod and connecting rod cap.

It is important to understand if the rod has a fracture split or a saw cut connection before continuing with this procedure. The fracture split connecting rod will have a visible hole drilled in the cap.

Note : Saw cut connecting rod assemblies may be mixed with fracture split connecting rod assemblies within the same engine.


Connecting rods with a fracture split surface **must** be treated with additional caution. The two pieces of the connecting rod can **not** be rubbed together. This will damage the mating surfaces. Use care to **not** drop either piece of the connecting

rod. Fracture split connecting rods **must only** be handled if the two pieces of the connecting rod are tightened to the correct specification, or completely separated.

Preparatory Steps

Note : The piston and connecting rod must be removed as an assembly on Signature™, ISX, and QSX15 engines.


- Remove and disassemble the piston and connecting rod assembly. Refer to Procedure 001-054 in Section 1. (</qs3/pubsys2/xml/en/procedures/10/10-001-054-tr.html>)

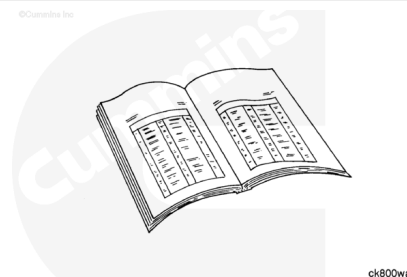

Clean and Inspect for Reuse


⚠ CAUTION ⚠

Prevent damage to the capscrews. Nicks in the body of the capscrew can cause an area of stress that can fail during engine operation. Damage to the threads will cause torque values to be incorrect and will damage the mating parts.

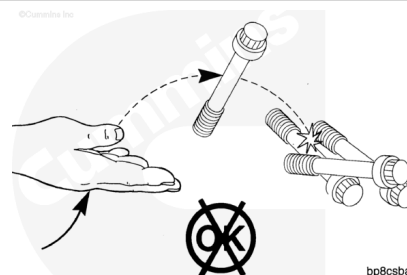

⚠ CAUTION ⚠

Repair of rolled threads by use of a thread die is not recommended. The die can create a sharp corner on the minor diameter (root) of the threads. This sharp corner can cause an area of increased stress.

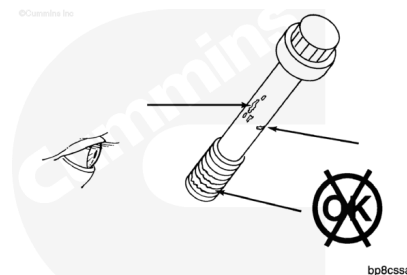

Inspect the capscrews for the following:


- Damaged threads
- Rust or corrosion-caused pitting
- Nicks, bends, stretched, or galled.

The capscrew **must** be replaced if it has any of the listed damages.

Perform capscrew measurements to evaluate stretch.

Measure the capscrew diameter above the threads.

Connecting Rod Capscrew Outside Diameter		
mm		in
11.10	MIN	0.437

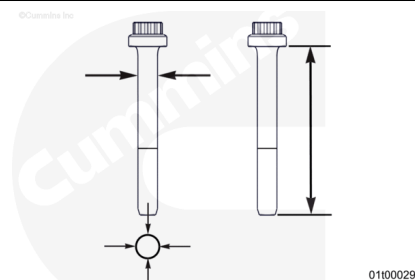


Measure the capscrew length from the bottom face of the flange head to the bottom of capscrew.

Connecting Rod Capscrew Length		
mm		in
101.00	MAX	3.976

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious injury.

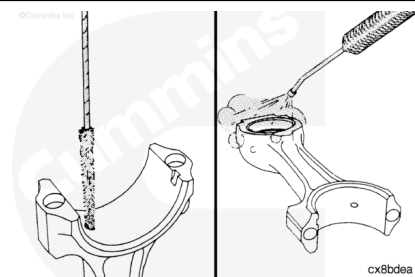

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.


Use solvent or steam to clean the capscrews, connecting rod, and connecting rod cap.

Dry with compressed air.

Use a soft bristle brush to clean the oil drilling.


Inspect the connecting rod and connecting rod cap for damage.

Replace the connecting rod if the I-beam or connecting rod cap is damaged.

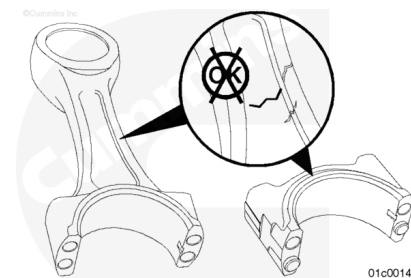

Saw Cut Connecting Rods

- Inspect the connecting rod and connecting rod cap for fretting damage on the mating surfaces.
- The connecting rod and connecting rod cap **must** be replaced as an assembly if fretting damage is visible on either piece.
- Polishing may be observed on the thrust face of the connecting rod or rod cap, which is normal. Use the following procedure for inspection criteria. Refer to Procedure 001-007 in Section 1.
(/qs3/pubsys2/xml/en/procedures/10/10-001-007-tr.html)

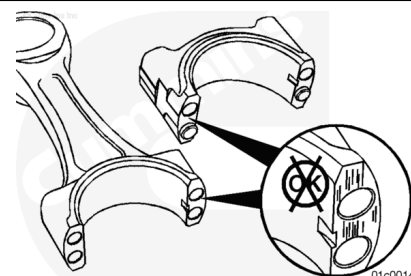


Fracture Split Connecting Rods

- Polished spots on either the connecting rod or connecting rod cap mating surfaces indicate fretting and the rod **must** be replaced. The connecting rod and connecting rod cap **must** be replaced as an assembly if fretting damage is visible on either piece.
- Dark areas on the face indicate carbonized oil deposits. Connecting rods with dark areas are reusable if there is no fretting present.
- The fracture joint may produce debris at each separation. Use solvent and a nylon bristle brush to clean the contact surfaces between the connecting rod and connecting rod cap.
- Polishing may be observed on the thrust face of the connecting rod or rod cap, which is normal. Use the following procedure for inspection criteria. Refer to Procedure 001-007 in Section 1.
(/qs3/pubsys2/xml/en/procedures/10/10-001-007-tr.html)

Check the bearing surface for nicks or burrs.

If it is **not** possible to remove any nicks or burrs with a fine emery cloth, the connecting rod **must** be replaced.

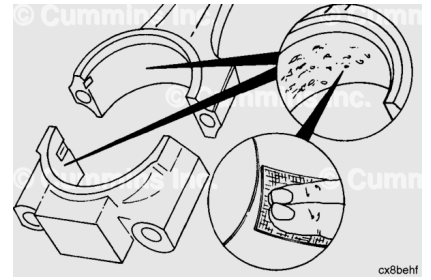


Inspect the rod pin bushing for damage.

Replace any piston pin bushing that has evidence of scoring, galling, or scuffing.


Replace any bushing that has turned in the bore.

Special tools and precision machining are required to replace bushings. If Cummins Inc. approved tools and procedures are **not** available, the connecting rod **must** be replaced.

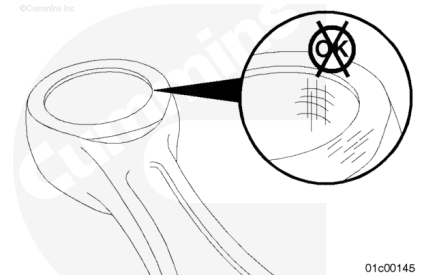

⚠ CAUTION ⚠

The connecting rod cap alpha characters must match the alpha characters on the connecting rod and must be installed with the characters aligned to prevent damage to the connecting rods and crankshaft.

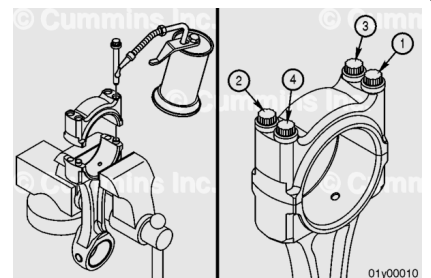

⚠ CAUTION ⚠

Use a vise with brass jaws to hold the connecting rod. Notches, scratches, or dents in the I-beam area can cause engine failure.

Place the connecting rod into a vise with brass jaws. Support the connecting rod at the large bearing end to avoid I-beam damage.

Install the connecting rod cap onto the connecting rod.


Lubricate the threads of the capscrews with clean engine oil.

Thread the capscrews into the connecting rod and hand tighten.

The procedure for tightening used capscrews is different than the procedure for tightening new capscrews. Refer to Procedure 001-054 in Section 1.

(qs3/pubsys2/xml/en/procedures/10/10-001-054-tr.html)

Measure the connecting rod crankshaft bore inside diameter with a bore dial indicator.

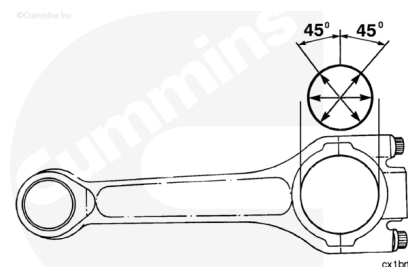

Connecting Rod Crankshaft Bore Inside Diameter


mm		in
98.801	MIN	3.890
98.839	MAX	3.891

Fracture Split Connecting Rod Crankshaft Bore Inside Diameter

mm		in
99.621	MIN	3.922
99.659	MAX	3.924

If the connecting rod crankshaft bore inside diameter is **not** within specifications, the connecting rod **must** be replaced.

Measure the connecting rod piston pin bushing inside diameter.

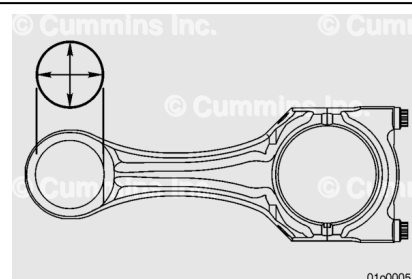

Machine Style Connecting Rod Piston Pin Bushing Inside Diameter

mm		in
63.550	MIN	2.5020
63.570	MAX	2.5030

Fracture Split Style Connecting Rod Piston Pin Bushing Inside Diameter

mm		in
63.542	MIN	2.5017
63.558	MAX	2.5023


If the connecting rod piston pin bushing inside diameter is **not** within specifications, the connecting rod **must** be replaced.

Bend and Twist Inspect

Calibration Procedure

A connecting rod of known length, bend, and twist is called the reference connecting rod, and is required to calibrate the fixture.

A new connecting rod, for which the distance from the center of the crankshaft bore to the center of the piston pin bore (rod length) is known, can also be used.

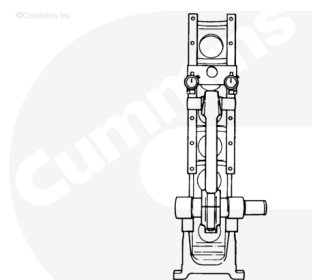


The connecting rod cap **must** be installed and tightened to the correct specifications or the calibration will be incorrect.

Install the connecting rod checking guides, Part Number 4918336 and Part Number 4918338, into the reference connecting rod piston pin bore and center the guide.

Install the appropriate connecting rod checking guide into the reference connecting rod crankshaft bore.

Make sure the pin on the guide is down and centered in the connecting rod.

Lock the guide in position by rotating the end of the guide.

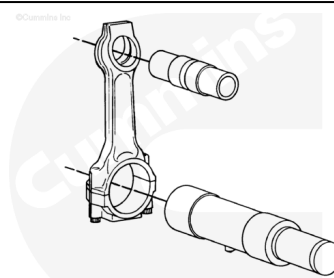


Install the reference connecting rod into the connecting rod checking fixture, Part Number ST-561.

Loosen the knob and move the indicator bracket until both indicators touch the top of the piston pin guide.

Move the bracket toward the guide until the indicator needles have moved approximately 0.25 mm [0.010 in].


Turn the knob to tighten the bracket.

Adjust the indicator needles to zero. Move the connecting rod in and out to confirm the zero setting.

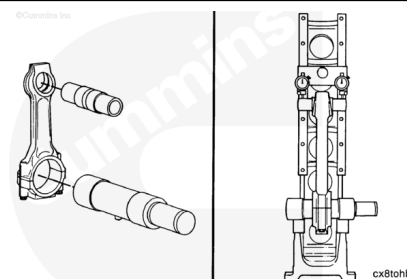

Remove the reference connecting rod from the fixture.

Rotate the connecting rod 180 degrees horizontally and install it into the fixture.

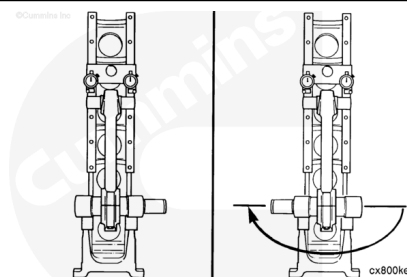


Be sure the indicators are at the zero setting.

If the indicator needles do **not** return to zero, adjust the indicator so the zero moves $\frac{1}{2}$ of the indicated difference from the needle to the zero established during the previous step.

If the needle is more than 0.10 mm [0.004 in] from the zero established during the previous step, check for dirt or burrs on the connecting rod checking guides and fixture. If the zero is still **not** within the specification, check to make sure the reference connecting rod is **not** damaged.

Do **not** adjust the indicators after this step of the procedure or the measurements will be incorrect.


After completing the calibration of the fixture, remove the reference connecting rod.

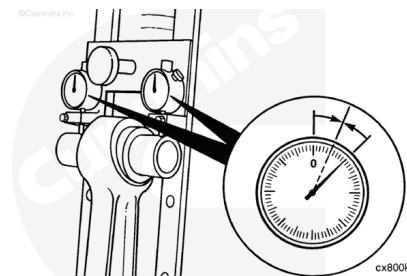

Test

⚠ CAUTION ⚠

To reduce the possibility of engine damage, the connecting rod testing fixture must be calibrated prior to testing the connecting rod.

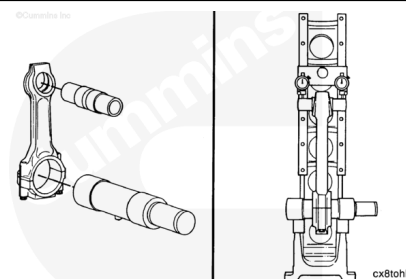

Install the appropriate mandrel in the piston pin end of the connecting rod.

Make sure the locating pin in the mandrel for the crank pin end is touching the connecting rod cap, directly opposite the beam of the connecting rod.

Install the mandrel in the crank pin bore of the master connecting rod.

Tighten the mandrel so it is centered in the bore correctly.

Install the master connecting rod in the testing fixture.

Loosen the knob and move the indicator bracket until both indicators touch the top of the piston pin end mandrel. Move the bracket toward the mandrel until the indicator needles have moved approximately 0.25 mm [0.010 in]. Turn the knob to tighten the bracket.

Adjust the indicator needles to zero. Move the master connecting rod in and out to confirm the zero setting.

Remove the master connecting rod from the fixture.

Rotate the connecting rod 180 degrees horizontally and install it in the checking fixture.


Record the indicator reading. The difference calibrated "0" of the indicator **must** be added or subtracted from the known length of the master connecting rod to determine the length of the connecting rod being measured.

Connecting Rod Length		
mm		in
261.45	MIN	10.293
261.55	MAX	10.297

If the connecting rod length is **not** within specifications, the connecting rod **must** be replaced.

⚠ CAUTION ⚠

Never attempt to straighten a connecting rod with the use of heat or force. The connecting rod can eventually break and cause extensive engine damage.

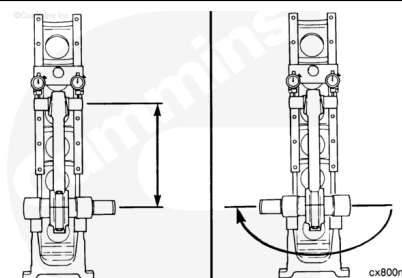

Record indicator readings.

Remove the connecting rod from the fixture.

Turn the connecting rod 180 degrees horizontally and install it into the checking fixture.

Compare the indicator readings with those noted in the previous step. The difference between the indicator readings is the amount of bend in the connecting rod.


Maximum Connecting Rod Bend (Bushing Installed)		
mm		in
0.100	MAX	0.004

If the connecting rod bend is **not** within specification, the connecting rod **must** be replaced.

Note : Due to component stack up and variation, measuring top dead center (TDC), piston height is **not** an accepted measurement method for connecting rod bend.

⚠ CAUTION ⚠

Never attempt to straighten a connecting rod with the use of heat or force. The connecting rod can eventually break and cause extensive engine damage.

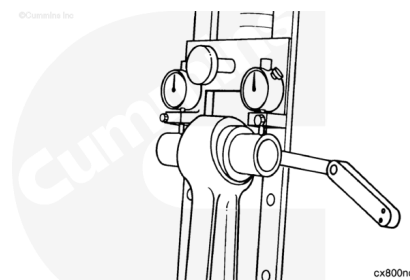

Check the fixture and mandrel in the piston pin end for a gap between the two. If there is any twist in the connecting rod, the mandrel will touch **only** one side of the fixture.

Hold the end of the mandrel that is touching the fixture firmly against the fixture.

Use a feeler gauge to measure the gap between the mandrel and the fixture. The amount of gap between the mandrel and the fixture is the amount of connecting rod twist.

Maximum Connecting Rod Twist (Bushing Installed)		
mm		in
0.25	MAX	0.010

If the connecting rod twist is **not** within specification, the connecting rod **must** be replaced.

Magnetic Crack Inspect

This procedure describes the magnetic particle inspection for the connecting rod and connecting rod cap.


Use a magnetic particle testing machine.

The connecting rod and connecting rod cap **must** be assembled during this process.

Use the residual method. Apply head shot amperage. Adjust the amperage to 1500 ampere direct current or rectified alternating current.

Check for cracks.


The connecting rod **must** be replaced if any cracks are visible.

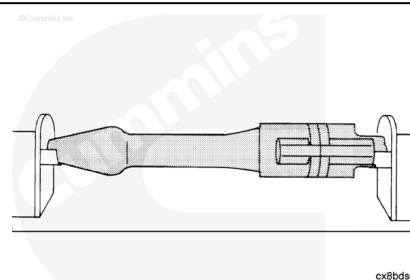

Use the residual method. Apply coil shot amperage.


Amperage (Ampere Turns)	
Minimum	Maximum
2600 amps direct current	2800 amps direct current

Ampere turn is an electrical current of one ampere flowing through the coil, multiplied by the number of turns in the coil.

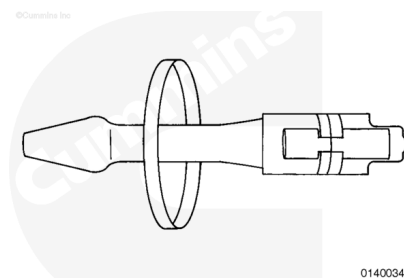


Check for cracks.

The connecting rod **must** be replaced if any indications are visible in the critical (shaded) areas.

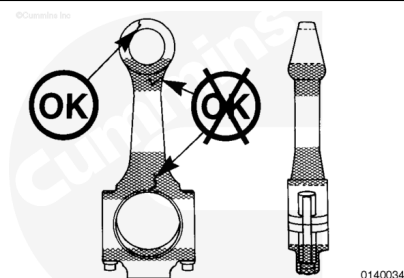

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious injury.

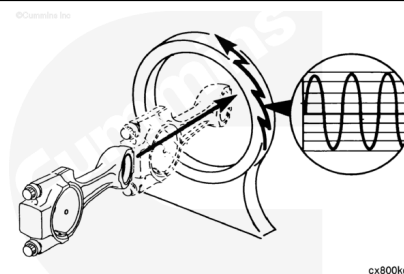

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.


⚠ CAUTION ⚠

The connecting rod must be demagnetized completely and cleaned thoroughly. Any small metal particles will cause engine damage.

Demagnetize the connecting rod.


Use solvent or steam to clean the connecting rod.

This procedure describes the magnetic particle inspection for the connecting rod capscrew.

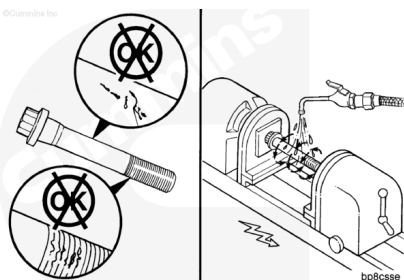

Use a Magnaflux™ or similar magnetic particle testing machine.


Use the continuous method. Apply a head shot of 300 to 400 amperes direct current or rectified alternating current.

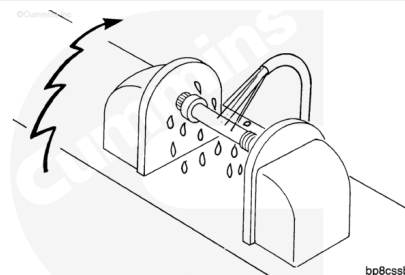

Use an ultraviolet light. Check for indications of cracks.

The magnetic particles tend to form on sharp corners and edges. Do **not** mistake these for cracks.


Any indications of cracks are **not** acceptable.

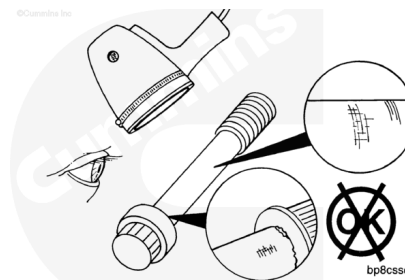

Prepare the machine for a coil shot.


Make sure the capscrew is near one side of the coil and **not** in the center.

Apply 1000 to 1350 ampere-turns.

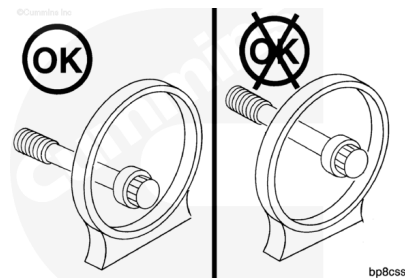

Use an ultraviolet light. Check for indications of cracks.

Any indications of cracks are **not** acceptable.

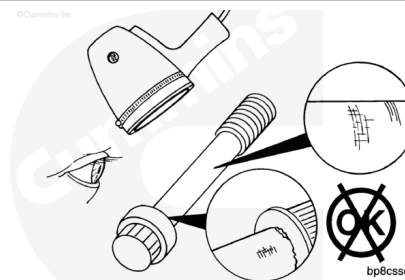

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠


Wear eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ CAUTION ⚠

The connecting rod must be demagnetized completely and cleaned thoroughly. Any small metal particles will cause engine damage.

Demagnetize the capscrew thoroughly.

Use solvent to clean the capscrew and dry with compressed air.

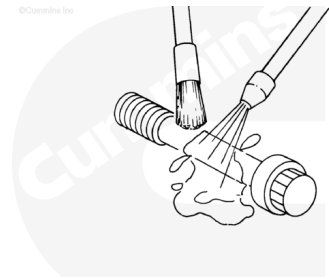


bp8csea

Finishing Steps

Note : The piston and connecting rod must be installed as an assembly on Signature™, ISX, and QSX15 engines.

- Assemble and install the piston and connecting rod. Refer to Procedure 001-054 in Section 1.
(</qs3/pubsys2/xml/en/procedures/10/10-001-054-tr.html>)

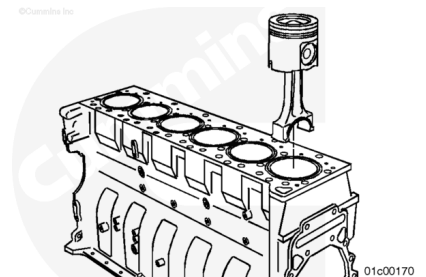

01c00170