


Measure

Remove the fuel drain hose and install adapter, Part Number ST-434-1.

Install a 0-763 mm-Hg [0-30 in Hg] pressure gauge onto the adapter.

Operate the engine at high idle and no load. Check and record the restriction reading.

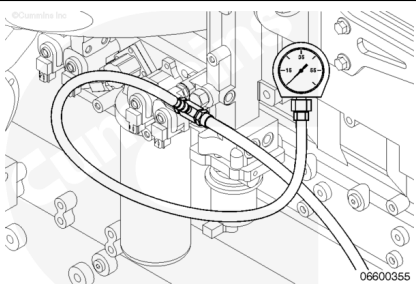

Fuel Drain Line Restriction				
	mm-hg		in-hg	
With Check Valve		165	MAX	6.5
Without Check Valve		229	MAX	9

The ‘with check valve’ specification refers to applications with fuel tanks mounted where the maximum fuel level of the fuel tank is at or above the engine cylinder head gasket.

If restriction exceeds specifications, inspect the drain lines for the cause of the restriction. Fuel coolers and fuel heaters can cause excessive drain line restriction. Excessive restriction can cause low power and poor fuel economy.

Remove the adapter and pressure gauge. Install the fuel drain hose.

Torque Value: 35 n•m [26 ft-lb]

If damage resulted in coolant, oil, excessive fuel, or excessive black smoke entering the exhaust system, the aftertreatment system **must** be inspected. Refer to Procedure 014-013 in Section 14. (</qs3/pubsys2/xml/en/procedures/101/101-014-013-tr.html>)

