

Trainings ▾


Drain

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

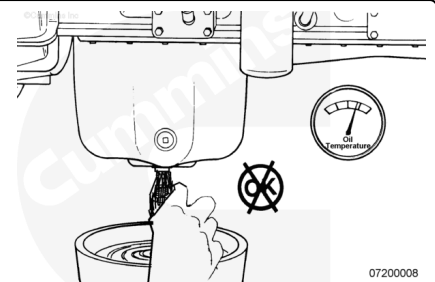


Operate the engine until the water temperature reaches 60°C [140°F]. Shut off the engine. Remove the oil drain plug. Drain the oil immediately to make sure all the oil and suspended contaminants are removed from the engine.

Remove


Remove the lubricating oil filter. Refer to Procedure 007-013 (</qs3/pubsys2/xml/en/procedures/10/10-007-013.html>).

Note : Dispose of used oil in accordance with federal, state, and local laws and regulations.

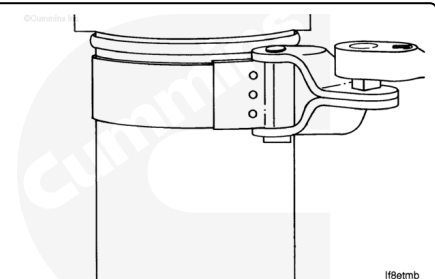

Install


Fill and install the lubricating oil filter. Refer to Procedure 007-013 (/qs3/pubsys2/xml/en/procedures/10/10-007-013.html).

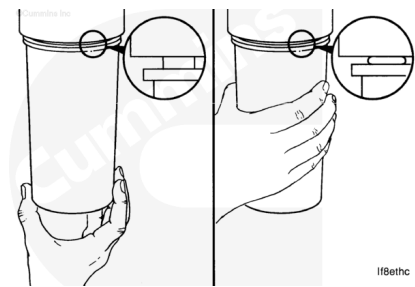

Fill


Add the specified amount of clean 15W-40 oil to fill the oil pan.

Oil Pan Capacity	
Automotive and Industrial	41.6 liters [11 gal]
Power Generation	83.3 liters [22 gal]

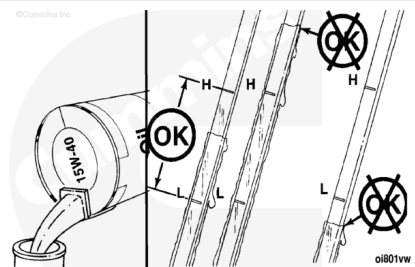

Check the oil level on the dipstick. It **must** be filled to the H (high) mark. Refer to Procedure 007-009 (/qs3/pubsys2/xml/en/procedures/10/10-007-009.html) for dipstick calibration.

Operate the engine until the water temperature reaches 82°C [180°F], and check for leaks.

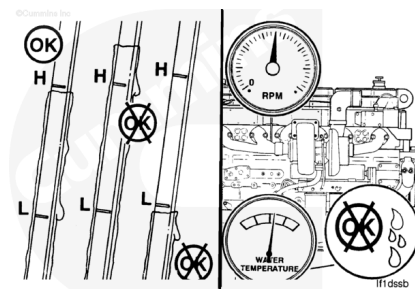

Shut off the engine. Wait 15 minutes for the oil to drain back to the oil pan.

Check the oil level. Add oil as necessary to bring the level up to the H (high) mark on the dipstick.

