

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- No recommended Cummins® service tools.

Additional Service Items

- Penetrating oil
- Standard stud extractor
- Anti-seize compound.

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.
- Remove the exhaust manifold. Refer to Procedure 011-007 in Section 11.
(/qs3/pubsys2/xml/en/procedures/10/10-011-007-tr.html)


Remove

Apply penetrating oil to the base of the turbocharger mounting stud to be removed.

Multiple applications of the penetrating oil may be necessary to free the turbocharger mounting stud. Follow the manufacturer's instructions.

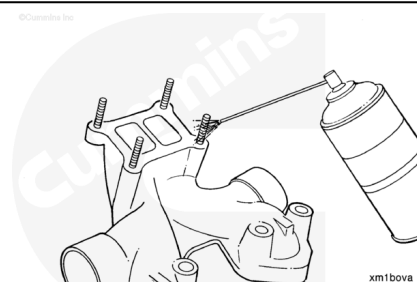


Use a standard stud extractor to remove the turbocharger mounting stud(s) from the exhaust manifold.

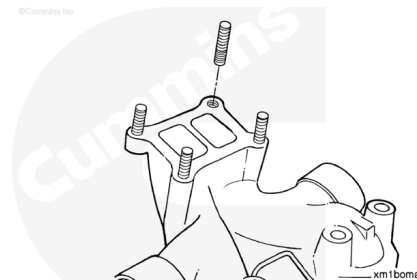

Inspect for Reuse

Visually inspect for damaged threads in the turbocharger mounting stud holes.

Visually inspect the manifold sections for cracks or other damage.

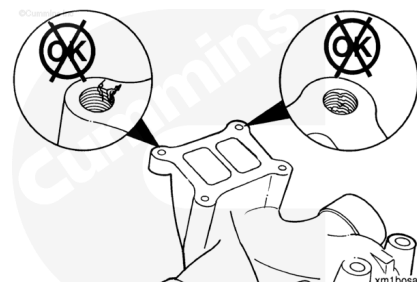

Install


Note : Install the shorter threaded end of the turbocharger mounting stud in the exhaust manifold flange.

Apply a coat of anti-seize compound to the threads.

Install the studs in the mounting flange.

Use two mounting nuts locked together to tighten the studs.

Torque Value: 20 n•m [177 in-lb]

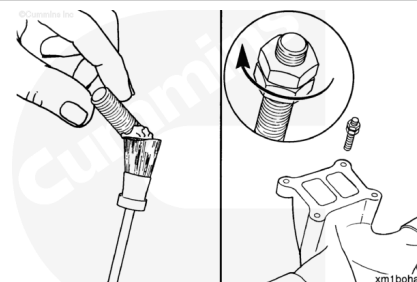

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install the exhaust manifold. Refer to Procedure 011-007 in Section 11.
(/qs3/pubsys2/xml/en/procedures/10/10-011-007-tr.html)
- Connect the batteries. See equipment manufacturer service information.