

Trainings ▾

Preparatory Steps

- Remove the rocker lever cover. Refer to Procedure 003-011 (/qs3/pubsys2/xml/en/procedures/10/10-003-011-tr.html) in Section 3.




Remove

Disconnect the engine brake wiring harness from the solenoid.

Use a 3/4 inch socket to remove the solenoid from the manifold.


Discard the three solenoid o-rings.

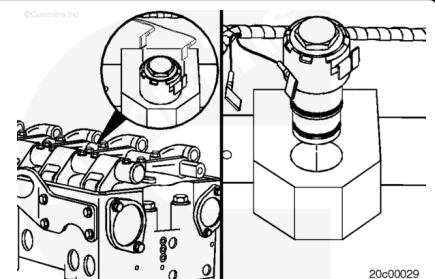

Inspect for Reuse

Check the resistance of each solenoid with the wiring harness disconnected from the solenoid.

Measure the resistance across both terminals, or from the terminal to the body of the solenoid for single wire solenoids, as indicated in the illustration.

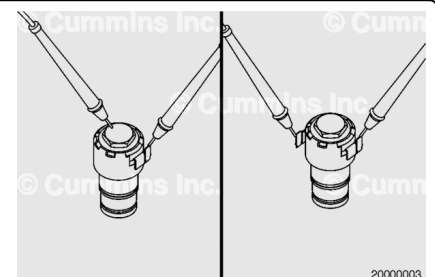

12-VDC

Cold Engine	5 to 20 ohms
Hot Engine	5 to 20 ohms

24-VDC

Cold Engine	32 to 40 ohms
Hot Engine	60 to 80 ohms

Replace the solenoid if **not** within specifications.

Inspect the engine brake wiring harness if the solenoids are within specifications.

Install

Lubricate the seal rings with clean engine oil.

Install the upper (1) and center (2) seal ring on the solenoid.


Coat the inside of the manifold with oil and place the lower seal ring (3) in the bottom of the manifold.

Install the solenoid into the manifold.

Tighten the solenoid.

Torque Value: 20 N·m [15 ft-lb]

Connect the engine brake wiring harness to the solenoid.

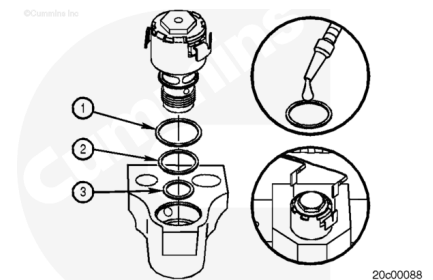

Finishing Steps

- Install the rocker lever cover. Refer to Procedure 003-011 (/qs3/pubsys2/xml/en/procedures/10/10-003-011-tr.html) in Section 3.
- Operate the engine and check for proper operation and leaks.



