


Trainings ▾

Engine Views

The following illustrations show the location of the major external engine components, filters, and other service and maintenance points. Some external components will be at different locations for different engine models.

Industrial CM570 and Power Generation without CM570


©Cummins Inc

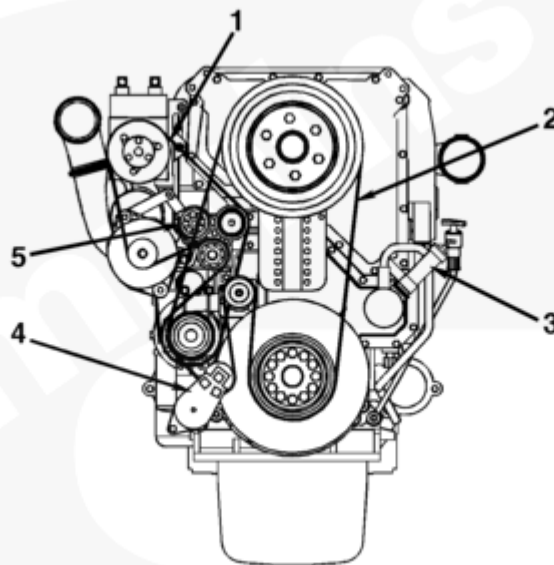

00c00056

QSX15 Industrial with CM570 - Front View


1. Accessory drive belt
2. Water pump/fan drive belt
3. Lubricating oil fill
4. Water pump/fan drive belt tensioner
5. Accessory drive belt tensioner.

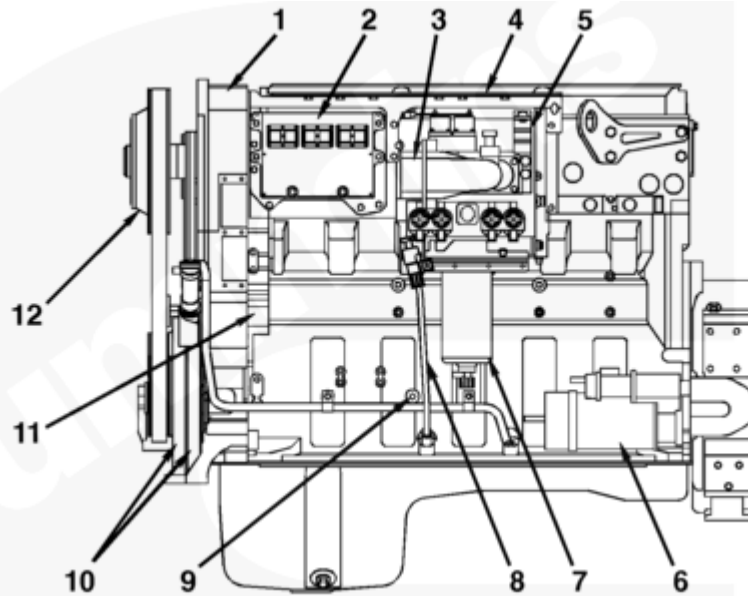

00c00064

QSX15 Industrial with CM570 - Left Side View

1. Gear housing
2. ECM
3. Air intake
4. Engine dataplate
5. Fuel pump
6. Starter
7. Fuel filter
8. Lubricating oil dipstick
9. Crankshaft timing pin port
10. Vibration dampers
11. Barring device/air compressor
12. Fan hub.

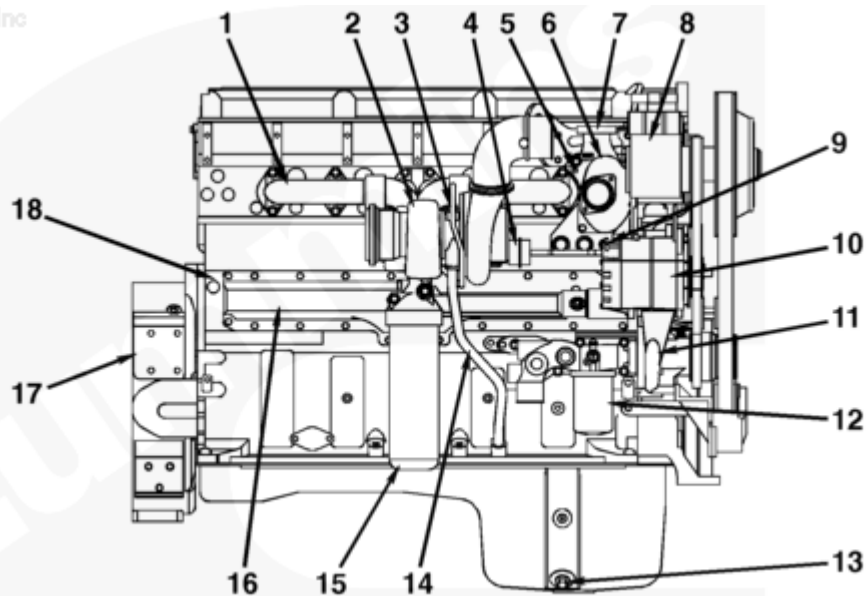


00c00065

QSX15 Industrial with CM570 - Right Side View

1. Exhaust manifold
2. Turbocharger
3. Oil inlet to turbocharger
4. Wastegate actuator
5. Thermostat housing vent
6. Thermostat housing
7. Engine coolant outlet (to radiator)
8. Freon compressor
9. Coolant temperature sensor
10. Alternator
11. Water pump
12. Coolant filter
13. Lubricating oil drain
14. Turbocharger oil drain
15. Combination full-flow/bypass lubricating oil filter
16. Lubricating oil cooler assembly
17. Flywheel housing
18. Engine serial number.


©Cummins Inc

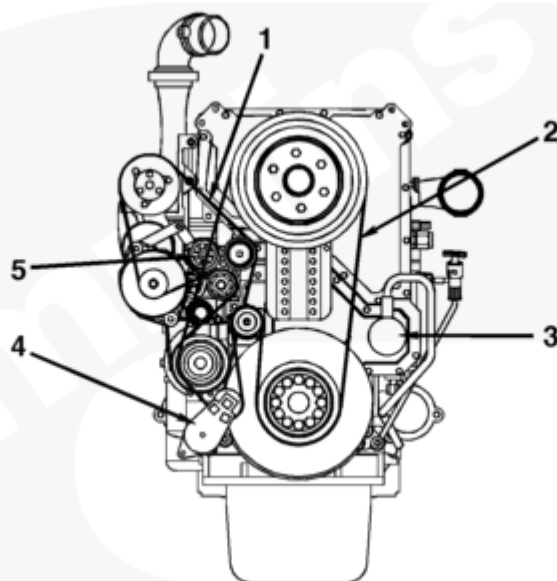

00c00069


QXS15 Power Generation without CM570 - Front View

1. Accessory drive belt
2. Water pump/fan drive belt
3. Oil fill/crankcase breather
4. Water pump/fan drive belt tensioner
5. Accessory drive belt tensioner.

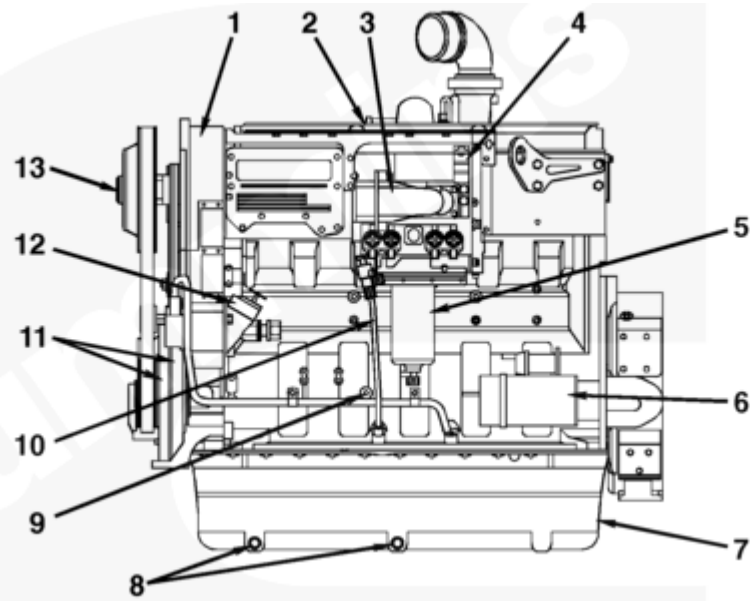

QSX15 Power Generation without CM570 - Left Side View


1. Gear cover
2. Engine dataplate
3. Air intake
4. Fuel pump
5. Fuel filter
6. Starter
7. Lubricating oil pan
8. Lubricating oil drains
9. Crankshaft timing pin port
10. Lubricating oil dipstick
11. Vibration dampers
12. Lubricating oil fill/barring device
13. Fan hub.

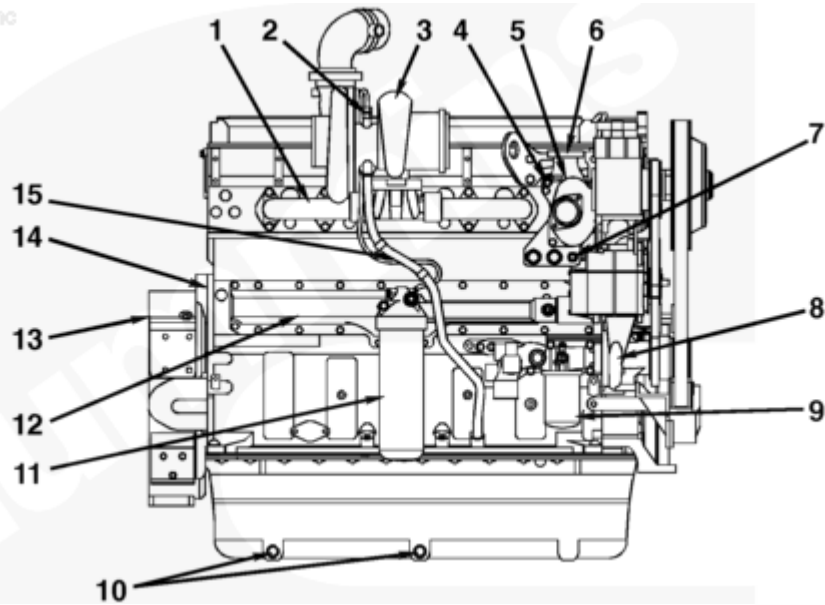

00c00068


QSX15 Power Generation without CM570 - Right Side View

1. Exhaust manifold
2. Lubricating oil Inlet to turbocharger
3. Turbocharger
4. Thermostat housing vent
5. Thermostat housing
6. Engine coolant outlet (to radiator)
7. Coolant temperature sensor
8. Water pump
9. Coolant filter
10. Lubricating oil drains
11. Combination full-flow/bypass lubricating oil filter
12. Lubricating oil cooler assembly
13. Flywheel housing
14. Engine serial number
15. Turbocharger lubricating oil drain.

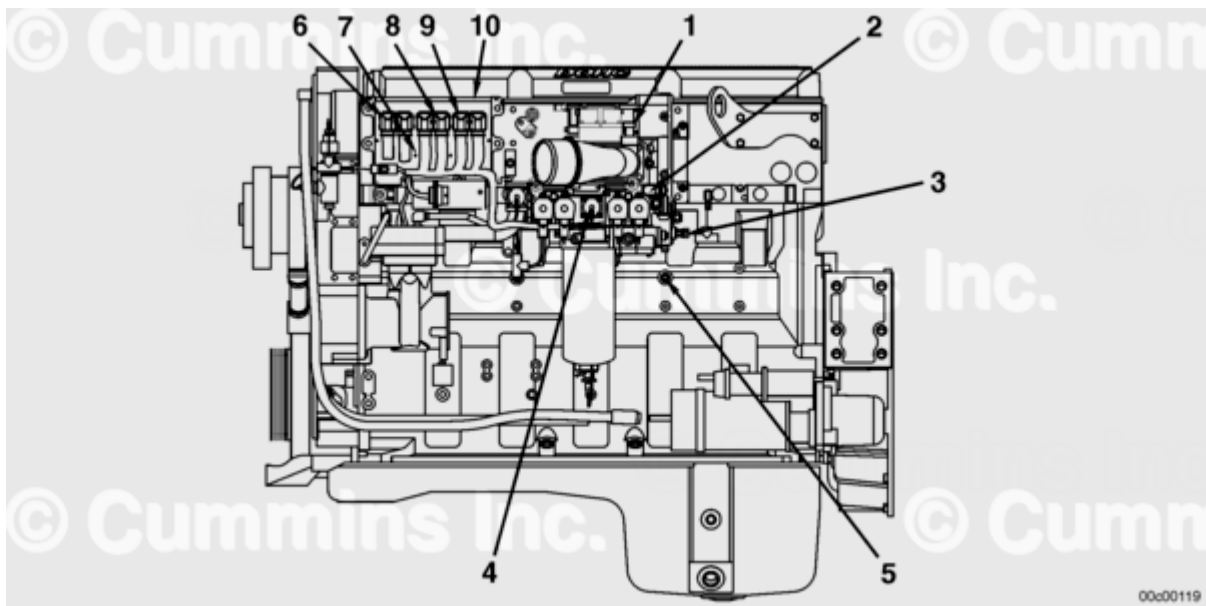

Fuel System - Left Side View

1. Intake manifold pressure/temperature sensor
2. Fuel outlet
3. Fuel inlet
4. Fuel shutoff valve
5. Oil pressure/temperature sensor
6. ECM/engine harness port (OEM)
7. ECM
8. ECM/engine harness port (actuator)
9. ECM/sensor port
10. Cooling plate (behind ECM).

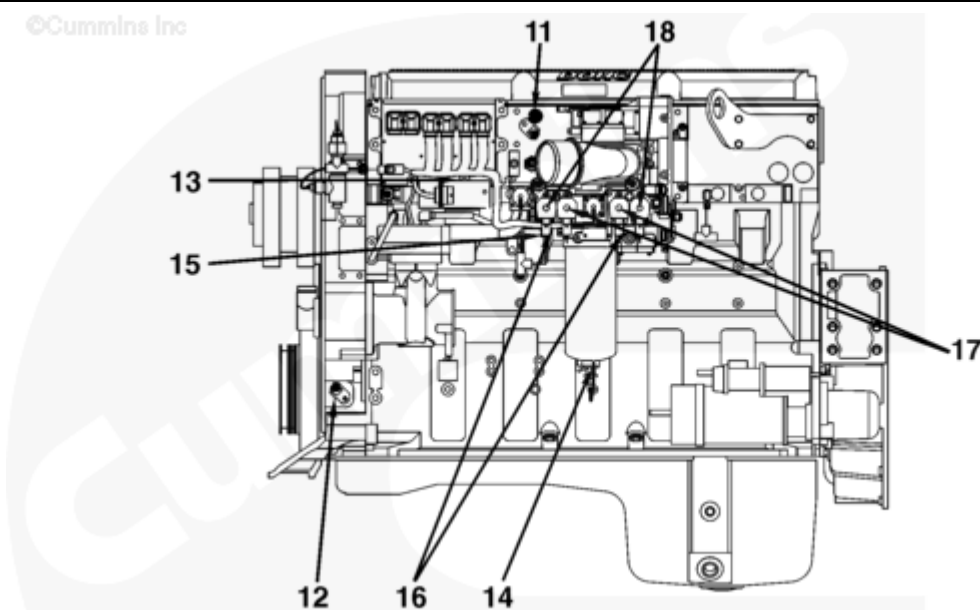


Fuel System - Left Side View (continued)

1. Camshaft position sensor
2. Crankshaft position sensor

3. Ambient air pressure sensor
4. Water-in-Fuel sensor
5. Fuel pressure sensor
6. Front and rear rail sensors*
7. Timing actuators
8. Fueling actuators.

* Eliminated on most engines


©Cummins Inc

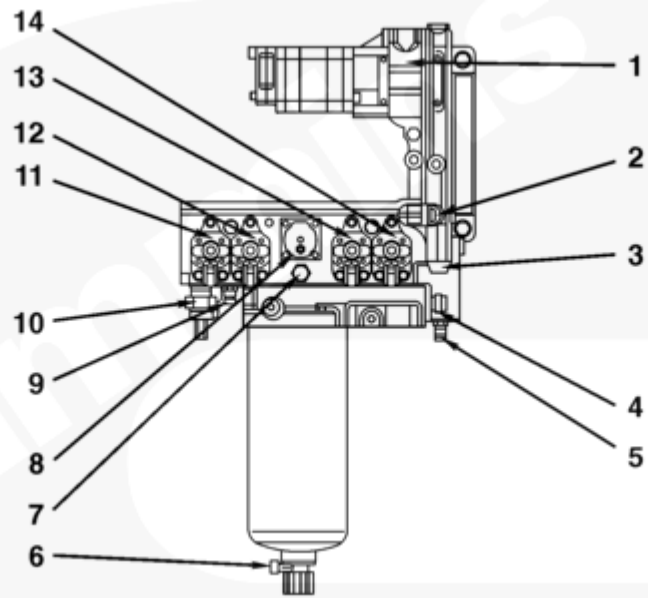

05c00047

Fuel Delivery Housing - Front View

1. Priming bypass valve (internal)
2. 320 psi pressure regulator
3. 36-micron filter screen
4. Fuel inlet
5. Quick disconnect pressure tap - suction side
6. Water-In-Fuel sensor
7. 250 psi pressure regulator
8. Fuel shutoff valve
9. Quick disconnect pressure tap - pressure side
10. Fuel pressure sensor
11. Front rail actuator
12. Front timing actuator
13. Rear timing actuator
14. Rear rail actuator.

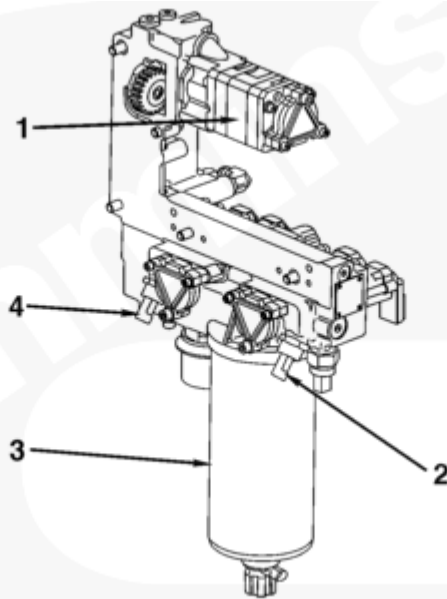

05c00048

QSX15 with CM570 Fuel Delivery Housing - Rear View

- 1. Fuel pump assembly
- 2. Front rail pressure sensor*
- 3. Fuel filter
- 4. Rear rail pressure sensor*.

* Eliminated on most engines.