

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools


- Blowby tool, Part Number 3822566, 3822567, or 3822568
- Water manometer, Part Number ST-1111-3

Additional Service Items

- No additional service items required.

Initial Check


Use INSITE™ electronic service tool, if available, or one of the blowby checking tools, Part Number 3822566, 3822567, or 3822568, and water manometer, Part Number ST-1111-3, to measure the engine crankcase pressure.

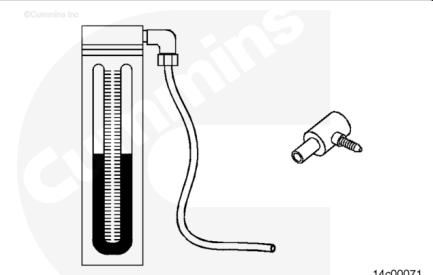

If using the blowby checking tool, connect at the end of the blowby tube. Install the water manometer to the blowby checking tool. Operate the engine at advertised horsepower rpm at full load. Observe and record the blowby.

Engine blowby **must not** exceed the maximum allowable specifications.

For crankcase breather filter change intervals, use the table in Section 2 under the Engine Blowby heading.

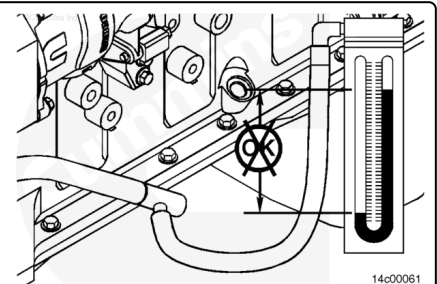

Remove


Loosen the eight cover mounting captive capscrews.

Remove the element cover.

Note : Discard the crankcase breather element in accordance with local environmental regulations.

Remove and discard the crankcase breather element.

Wipe out any excess dirt or oil from the inside of the cover.

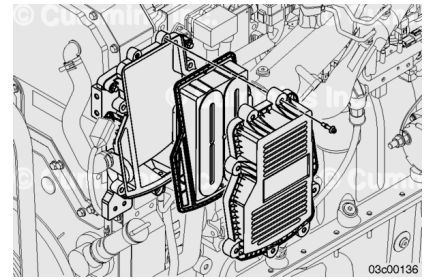


Clean and Inspect for Reuse

Wipe off any excess dirt or oil from the crankcase breather insert.

Clean the crankcase breather insert and allow to air dry.

Inspect the crankcase breather insert housing and outer seal for cuts, cracks or other damage.

Replace if damage is observed.

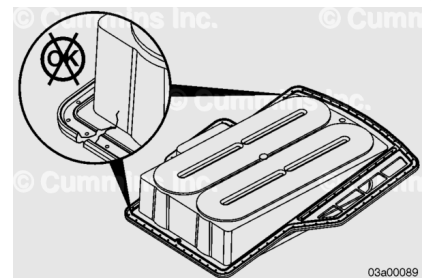

Install

Install the new crankcase breather element in the breather housing.

Make sure the element is properly seated in the housing so its seal will **not** be cut, crimped, or otherwise compromised when installing the housing cover.

Install the cover.

Tighten the eight captive mounting capscrews.

Torque Value: 5.2 n•m [46 in-lb]

