


Trainings ▾

Remove

Remove the adaptor tube gasket.

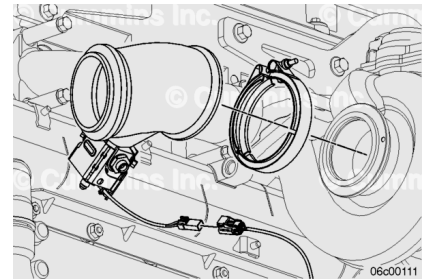

Remove the capscrews holding the injector.

Remove the injector assembly.

Cut the EZ tie holding the injector harness to the heat shield.

Discard the metal gasket.

Discard the fibrous insulator.

Discard the capscrews

