


Trainings ▾

Install

Automotive With CM871

Connect the aftertreatment injector coolant supply line to the aftertreatment injector and the EGR cooler.


Torque Value: 24 n•m [212 in-lb]

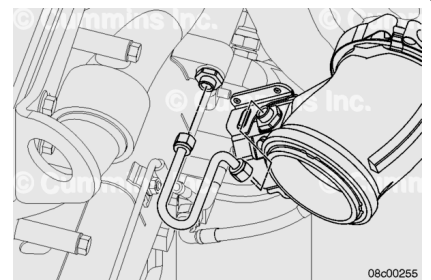

Connect the aftertreatment injector coolant return line to the oil cooler.

Connect the aftertreatment injector coolant return line to the aftertreatment injector.

Torque Value: 24 n•m [212 in-lb]

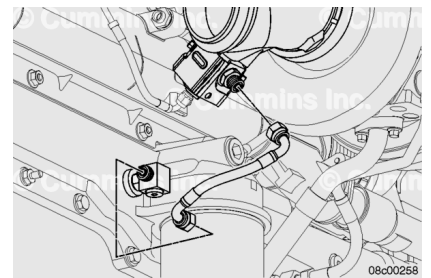


Connect the aftertreatment injector fuel supply line to the aftertreatment injector.

Torque Value: 24 n•m [212 in-lb]

Connect the aftertreatment injector fuel supply line to the outlet of the union fitting, located just above the EGR valve.

Torque Value: 24 n•m [212 in-lb]

Install the P-clips.

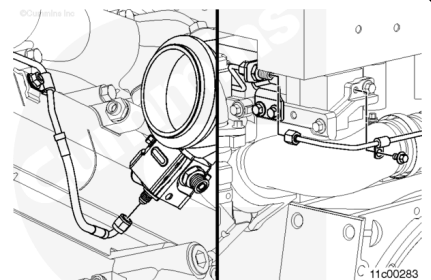


Connect the aftertreatment injector fuel supply line to the inlet of the union fitting, located just above the EGR valve.

Torque Value: 24 n•m [212 in-lb]

Connect the aftertreatment injector fuel supply line to the outlet of the fuel shutoff manifold.

Torque Value: 24 n•m [212 in-lb]

Install the P-clips.

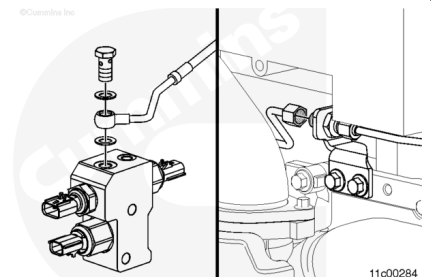


Connect the fuel return line to the fuel shutoff valve manifold and the fuel control module.

Torque Value:

O-ring joint 24 n•m [212 in-lb]


Torque Value:

Banjo joint 15 n•m [133 in-lb]

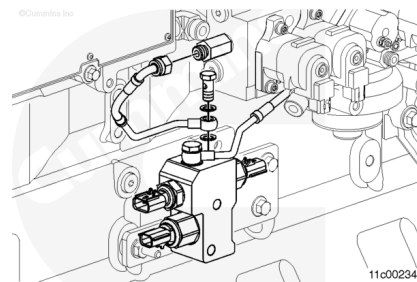

Install the two capscrews to attach the aftertreatment fuel shutoff manifold to the bracket on the engine.

Torque Value: 24 n•m [212 in-lb]

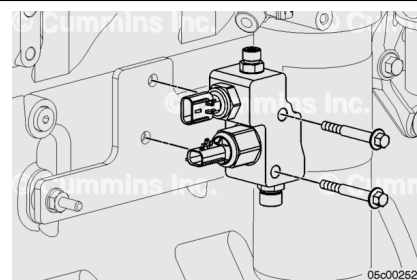

Connect the aftertreatment injector fuel supply line to the inlet of the shutoff manifold.


Torque Value:

Banjo joint 34 n•m [25 ft-lb]

Connect the aftertreatment injector fuel supply line to the fuel rifle.


Torque Value:

O-ring joint 24 n•m [212 in-lb]

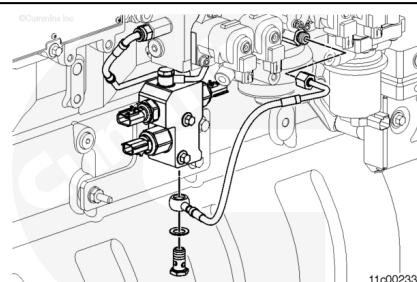

Automotive with CM876


Connect the aftertreatment injector coolant supply line to the aftertreatment injector and the coolant heater housing.

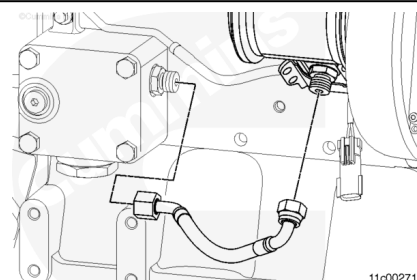

Connect the aftertreatment injector coolant return line to the coolant return line to the coolant return manifold.

Connect the aftertreatment injector coolant return line to the aftertreatment injector.

Install the P-clips.

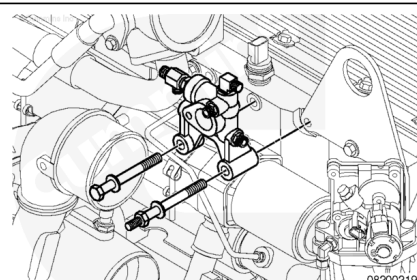


Torque Value: 24 n•m [212 in-lb]

Connect the aftertreatment injector fuel supply line to the aftertreatment injector.

Torque Value: 24 n•m [212 in-lb]

Connect the aftertreatment injector fuel supply line to the outlet of the fuel shutoff manifold.

Torque Value: 34 n•m [25 ft-lb]

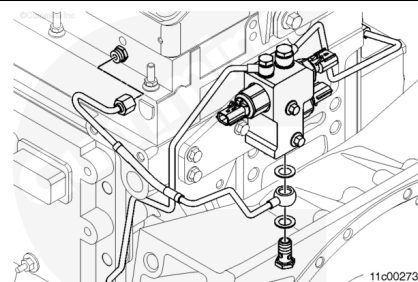

Connect the fuel return line to the fuel shutoff valve manifold and the fuel return tee fitting, located in front of the engine control module.


Install the P-clips

Torque Value:

O-ring fitting 24 n•m [212 in-lb]

Torque Value:

Banjo fitting 15 n•m [133 in-lb]

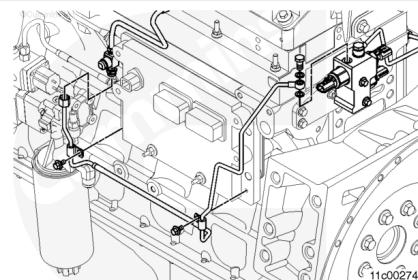

Connect the aftertreatment injector fuel supply line to the inlet of the shutoff valve manifold.

Torque Value: 24 n•m [212 in-lb]

Connect the aftertreatment injector fuel supply line to the fuel rifle.

Torque Value: 24 n•m [212 in-lb]

