

Trainings ▾

Install

Automotive With CM871

Note : The pressure sensor and shutoff valve are located on the same side of the shutoff manifold.

Note : The pressure sensor is mounted above the shutoff valve.

Install the pressure sensor, the fuel shutoff valve, and the fuel drain valve.

Torque Value:


Pressure Sensor 14 n•m [124 in-lb]

Torque Value:

Fuel Shutoff Valve 14 n•m [124 in-lb]


Torque Value:

Fuel Drain Valve 14 n•m [124 in-lb]

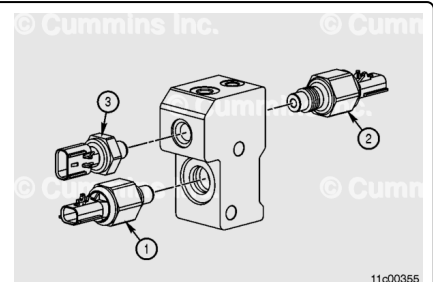

Install the two capscrews to attach the aftertreatment fuel shutoff manifold to the bracket on the engine.

Torque Value: 25 n•m [221 in-lb]

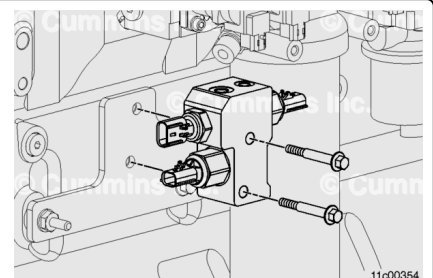

Automotive with CM876


Note : The pressure sensor and shutoff valve are located on the same side of the shutoff manifold.

Note : The pressure sensor is mounted above the shutoff valve.

Install the pressure sensor, the fuel shutoff valve, and the fuel drain valve.

Torque Value:

Pressure Sensor 14 n•m [124 in-lb]

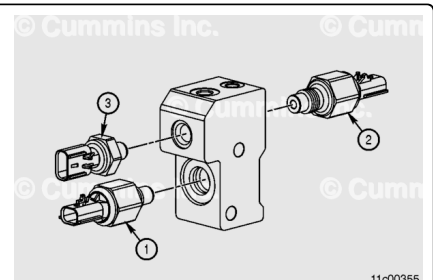

Torque Value:

Fuel Shutoff Valve 14 n•m [124 in-lb]

Torque Value:

Fuel Drain Valve 14 n•m [124 in-lb]

Install the two capscrews to attach the aftertreatment fuel shutoff manifold to the bracket on the engine.

Torque Value: 25 n•m [221 in-lb]

