


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠


Air pressure must be released from the system before removing the air governor. The governor can be under pressure and cause personal injury.

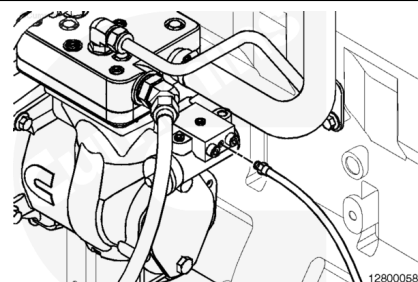

Disconnect the air governor or air governor signal line from the air compressor.

Operate the engine to activate the air compressor.

If the air system pressure does **not** rise, the unloader valve assembly is malfunctioning. Use the following procedure for repair direction. Refer to Procedure 012-003 in Section 12. (</qs3/pubsys2/xml/en/procedures/101/101-012-003-tr.html>)

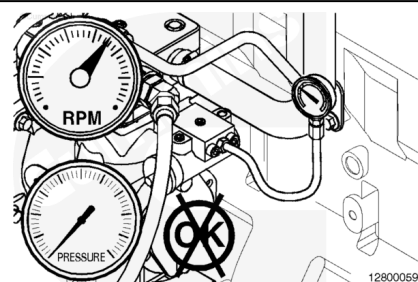


If the air compressor has multiple air governor unloader ports, install a pipe plug into one of the ports, and a shop air fitting into the other unloader port.

Connect a regulated shop air hose to the fitting in the unloader port.

Operate the engine to activate the air compressor.

When the air system pressure has reached 586 kPa [85 psi], apply 698 kPa [100 psi] of shop air pressure to the unloader port. If the vehicle air system pressure continues rising, the unloader valve assembly is malfunctioning. Use the following procedure for repair direction. Refer to Procedure 012-003 in Section 12. (</qs3/pubsys2/xml/en/procedures/101/101-012-003-tr.html>)

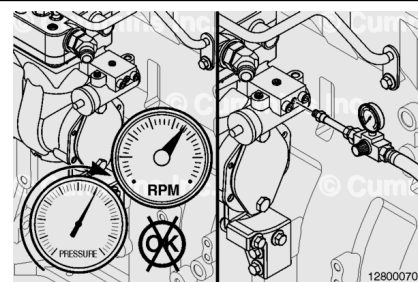

Connect the OEM air governor signal line to the air compressor unloader port.

Operate the engine to activate the air compressor. Verify that the system still builds pressure properly.

If the air system pressure continues to build beyond the governed point, the air governor is malfunctioning.

- Refer to Procedure 012-017 in Section 12.
(/qs3/pubsys2/xml/en/procedures/10/10-012-017.html)
- Refer to Procedure 012-018 in Section 12.
(/qs3/pubsys2/xml/en/procedures/10/10-012-018.html)

