


Trainings ▾

Inspect for Reuse

Verify the air governor signal line is plumbed correctly to the unloader port on the air compressor.

Disconnect and inspect the line for kinks, cuts, nicks or plugging inside the line.

Verify all unused ports (1) on the air governor are plugged except the exhaust port. The exhaust port (2) **must** be vented to the atmosphere at all times.

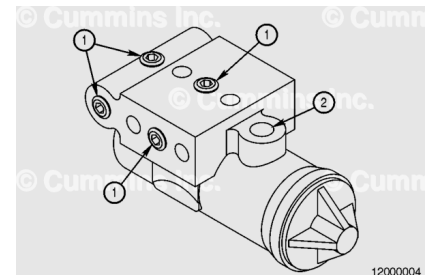

Activate the air compressor and allow the air pressure to buildup.

If pressure is reading below 125 psi according to the dash gauge, relieve 25 psi of pressure by applying the vehicle brakes to see if the air compressor starts to pump again.

If the air compressor only pumps to the level it was before then the air governor needs to be inspected for proper operation. Refer to the OEM service manual.

