

Trainings ▾


General Information

Rocker Levers


The rocker levers transmit motion from the push rod to a crosshead, allowing two valves to be compressed by a single rocker lever.

The exhaust and intake rocker levers are mounted on a common pedestal assembly, but rotate on separate shafts.

Oil is supplied through a drilling in the cylinder head through the pedestals to supply oil to the rocker lever shafts, sockets, and an adjusting screw.

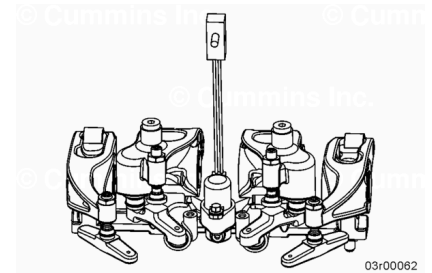


The exhaust and intake rocker levers are **not** interchangeable, and **must** be located as illustrated.

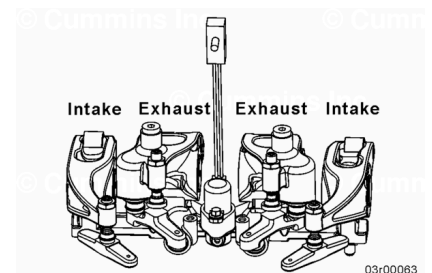

⚠ WARNING ⚠

If natural gas leaks are present, do not store the equipment inside or in any area that is covered. Severe personal injury can result from asphyxiation or explosion.

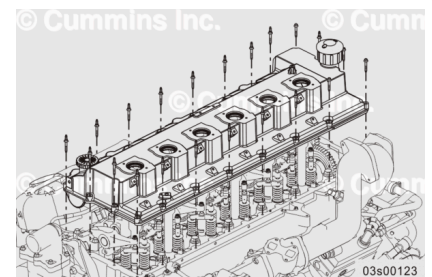

⚠ WARNING ⚠


Natural gas is explosive and flammable. Always be sure to maintain adequate ventilation in the work area. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas with shared ventilation to reduce the possibility of severe personal injury or death when working on a natural gas system.

To remove a rocker lever cover, all ignition coils need to be disconnected from wiring harness.

Rocker Lever Cover Gasket

The rocker lever cover uses a molded rubber gasket.

The molded gasket is inserted into a channel along the perimeter of the rocker lever cover.

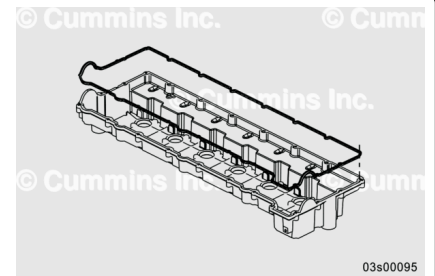


Crankcase Breather

The crankcase breather is a closed system used to separate the oil and air of blowby.

For the electric drive crankcase breather, the crankcase breather motor and filter are mounted on the left side of the engine on the rear gear housing. Oil vapor is separated by the crankcase breather motor, condensed in the breather housing, and is returned to the oil pan by external plumbing. The crankcase gases vent to the turbocharger compressor inlet.

The blowby inlet is integrated in the crankcase breather that is mounted in the cylinder block.

Some applications are equipped with pressure relief valve. The pressure relief valve is used for relieving the crankcase pressure.

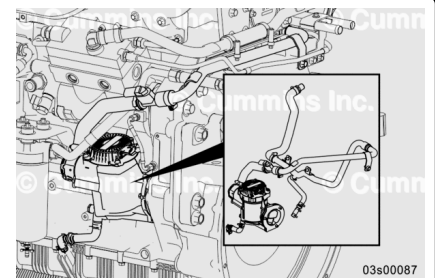

For the air drive crankcase breather, the crankcase breather is mounted on the left side of the engine on the rear gear housing. The crankcase blowby is driven from rocker lever housing to the crankcase breather. The oil vapor is separated by the crankcase breather filter, condensed in the breather housing, and is returned to the gear housing by the flange face in the breather housing. The crankcase gases vent to the turbocharger compressor inlet.

The blowby inlet connects to the rocker lever housing by external plumbing. Two types of crankcase blowby flow paths are used in different load.

