

## Trainings ▾

## Select Service Tools

### Recommended Cummins® Service Tools

- No recommended Cummins® service tools required

### Additional Service Items

- No additional service items required.

## General Information

Do **not** use a coil extension with visible physical damage.

## Preparatory Steps

### WARNING

**Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.**

### WARNING

**To reduce the possibility of personal injury, do not touch any ignition wires or components while the engine is operating, unless using suitably insulated tools.**

### CAUTION

**The engine must not be running and the ignition switch must be in the OFF position when installing or removing the ignition coil tester to reduce the possibility of personal injury or equipment damage.**


- Disconnect the batteries. See equipment manufacturer service information.
- Disconnect the ignition control harness. Refer to Procedure 013-037 in Section 13. (</qs3/pubsys2/xml/en/procedures/1016/1016-013-037.html>)
- Remove the ignition coil. Refer to Procedure 013-012 in Section 13. (</qs3/pubsys2/xml/en/procedures/1016/1016-013-012.html>)

## Remove

### ⚠ CAUTION ⚠

**Do not place coil body in clamp or vise during removal or damage may result.**


Hold the ignition coil body as illustrated and twist the coil extension **counterclockwise** to unscrew it from the ignition coil.

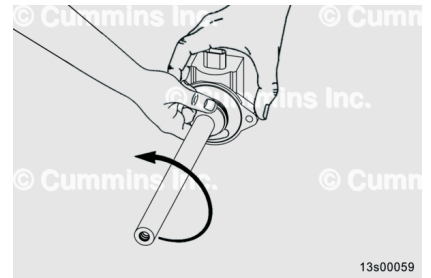

## Install

**Note :** For new coil extensions, apply Cummins Inc. approved dielectric grease to the mating surfaces between extension and coil top prior to installation.

**Note :** New coil extensions are pre-greased on the spark plug end of the coil extension and do not require any additional lubrication prior to installation.

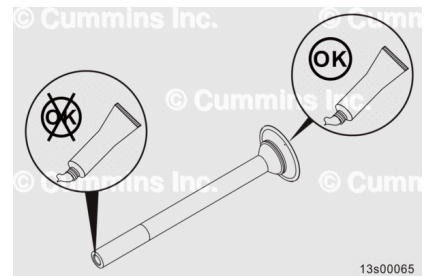


### ⚠ CAUTION ⚠

**This component can easily be cross threaded.**

### ⚠ CAUTION ⚠

**Do not use any tools to install the new coil extension. Do not overtighten the coil extension. Damage to the components can result.**

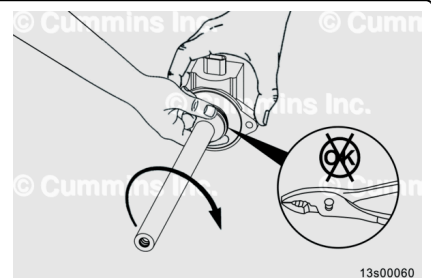

Install coil extension onto ignition coil.

- Allow the ignition coil to cool to ambient temperature before installing the new coil extension.
- Align the threads of the new coil extension with the threads on the ignition coil.
- Turn the extension **clockwise** by hand **only** until the coil extension seats against the ignition coil body.

**Note : Do not damage the threads on conductive aluminum terminal.**

## Finishing Steps

### **WARNING**

**Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.**

- Install the ignition coil. Refer to Procedure 013-012 in Section 13.  
(/qs3/pubsys2/xml/en/procedures/1016/1016-013-012.html)
- Connect the ignition control harness. Refer to Procedure 013-037 in Section 13.  
(/qs3/pubsys2/xml/en/procedures/1016/1016-013-037.html)
- Connect the batteries. See equipment manufacturer service information.
- Start the engine. Check for proper operation.