

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Cummins® electronic service tool, or equivalent

Additional Service Items

- Deep well socket.

General Information

The exhaust gas pressure sensor monitors the pressure from the exhaust and passes that information on to the Engine Control Module (ECM) through the engine harness. If the exhaust gas pressure becomes too low, it will cause a derate condition.

Preparatory Steps


WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.


Remove

Remove the two sensor shields if equipped.

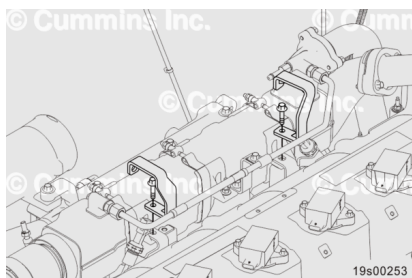

Slide the locking tab on the connector sideways. Push down on the button toward the rear of the connector and disconnect it from the sensor.

Remove the sensor from the engine.

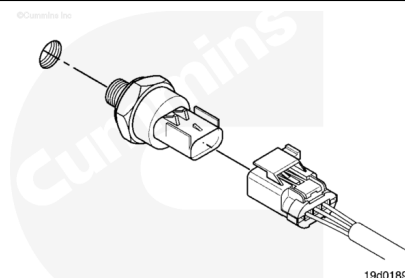

Install

Verify the new sensor has an o-ring.

Lubricate the o-ring with clean engine oil.


Install the sensor into the engine. Tighten the sensor.

Use a deep well socket, being careful **not** to overtighten the sensor.

Torque Value: 13 n•m [115 in-lb]


Push the connectors together until they lock.

Slide the locking tab to the lock position.

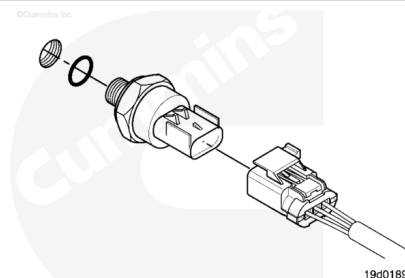

Install the two sensor shields on Exhaust Gas Recirculation (EGR) cooler if removed.

Torque Value: 24 n•m [212 in-lb]

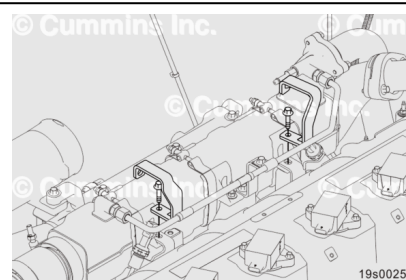

Finishing Steps

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. See equipment manufacturer service information.
- Use the recommended Cummins® electronic service tool, or equivalent, to reset the fuel tables if the exhaust gas pressure sensor is replaced. Refer to Procedure 005-263 in Section 5. (</qs3/pubsys2/xml/en/procedures/1016/1016-005-263.html>)
- Operate the engine. Check for proper operation.