

Trainings ▾


Remove

All Applications Except Rail

Loosen the hose clamp at the breather vent tube.

Remove the support bracket capscrew and the bracket.

Remove rocker lever cover. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/18/18-003-011-tr.html>).

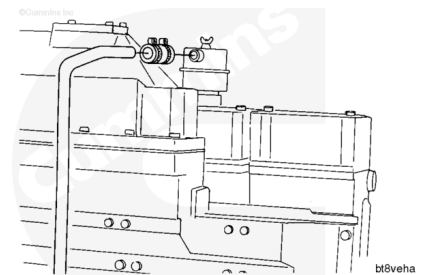


Rail Applications

Loosen the hose clamp and remove the crankcase breather hose from the breather canister.

Loosen the tube clamp between the breather canister and the hand hole cover.

Remove the breather canister from the hand hole cover.

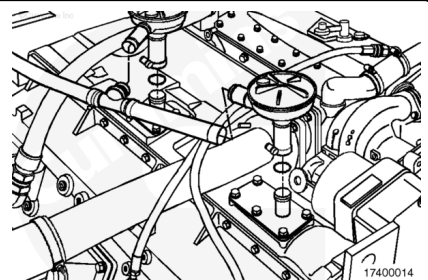


Disassemble

All Applications Except Rail

Remove the listed parts from the breather body (6):


1. Wing nut
2. Washer
3. Breather cap
4. Screen mesh
5. Element
6. Breather body

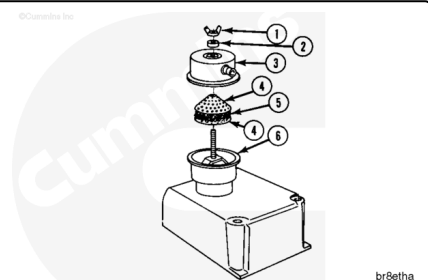

Note : No disassembly needed for plastic breather.

Remove the push nuts.

Remove the baffle.

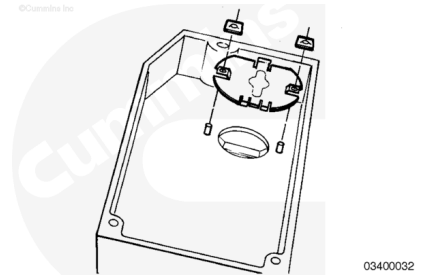


⚠ CAUTION ⚠

The mandrel must make contact on the breather body to prevent damage.

Use a water pump bearing separator, Part Number 3375326, or equivalent.

Support the cover as close as possible to the breather to prevent cracking of the cover.

Push the breather out.

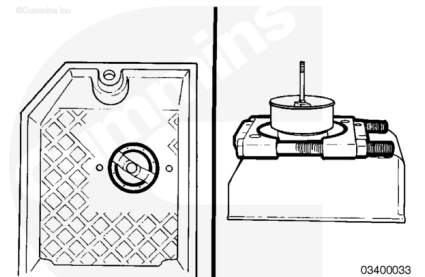


Clean and Inspect for Reuse

All Applications Except Rail

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

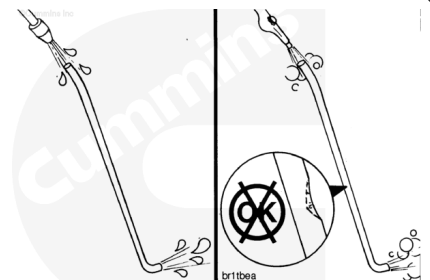

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying dirt and debris can cause personal injury.

Clean the inside of the crankcase tube with solvent and dry with compressed air.


Blow through the vent tube with compressed air.

Replace the vent tube with compressed air.

If the vent tube is clogged or dented it **must** be replaced.

⚠ WARNING ⚠


When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

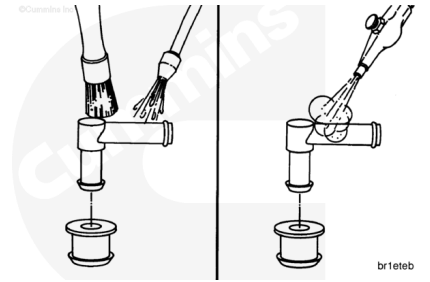

Clean the breather tube with solvent.

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

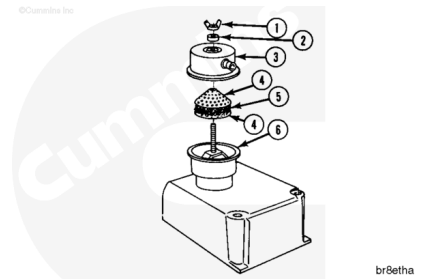

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying dirt and debris can cause personal injury.

Clean the breather cap element and screens in an approved cleaning solvent.

Dry with compressed air.

Wipe out the breather housing (6).

Clean the listed parts.


- (4) Screen mesh
- (5) Element
- (3) Breather cap
- (2) Washer
- (1) Wing nut.

Note : No cleaning needed for plastic breather.

Rail Applications

Check the hose internally for obstructions or sludge build up.


If the hose is blocked, clean it to prevent excess crankcase pressure buildup.

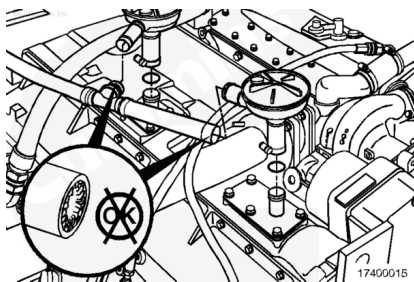

Assemble


All Applications Except Rail

Apply Loctite 732, or equivalent to the outside diameter of the breather.

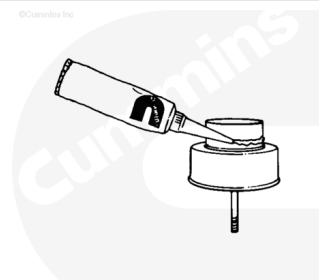


Rail Applications

Check the hose internally for obstructions or sludge build up.
If the hose is blocked, clean it to prevent excess crankcase pressure buildup.

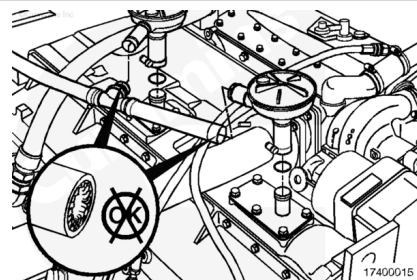

Note : Plastic breather uses RTV Boss 315 in groove (1).

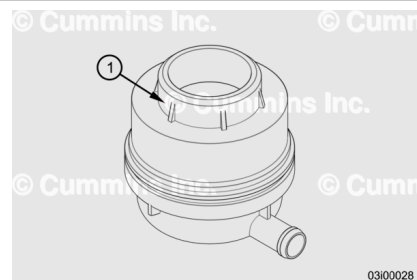


⚠ CAUTION ⚠


**Do not use excessive force on the aluminum cover (1).
Excessive force to the aluminum cover will cause it to crack.**

Use a mandrel to install the breather.

The mandrel **must** contact the breather body (2) in the area illustrated in the graphic.

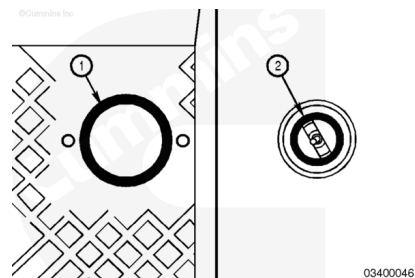


Install the baffle and new push nuts.

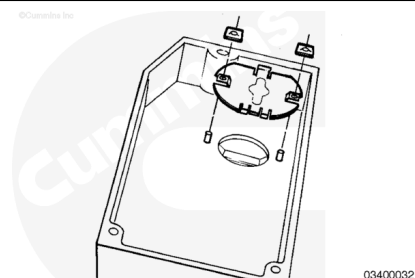

Install the parts in the following order:

- (4) Screen mesh
- (5) Element
- (4) Screen mesh
- (3) Breather cap
- (2) Washer
- (1) Wing nut.

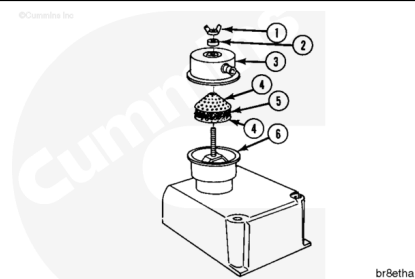

If a breather is **not** used install a service plug and o-ring.

Tighten the service plug.

Torque Value: 45 n•m [33 ft-lb]

Install


All Applications Except Rail

Install the rocker lever cover. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/18/18-003-011-tr.html>).

Install the tube and hose.

Install the tube support bracket and capscrew.

Tighten the hose clamp at the breather tube.

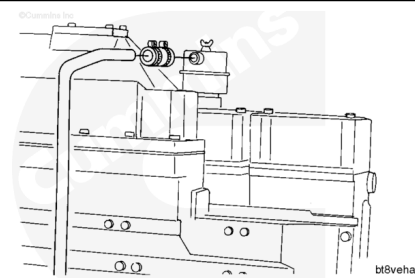

Rail Applications

Install the o-ring and breather canister on the hand hole cover.

Tighten the tube clamp.

Install the crankcase breather hose on the breather canister.

Tighten the hose clamp.

