


Trainings ▾

Remove

Remove the hose clamps that attach the blowby pressure sensor to the engine.

Lift up on the locking tab and pull the electrical connectors apart.

Remove the sensor.

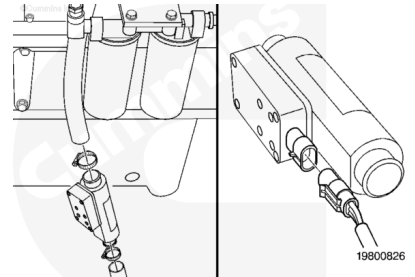

Install

Install the sensor on the engine. Install and tighten the hose clamps.

Push the connectors together until they lock.

